

Hamilton Beach 62682G

Hamilton Beach 6-Speed Electric Hand Mixer Instruction Manual

Model: 62682G

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse cord, plugs, or mixer body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The Hamilton Beach 6-Speed Electric Hand Mixer is designed for efficient mixing, whisking, and folding. It features a powerful 250-watt peak-power motor and comes with essential attachments for various culinary tasks.



Figure 1: Hamilton Beach 6-Speed Electric Hand Mixer with traditional beaters, whisk, and snap-on storage case.

Components:

- **Hand Mixer Unit:** The main body housing the motor, speed controls, and attachment ports.
- **Traditional Beaters (2):** Ideal for mixing batters, doughs, and heavier ingredients.
- **Whisk (1):** Perfect for whipping cream, egg whites, and light batters.
- **Snap-On Storage Case:** A convenient case designed to store the beaters, whisk, and power cord, attaching directly to the mixer for compact storage.

3. SETUP

Attaching Beaters/Whisk:

1. Ensure the mixer is unplugged from the electrical outlet.
2. Insert the desired attachments (beaters or whisk) into the openings on the underside of the mixer. Push firmly until they click into place. The traditional beaters are interchangeable.

Everything you need to start mixing

Includes 2 traditional beaters and whisk



Figure 2: The two traditional beaters and the whisk attachment.

Power Connection:

Plug the mixer's power cord into a standard electrical outlet. The mixer is now ready for operation.

4. OPERATING INSTRUCTIONS

Speed Control:

The mixer features 6 speed settings, controlled by a sliding switch on the top of the unit. Start at a lower speed (1 or 2) for folding ingredients or creaming butter, and gradually increase for mixing, whipping, or kneading.

6 speeds plus QuickBurst™

For extra power at every speed



SPEEDS 1 & 2
FOLD INGREDIENTS & CREAM BUTTER



SPEEDS 3 & 4 – MIX



SPEEDS 5 & 6 – WHIP & KNEAD

Figure 3: The 6-speed control and QuickBurst feature for varying mixing needs.

QuickBurst Function:

For an extra burst of power at any speed, press and hold the QuickBurst button. Release the button to return to the selected speed.

Bowl Rest Feature:

The mixer is designed with a Bowl Rest feature, allowing you to temporarily rest the mixer on the edge of your mixing bowl. This helps prevent drips on your countertop and keeps the mixer stable.



More stability, less tipping

Bowl Rest™ feature prevents messy drips on your countertop

Figure 4: The Bowl Rest feature provides stability and reduces mess during pauses in mixing.

Ejecting Attachments:

After mixing, ensure the speed dial is set to '0' (off) and the mixer is unplugged. Press the eject button located near the speed dial to release the attachments. This allows for easy removal without directly touching the soiled beaters or whisk.



Powerful mixing performance

With 250 watt peak-power motor

Figure 5: The 250-watt peak-power motor provides powerful mixing performance for various ingredients.

5. MAINTENANCE AND CLEANING

Cleaning Attachments:

The traditional beaters and whisk are dishwasher safe. For best results, place them on the top rack of your dishwasher.

Cleaning Mixer Unit:

Wipe the mixer body with a damp cloth. Do not immerse the mixer body, cord, or plug in water or any other liquid.

6. STORAGE

The hand mixer comes with a convenient snap-on storage case. This case is designed to hold both traditional beaters, the whisk, and the power cord, keeping all accessories organized and easily accessible. The case snaps securely onto the bottom of the mixer unit.



Figure 6: The snap-on storage case keeps all attachments and the cord neatly organized with the mixer.

7. TROUBLESHOOTING

Mixer Does Not Turn On:

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check that the speed dial is set to a speed other than '0'.

Attachments Do Not Stay In:

- Ensure attachments are fully inserted and clicked into place.
- Verify that the correct attachments are being used for the corresponding ports.

Motor Overheats:

- If the motor feels hot or emits a burning smell, immediately turn off and unplug the mixer.
- Allow the mixer to cool down completely before resuming use. Avoid overworking the motor with excessively thick mixtures.

8. SPECIFICATIONS

Feature	Detail
Brand	Hamilton Beach
Model Number	62682G
Power	250 Watts (Peak)
Speed Settings	6 Speeds + QuickBurst
Color	White
Product Dimensions	5.7"D x 8.3"W x 9.2"H
Item Weight	2.86 pounds
Attachments Included	2 Traditional Beaters, 1 Whisk
Dishwasher Safe Attachments	Yes
Special Features	Snap-On Storage Case, Bowl Rest

Hamilton Beach



6 Speed Hand Mixer With Snap-On Storage Case

Figure 7: Product dimensions for the hand mixer.

9. WARRANTY AND SUPPORT

This Hamilton Beach product is backed by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For customer support, service, or to inquire about replacement parts, please visit the official Hamilton Beach website or contact their customer service department.

For more information, visit the [Hamilton Beach Store](#).