

[Manuals.plus](#) /

› [Poulan](#) /

› Poulan Pro 952711625 7.5-Inch Replacement Edger Blade Instruction Manual

Poulan 952711625

Poulan Pro 952711625 7.5-Inch Replacement Edger Blade Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use, installation, and maintenance of your Poulan Pro 952711625 7.5-Inch Replacement Edger Blade. This blade is designed for use with Poulan Pro PP1000E and PPB1000E, Snapper SNE31, and Weed Eater 1000E edger attachments.

SAFETY INFORMATION

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and sturdy footwear, when handling or replacing edger blades.
- Ensure the edger's engine is turned off and spark plug wire is disconnected (for gas models) or the power cord is unplugged (for electric models) before performing any maintenance or blade replacement.
- Handle blades with extreme care. They are sharp and can cause severe injury.
- Inspect the blade and edger for damage before each use. Replace damaged blades immediately.
- Keep hands and feet clear of the blade area during operation and maintenance.

PRODUCT OVERVIEW

The Poulan Pro 952711625 is a durable 7.5-inch replacement blade for various edger attachments. It features a standard 1-inch center hole for compatibility and is constructed for effective edging performance.

 
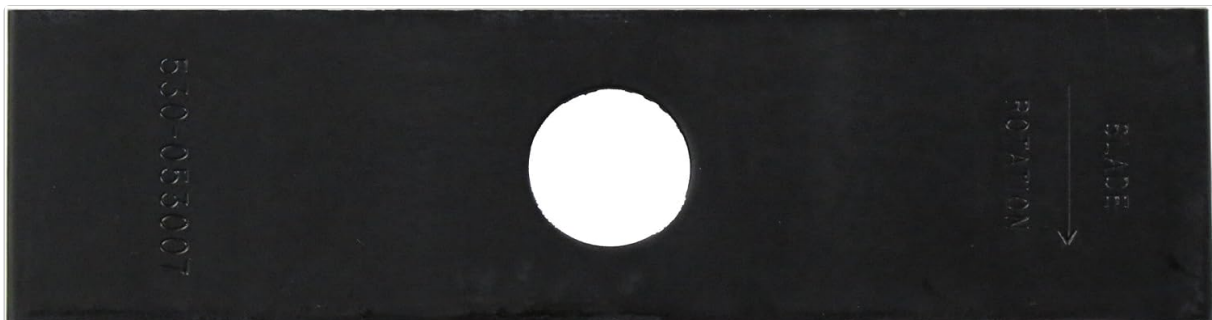 


Image: Poulan Pro 7.5-inch replacement edger blade, featuring a black finish and a central circular mounting hole.

**Poulan
PRO[®]**

**EDGER
BLADE**

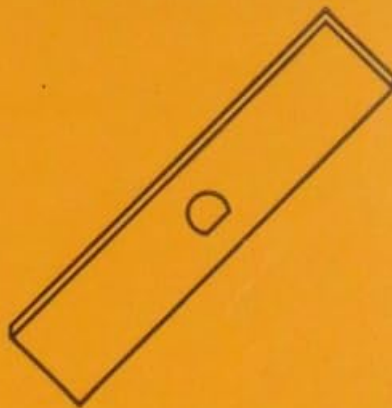

7.5"

Lames d'égaleur
Cuchillas de orillador

***FITS Poulan Pro[®] PP1000E, PPB1000E,
also fits Snapper[®] SNE31
and Weed Eater[®] 1000E***

SKU# 952-711625



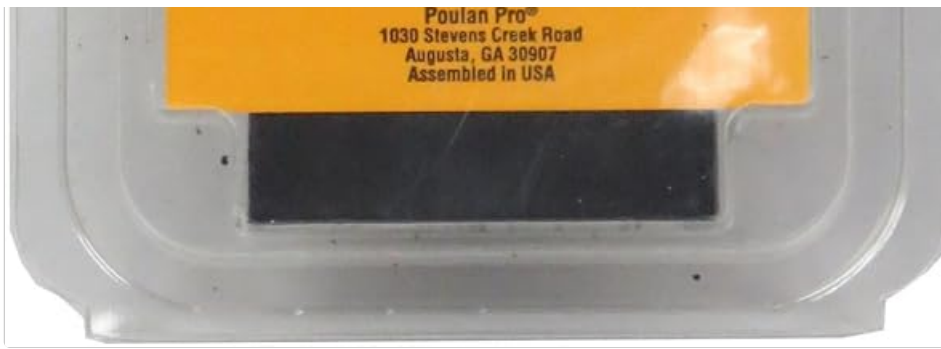 


Image: Retail packaging for the Poulan Pro 7.5-inch edger blade, showing compatibility information and SKU 952-711625.

INSTALLATION AND BLADE REPLACEMENT

Follow these steps to safely replace your edger blade:

1. **Prepare the Edger:** Ensure the edger is turned off and secured. Disconnect the spark plug wire or unplug the power cord to prevent accidental starting.
2. **Locate the Locking Hole:** Identify the small hole on the edger's gear housing, typically near the blade. This hole is used to insert a pin or small screwdriver to prevent the blade from rotating during removal.
3. **Insert Locking Pin:** Rotate the blade until the locking hole on the gear housing aligns with a corresponding hole or slot on the blade assembly. Insert a small screwdriver or a suitable pin into this hole to lock the blade in place.
4. **Remove the Old Blade:** Use an appropriate size socket or wrench to loosen the bolt securing the blade. **Important:** Many edger blades use a reverse thread. To loosen the bolt, you will need to turn it **clockwise**. Carefully remove the bolt, washer, and the old blade. Note the orientation of all components for reassembly.
5. **Inspect Components:** Check the guide and other components for wear or damage. Replace any worn parts.
6. **Install the New Blade:** Place the new Poulan Pro 7.5-inch replacement blade onto the shaft, ensuring it sits correctly in the beveled spot. The 1-inch hole in the blade should align with the shaft.
7. **Reattach the Bolt:** Place the washer and then the bolt back onto the shaft. To tighten the bolt, you will need to turn it **counter-clockwise** (due to the reverse thread). Use the socket or wrench to securely tighten the bolt while keeping the locking pin in place.
8. **Final Check:** Remove the locking pin. Manually rotate the blade to ensure it spins freely and is securely attached. Reconnect the spark plug wire or plug in the power cord.

OPERATING INSTRUCTIONS

Refer to your edger attachment's primary instruction manual for detailed operating procedures. Ensure the blade is properly installed and secured before starting the edger. Maintain a safe distance from the blade during operation and always wear appropriate safety gear.

MAINTENANCE

- **Cleaning:** After each use, clean grass clippings and debris from the blade and edger head. This prevents buildup that can affect performance and cause corrosion.
- **Sharpening:** Regularly inspect the blade for dullness or nicks. A dull blade can tear grass and strain the edger. Sharpen the blade as needed, maintaining the original angle. If unsure, consult a professional or replace the blade.

- **Storage:** Store replacement blades in a dry place to prevent rust. When storing the edger for extended periods, ensure the blade is clean and lightly oiled to protect it.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blade not cutting effectively	Dull or damaged blade; incorrect blade installation.	Sharpen or replace blade; ensure blade is installed correctly and securely tightened.
Excessive vibration during operation	Bent or unbalanced blade; loose blade bolt.	Inspect blade for damage and replace if bent; ensure blade bolt is tightened to specifications.
Blade wears out quickly	Frequent contact with hard surfaces (concrete, rocks); improper use.	Avoid contact with hard surfaces; ensure proper edging technique.

SPECIFICATIONS

- **Product Dimensions:** 4 x 6 x 3 inches
- **Item Weight:** 5.6 ounces
- **Manufacturer:** Husqvarna/Poulan/Weed Eater
- **Item Model Number:** 951711625
- **Blade Length:** 7.5 inches
- **Center Hole Diameter:** 1 inch (standard)
- **Compatibility:** Poulan Pro PP1000E, PPB1000E; Snapper SNE31; Weed Eater 1000E edgers

WARRANTY AND SUPPORT

Specific warranty information for this replacement blade is not provided in the product details. For warranty claims or technical support, please contact Poulan customer service or refer to the documentation included with your original edger attachment.