

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Paramount](#) /

› [The 4400: The Complete Series DVD Instruction Manual](#)

Paramount B001CQONMC

The 4400: The Complete Series DVD Instruction Manual

This document provides essential information for the proper setup, operation, and care of your *The 4400: The Complete Series* DVD set. Please read these instructions carefully before use.

PRODUCT OVERVIEW

The 4400: The Complete Series DVD set contains all four seasons of the acclaimed science fiction television series. This collection allows you to experience the full narrative arc of the 4400 returnees and their impact on humanity.

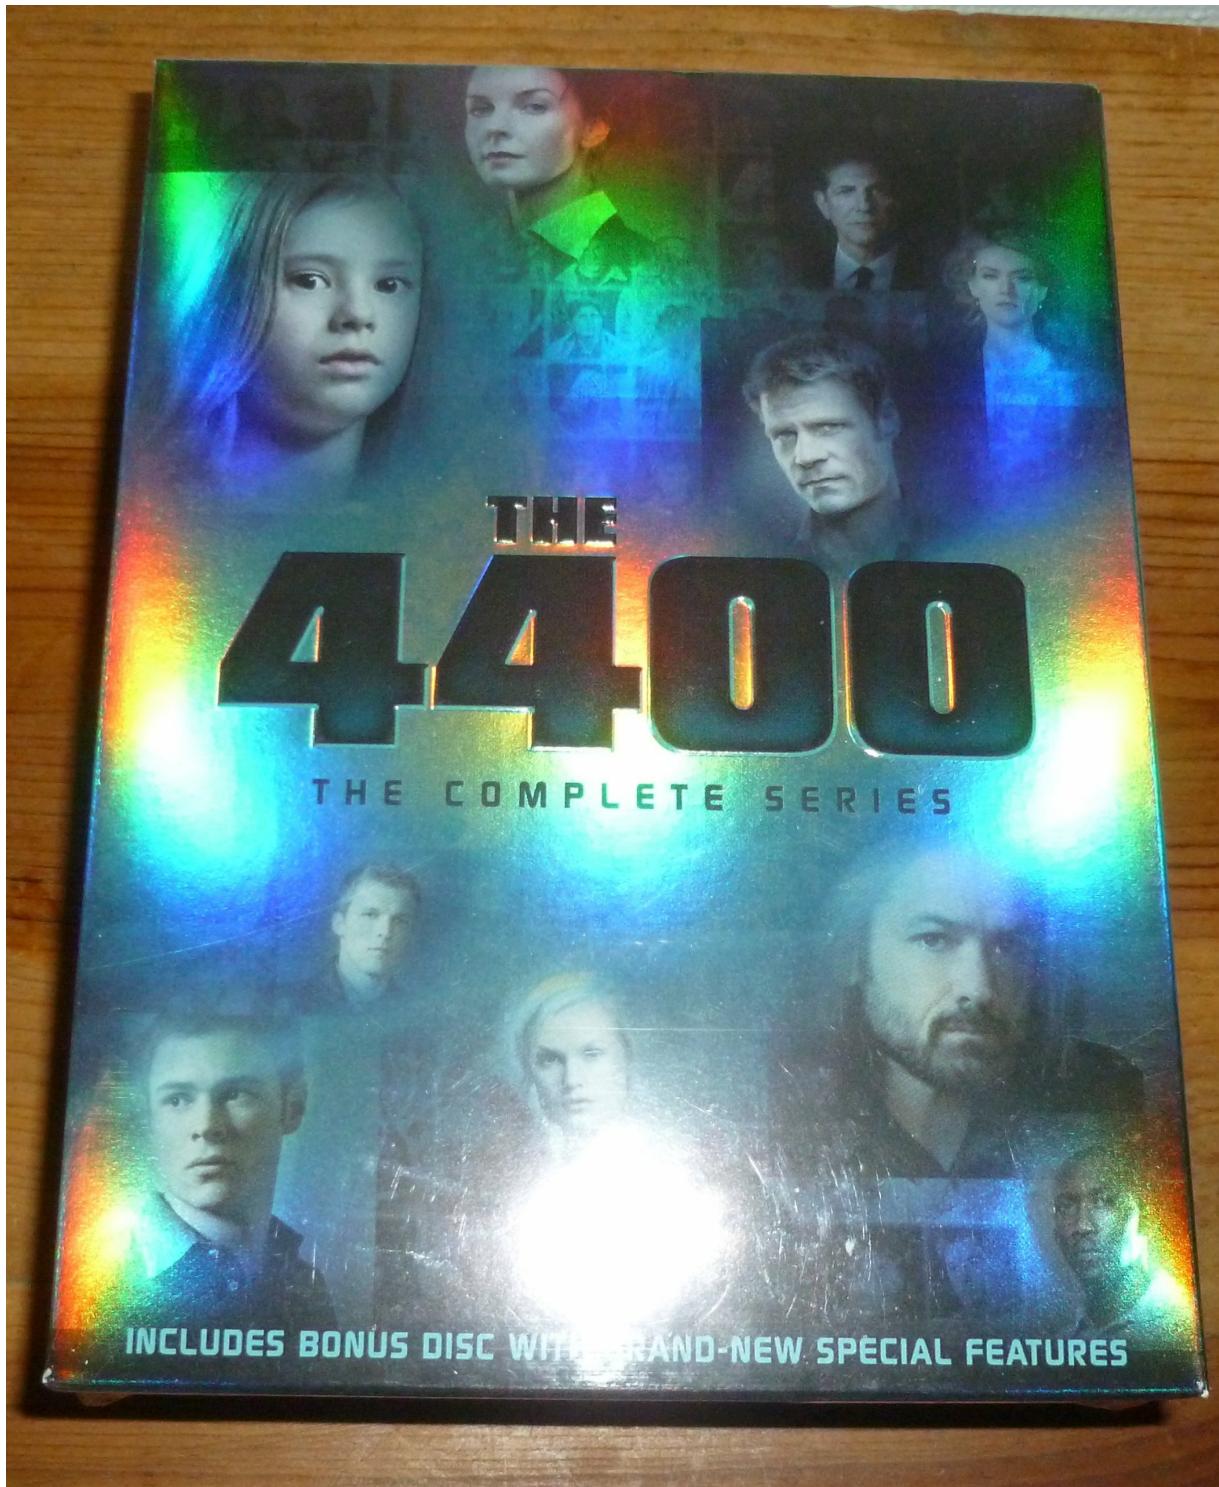


Image: The 4400: The Complete Series DVD box set, featuring key cast members and the series logo. This image illustrates the product packaging.

SETUP

Unpacking the DVD Set

- Carefully remove the DVD box set from its packaging.
- Inspect all discs for any visible damage.

System Requirements

- Standard DVD player or computer with DVD-ROM drive.
- Television or monitor compatible with your DVD player.

- Audio system for optimal sound experience.

OPERATING INSTRUCTIONS

Playing a Disc

1. Open the disc tray of your DVD player or computer drive.
2. Gently place the desired disc, label side up, into the tray.
3. Close the disc tray. The disc should begin playing automatically or display a main menu.

Navigating Menus

- Use your DVD player's remote control (or computer mouse/keyboard) to select options from the on-screen menus.
- Typically, you can select "Play All" to watch episodes consecutively or choose individual episodes.
- Access "Scene Selection" to jump to specific parts of an episode.
- Select "Special Features" to view bonus content, if available on the disc.

Language and Subtitle Options

- During playback, press the "Audio" or "Language" button on your remote to change audio tracks (e.g., English Dolby Digital 5.1, English Stereo).
- Press the "Subtitle" or "CC" button to enable or disable closed captions or subtitles (e.g., English).

MAINTENANCE AND CARE

Disc Handling

- Always hold discs by their edges to avoid fingerprints on the playing surface.
- If a disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive cleaners or solvents.
- Avoid bending or scratching the discs.

Storage

- Store discs in their original cases to protect them from dust, scratches, and direct sunlight.
- Keep the DVD set in a cool, dry place, away from extreme temperatures and humidity.

TROUBLESHOOTING

Problem	Solution
Disc does not play or skips.	Ensure the disc is clean and free of scratches. Try playing another disc to confirm the DVD player is functioning correctly.
No sound or distorted audio.	Check audio cable connections to your TV/audio system. Verify the correct audio track is selected in the DVD menu or via your remote.
No picture or distorted video.	Check video cable connections. Ensure your TV input is set to the correct source (e.g., HDMI 1, AV).

Problem	Solution
Remote control not working.	Check batteries in the remote. Ensure there are no obstructions between the remote and the DVD player.

SPECIFICATIONS

Product Details

- Format:** DVD, Closed-captioned, Color, Multiple Formats, NTSC, Widescreen
- Number of Discs:** 15
- Run Time:** Approximately 32 hours and 18 minutes
- Language:** English (Dolby Digital 5.1, Stereo)
- Release Date:** October 28, 2008
- Studio:** Paramount
- Item Model Number:** 6098890859
- Product Dimensions:** 2.4 x 5.7 x 7.6 inches; 1.25 Pounds

WARRANTY AND SUPPORT

For any issues not covered in this manual, please refer to the manufacturer's official support channels. Specific warranty information may be included with your purchase documentation or available on the Paramount Pictures official website. Keep your proof of purchase for warranty claims.