

Nokia 02706D2

Nokia HF-200 Bluetooth Speakerphone User Manual

Model: 02706D2

1. INTRODUCTION

The Nokia HF-200 is a versatile Bluetooth speakerphone designed for hands-free communication in your car, office, or home. Its plug-and-play functionality, combined with echo canceling and noise reduction technology, ensures clear audio quality for both you and the person you are speaking with. This manual provides detailed instructions for setting up, operating, and maintaining your device.

2. IMPORTANT SAFETY INFORMATION

- Always drive safely and obey all traffic laws. Using a mobile device while driving can be distracting.
- Do not expose the device to extreme temperatures, moisture, or corrosive substances.
- Keep the device away from children and pets.
- Use only approved chargers and accessories. Unauthorized accessories may damage the device or cause safety hazards.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Nokia HF-200 Bluetooth Speakerphone
- Car Charger (may vary by region)
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Nokia HF-200 speakerphone.



Figure 1: Front view of the Nokia HF-200 Bluetooth Speakerphone. This image displays the device's compact design, featuring a prominent speaker grille, control buttons for call management and volume adjustment, and the Nokia branding. The black finish is visible.

The speakerphone features an intuitive interface with optimally placed keys for easy operation. It includes a powerful speaker and a sensitive microphone for clear communication.

5. SETUP

5.1. Charging the Battery

Before using your Nokia HF-200 for the first time, ensure it is fully charged.

1. Connect the car charger or compatible USB charger to the charging port on the speakerphone.
2. Plug the charger into a power source (e.g., car's cigarette lighter socket or a wall outlet).
3. The charging indicator light will illuminate.
4. Once fully charged, the indicator light may change color or turn off. Disconnect the charger.

5.2. Pairing with a Bluetooth Device

To use the speakerphone, you must first pair it with your Bluetooth-enabled mobile phone.

1. Ensure the speakerphone is charged and turned off.
2. Press and hold the Power button until the indicator light begins to flash rapidly (usually blue and red), indicating it is in pairing mode.
3. On your mobile phone, enable Bluetooth and search for new devices.
4. Select "Nokia HF-200" from the list of found devices.
5. If prompted for a passcode, enter "0000" (four zeros).
6. Once paired, the indicator light on the speakerphone will typically flash slowly or turn solid blue.
7. The speakerphone is now ready for use.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- **To Power On:** Press and hold the Power button until the indicator light illuminates.
- **To Power Off:** Press and hold the Power button until the indicator light turns off. The device also features an automatic power off function to conserve battery.

6.2. Making and Receiving Calls

- **Making a Call:** Dial the number on your mobile phone. The call will automatically transfer to the speakerphone.
- **Answering a Call:** When a call comes in, press the Call button on the speakerphone.
- **Ending a Call:** Press the Call button to end an active call.
- **Redialing:** Double-press the Call button to redial the last number.

6.3. Adjusting Volume

Use the Volume Up (+) and Volume Down (-) buttons on the speakerphone to adjust the call volume to a comfortable level.

7. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speakerphone in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly.

8. TROUBLESHOOTING

| Problem | Possible Solution |
|--------------------------------------|--|
| Device does not power on. | Ensure the battery is charged. Connect the charger and try again. |
| Cannot pair with phone. | Ensure the speakerphone is in pairing mode (flashing indicator light). Make sure Bluetooth is enabled on your phone and it is discoverable. Try restarting both devices. |
| No audio during calls. | Check the volume level on both the speakerphone and your mobile phone. Ensure the speakerphone is properly connected to your phone. |
| Poor audio quality (echo/noise). | Ensure the speakerphone is placed in an optimal position, away from obstructions. The device features echo canceling and noise reduction, but extreme environments may still affect quality. |
| Speakerphone disconnects frequently. | Ensure your phone is within the Bluetooth range (typically 10 meters or 33 feet) of the speakerphone. Avoid physical obstructions between the devices. |

9. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|---|
| Model Number | 02706D2 |
| Connectivity Technology | Bluetooth |
| Wireless Communication | Bluetooth |
| Special Features | Echo cancellation, Noise reduction, Microphone, Speakerphone, Automatic power off |
| Compatible Devices | Mobile Phones |
| Mounting Type | Tabletop, Car Sun Visor (clip not explicitly listed but implied by use case) |
| Product Dimensions (L x W x H) | 2 x 6 x 9.25 inches |
| Item Weight | 5.1 ounces |
| Color | Black |
| UPC | 758478015759 |
| Manufacturer | Nokia |

10. WARRANTY AND SUPPORT

Nokia products are designed to provide reliable performance. This product is covered by a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or further information, please visit the official Nokia support website or contact your

local Nokia customer service. Keep your proof of purchase for warranty claims.

Note: Warranty terms may vary by region.