

Bosch 484787

Bosch Thermador Convection Oven Heater Element 484787 Instruction Manual

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Bosch Thermador Convection Oven Heater Element, model 484787. Please read these instructions carefully before proceeding with installation or any maintenance to ensure safe and correct usage.

PRODUCT OVERVIEW

The Bosch Thermador Heater Element 484787 is a genuine replacement part designed for convection ovens. It is responsible for generating heat within the oven cavity, ensuring proper cooking and baking performance.



Image: Bosch Thermador Convection Oven Heater Element 484787. This image displays the circular heating element with two terminal posts extending upwards from a metal base. The element is secured by several metal clips.

Compatible Models

This heater element is compatible with various Bosch and Thermador stove, oven, and range models, including but not limited to:

- Bosch C301U
- Bosch CJ302UB
- Bosch CJ302US
- Bosch CJ302UW
- Bosch CJ302ZS
- Bosch CM302B
- Bosch SC272T
- Bosch SCD272T
- Bosch SCD302T
- Bosch SM272B

SETUP AND INSTALLATION

WARNING: Disconnect power to the appliance before attempting any installation or repair. Failure to do so may result in electrical shock, personal injury, or death. Installation should only be performed by a qualified technician.

1. Ensure the oven is completely cool and disconnected from the main electrical power supply.
2. Locate the existing heater element within the oven cavity.
3. Carefully remove any screws or fasteners securing the old element.
4. Disconnect the electrical terminals from the old element, making note of their original positions for correct re-connection.
5. Remove the old element from the oven.
6. Install the new Bosch Thermador Heater Element 484787, ensuring the terminals are correctly connected and all fasteners are securely tightened.
7. Restore power to the appliance and test for proper operation.

OPERATING INSTRUCTIONS

The Bosch Thermador Heater Element 484787 is an internal component of your oven. Its operation is controlled by the oven's main control system. Refer to your specific oven model's user manual for detailed operating instructions, including temperature settings, cooking modes, and preheating procedures.

MAINTENANCE

To ensure the longevity and efficient performance of your heater element and oven:

- Regularly clean the oven interior according to your oven's cleaning instructions.
- Avoid using abrasive cleaners or sharp objects near the heating elements, as this can cause damage.
- Inspect the element periodically for any visible damage or signs of wear, such as breaks, blisters, or burnt spots. If damage is observed, replace the element promptly.

TROUBLESHOOTING

If your oven is not heating correctly, or if you suspect an issue with the heater element, consider the following:

- **Oven Not Heating:** If the oven does not heat at all, or heats unevenly, the heater element may be faulty and require replacement.
- **Visible Damage:** Look for breaks, blisters, or burnt spots on the element. A visibly damaged element indicates a need for replacement.
- **Tripped Breaker:** A shorted element can cause the household circuit breaker connected to the oven to trip.

CAUTION: Troubleshooting and repair of electrical appliances should only be performed by qualified individuals. Always disconnect power before any inspection or repair.

SPECIFICATIONS

Feature	Detail
Brand	Bosch

Part Number	484787
Model Number	484787
Installation Type	Freestanding (refers to the compatible oven type)
Drawer Type Compatibility	Baking, Broiler
Control Console Compatibility	Knob (refers to the compatible oven's control type)
Package Dimensions	6 x 6 x 4 inches

WARRANTY AND SUPPORT

For warranty information regarding the Bosch Thermador Heater Element 484787, please refer to the documentation provided with your original appliance or contact Bosch customer support directly. This manual pertains to the replacement part itself.

For technical support or further assistance, please visit the official Bosch website or consult a certified appliance technician.