

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux EWF2CBPA PureAdvantage Refrigerator Water Filter Instruction Manual

Electrolux EWF2CBPA

Electrolux EWF2CBPA PureAdvantage Refrigerator Water Filter Instruction Manual

Model: EWF2CBPA

INTRODUCTION

The Electrolux EWF2CBPA PureAdvantage Refrigerator Water Filter is a cassette-style filter designed for use in most Electrolux Icon side-by-side refrigerators. This filter is engineered to reduce particulates, herbicides, and other contaminants, while also eliminating odors and unpleasant tastes from your water supply. It is certified by NSF/ANSI Standards 42 and 53 for performance.

For optimal performance and water quality, it is recommended to replace the filter approximately every 6 months. Always refer to your refrigerator's specific use and care guide for detailed instructions pertaining to your appliance model.



Image: The Electrolux EWF2CBPA PureAdvantage Refrigerator Water Filter unit.

SETUP INSTRUCTIONS

The EWF2CBPA filter is designed for refrigerators featuring a slide-out filter cartridge located in the front of the refrigerator compartment. Installation is a simple slide and click process.

Installation Steps:

1. **Locate the Filter Compartment:** Identify the filter housing, typically a slide-out cartridge in the front of your refrigerator compartment.
2. **Turn Off Ice Maker:** Before removing the old filter, turn off the automatic ice maker in your refrigerator. This prevents ice production during the filter change process.
3. **Remove Old Filter:** Carefully slide out and remove the old water filter cartridge. Some residual water may drip, so have a towel ready.
4. **Insert New Filter:** Align the new Electrolux EWF2CBPA filter with the housing and slide it in until it clicks securely into place. Ensure a snug fit to prevent leaks.
5. **Flush the System:** After installation, run water through the refrigerator's dispenser for at least 3 minutes, or dispense 2 to 4 gallons of water. This flushes out air from the system and any loose carbon particles from the new filter. It is normal for the initial dispensed water to appear cloudy or contain black specks.

6. **Reactivate Ice Maker:** Once the water runs clear, turn the automatic ice maker back on. Discard the first few batches of ice to ensure any remaining air or carbon is cleared.

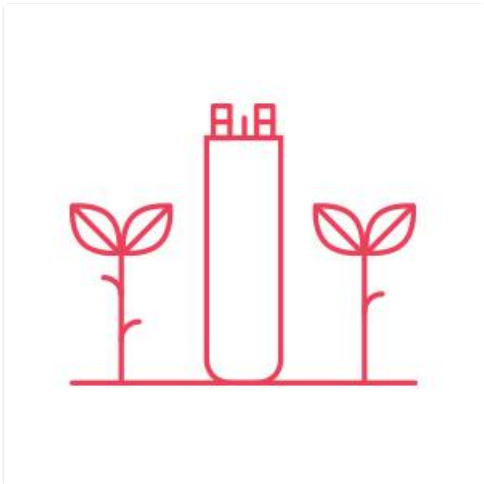


Image: A close-up view of the Electrolux EWF2CBPA filter, showing its connection points.

OPERATING INSTRUCTIONS

Once installed, the Electrolux EWF2CBPA filter operates automatically to provide filtered water and ice. The filter works by passing water through its carbon filter media, which reduces impurities. The typical flow rate for filtered water is approximately half a gallon per minute.

No user intervention is required during normal operation. The refrigerator's water dispenser and ice maker will draw water through the filter as needed.

MAINTENANCE

Regular replacement of your water filter is crucial for maintaining water quality and appliance performance.

Filter Replacement Schedule:

- Replace the Electrolux EWF2CBPA water filter every **6 months** under normal usage conditions.
- If your refrigerator has a filter indicator light, replace the filter when the light illuminates, or sooner if water flow noticeably decreases or water quality declines.

Important Considerations During Replacement:

- Always turn off the automatic ice maker before changing the filter to prevent carbon particulate from entering the ice supply.
- After installing a new filter and flushing the system, if blackish colored filter residue (carbon particulate) appears in your ice, it is normal. Simply discard the ice for a couple of days or until the ice comes out clear again.

TROUBLESHOOTING

This section addresses common issues you might encounter with your water filter.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Water is cloudy after filter replacement	Air bubbles in the water line from new filter installation.	This is normal. Dispense several glasses of water. If cloudiness persists, let a glass of water stand for a minute; it should clear as air dissipates.
Black specks in dispensed water or ice	Carbon particulate from the new filter.	This is normal. Flush the system by dispensing 2-4 gallons of water. If specks appear in ice, discard ice for a few days until clear. Ensure ice maker was off during filter change.
Reduced water flow from dispenser	Clogged filter or air in the system.	If the filter is old, replace it. If new, ensure it is installed correctly and flush the system thoroughly to remove air.
Water leaks from filter area	Filter not seated correctly or incompatible filter.	Remove and re-install the filter, ensuring it clicks securely into place. Verify you are using the correct Electrolux EWF2CBPA model.

SPECIFICATIONS

Key technical details for the Electrolux EWF2CBPA PureAdvantage Refrigerator Water Filter:

Feature	Detail
Model Number	EWF2CBPA
Material	Carbon Filter Media
Product Dimensions (D x W x H)	2.25" x 5.25" x 7"
Item Weight	14.4 ounces
External Testing Certification	ANSI, NSF (Standards 42 and 53)
Product Benefits	Removes Impurities, Filters lead from drinking water
Filter Lifespan	Up to 6 months
Flow Rate	Approximately 0.5 gallons per minute
UPC	012505532733



Image: NSF International certification logo, indicating compliance with safety and performance standards.

WARRANTY AND SUPPORT

For specific warranty information regarding your Electrolux EWF2CBPA PureAdvantage Refrigerator Water Filter, please refer to the documentation included with your original refrigerator purchase or visit the official Electrolux website. Warranty terms and conditions may vary.

For technical support, replacement parts, or further assistance, please contact Electrolux customer service directly or consult your refrigerator's user manual for model-specific support details. You can typically find contact information on the Electrolux official website or within your appliance's documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B001DPX594>

More documents and user manuals: <https://manuals.plus/>