

Whitmor B001DYMA3W

Whitmor 24-Pocket Over-the-Door Shoe Organizer (Pink) - Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the Whitmor 24-Pocket Over-the-Door Shoe Organizer in Pink. Designed for efficient storage, this organizer helps declutter your space by utilizing vertical door space. It is made from durable polyester material and features sturdy metal hooks for easy installation.

SETUP INSTRUCTIONS

The Whitmor Over-the-Door Shoe Organizer is designed for quick and tool-free assembly. Follow these steps to set up your organizer:

1. **Unpack the Organizer:** Carefully remove the shoe organizer and metal hooks from its packaging.
2. **Attach Hooks:** Insert the metal hooks into the designated loops at the top of the organizer. Ensure they are securely fastened.
3. **Hang on Door:** Place the metal hooks over the top edge of any standard interior door. The organizer should hang flat against the door.

Dimensions: When assembled, the organizer measures approximately 45.7 cm (18 inches) in depth, 45.7 cm (18 inches) in width, and 162.6 cm (64 inches) in height.





Image: The Whitmor 24-Pocket Over-the-Door Shoe Organizer in pink, shown hanging on a white door and filled with various pairs of shoes. This illustrates the product's primary use for shoe storage.

OPERATING INSTRUCTIONS

This organizer offers versatile storage solutions. Here's how to use it effectively:

- **Shoe Storage:** Each of the 24 pockets can hold one shoe, allowing for storage of up to 12 pairs of shoes. Place shoes heel-first into the pockets for easy access.
- **Accessory Storage:** The pockets are also suitable for storing other small items such as children's shoes, stuffed animals, small toys, craft supplies, or other accessories.
- **Weight Limit:** Do not exceed the recommended maximum load of 6.6 pounds (approximately 3 kg) for the entire organizer to ensure durability and prevent damage.





Image: The Whitmor 24-Pocket Over-the-Door Shoe Organizer in pink, shown on a white door, filled with various items such as dolls, small toys, and other accessories. This highlights the organizer's multi-purpose storage capability.

MAINTENANCE

To ensure the longevity of your Whitmor Over-the-Door Shoe Organizer, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the organizer with a damp cloth as needed to remove dust or light stains. Do not machine wash or tumble dry.
- **Avoid Overloading:** Distribute items evenly across the pockets and avoid placing excessively heavy or sharp objects that could tear the fabric.
- **Storage:** If not in use, the organizer can be folded for compact storage.

TROUBLESHOOTING

If you encounter any issues with your organizer, consider the following:

- **Organizer Not Hanging Straight:** Ensure the metal hooks are properly seated and balanced on the door. Adjust the position if necessary.
- **Pockets Tearing:** Check if any items placed in the pockets have sharp edges or if the pockets are being overloaded beyond the recommended weight limit.
- **Door Closure Issues:** If the door does not close properly, verify that the hooks are thin enough for your door frame. Most standard interior doors should accommodate the hooks.

SPECIFICATIONS

Brand	Whitmor
Model Number	B001DYMA3W

Color	Pink
Material	Polyester, Breathable Non-Woven Polypropylene Fabric
Finish Type	Metal (for hooks)
Mounting Type	Over-the-Door Hanging
Number of Compartments	24
Product Dimensions (Assembled)	45.7 cm (Depth) x 45.7 cm (Width) x 162.6 cm (Height)
Recommended Maximum Load	6.6 Pounds (approx. 3 kg)
Assembly Required	Yes (Tool-free)

WARRANTY AND SUPPORT

Whitmor stands behind its products. For replacement parts or assembly assistance, please contact Whitmor customer support.

Customer Support: 1-888-WHITMOR

Please have your product model number (B001DYMA3W) available when contacting support.