

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Hermle](#) /
- › [Hermle Pendulum Clocks 01087-030461 User Manual](#)

Hermle 01087-030461

Hermle Pendulum Clocks 01087-030461 User Manual

Model: 01087-030461 | Brand: Hermle

PRODUCT OVERVIEW

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Hermle Pendulum Clock, model 01087-030461. This grandfather clock features a walnut case with burlwood inlays and bevelled glass. It is equipped with an 8-day cable-driven 4/4 Westminster movement, including automatic night shut-off and a silencing lever.





Image: The Hermle Pendulum Clock 01087-030461, showcasing its elegant walnut finish, glass panels, and the visible pendulum and weights.

SETUP

Careful setup is crucial for the proper functioning and longevity of your pendulum clock.

Unpacking

1. Carefully remove the clock from its packaging. Retain all packaging materials for future transport or storage.
2. Inspect the clock for any visible damage. Report any damage to the retailer immediately.

3. Locate all accessories, including the winding key, pendulum, and weights.

Placement

- Place the clock on a level, stable surface in a room with consistent temperature and humidity. Avoid direct sunlight or proximity to heat sources.
- Ensure the clock is perfectly level. Use a spirit level on the top of the clock case. Adjust the leveling feet if necessary.

Pendulum and Weights Installation

1. Open the front door of the clock.
2. Carefully hang the pendulum onto its hook located at the top of the pendulum rod. Ensure it swings freely.
3. Attach the three weights to their respective chains or cables. The weights are typically of different sizes or marked for specific positions (left, center, right). Refer to any specific markings on the weights or chains.
4. Gently push the pendulum to start its swing. It should swing evenly and without obstruction.

OPERATING INSTRUCTIONS

Winding the Clock

- This clock is an 8-day cable-driven movement. It requires winding approximately once every seven days.
- Insert the winding key into the winding holes on the clock face. There are typically three winding holes for the time, strike, and chime mechanisms.
- Turn the key clockwise until the weights are fully raised to the top. Do not overwind.

Setting the Time

1. To set the time, gently move the minute hand (the longer hand) clockwise.
2. Pause at each quarter hour to allow the chime mechanism to complete its sequence. This prevents damage to the movement.
3. Once the desired time is set, ensure the pendulum is swinging.

Chime and Strike Functions

- The clock features a 4/4 Westminster chime, meaning it chimes every quarter hour and strikes the hour.
- **Automatic Night Shut-Off:** This feature automatically silences the chime and strike between approximately 10:00 PM and 7:15 AM.
- **Silencing Lever:** A lever is provided to manually silence the chime and strike at any time. Locate this lever on the clock face or side of the movement and move it to the "Silent" position.

MAINTENANCE

Regular maintenance ensures the longevity and accuracy of your Hermle clock.

- **Cleaning:** Dust the clock case regularly with a soft, dry cloth. Avoid using abrasive cleaners or polishes on the wood or glass.
- **Movement Care:** The clock movement should be professionally cleaned and oiled every 5-7 years by a qualified clockmaker. Do not attempt to lubricate the movement yourself.
- **Weight and Chain Inspection:** Periodically inspect the weights and chains for any signs of wear or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock stops or runs erratically.	Not level, pendulum obstructed, not wound, movement needs cleaning/oiling.	Ensure clock is level. Check for obstructions around pendulum. Wind the clock fully. Contact a professional clockmaker for movement service.
Chime/Strike not working.	Silencing lever engaged, not wound, automatic night shut-off active.	Check silencing lever position. Ensure clock is fully wound. Note that the automatic night shut-off will silence the clock during certain hours.
Chime/Strike out of sync with time.	Time was set incorrectly.	Allow the clock to strike the hour. Then, carefully move the minute hand clockwise to the correct time, pausing at each quarter hour for the chime to complete.

SPECIFICATIONS

Feature	Detail
Brand	Hermle
Model Number	01087-030461
Product Dimensions	20.47"W x 75.98"H
Material	Wood (Walnut finish, solid maple or alder wood)
Display Type	Analog
Movement Type	8-day cable-driven 4/4 Westminster movement
Special Features	Automatic night shut-off, Silencing lever, Moon phase display
Power Source	Powered by weights
Origin	Made in Germany
Item Weight	220462.26 Pounds (Note: This weight seems unusually high and may be a data error. Please refer to product packaging for accurate weight.)

WARRANTY INFORMATION

Your Hermle Pendulum Clock 01087-030461 comes with a **2-year product warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty type is *Limited*. For specific terms and conditions, please refer to the warranty card included with your product or contact Hermle customer support.

CUSTOMER SUPPORT

For technical assistance, service, or warranty inquiries, please contact Hermle customer support. You may find contact information on the official Hermle website or through your authorized retailer.

When contacting support, please have your model number (01087-030461) and date of purchase readily available.

© 2023 Hermle. All rights reserved.