

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER PKS160 Power Scrubber Instruction Manual

BLACK+DECKER PKS160

BLACK+DECKER PKS160 Power Scrubber Instruction Manual

Model: PKS160

INTRODUCTION

The BLACK+DECKER PKS160 Power Scrubber is designed to efficiently clean tough dirt and grime from various surfaces. Its fully submersible design allows for cleaning both above and below water, making it ideal for pots, pans, dishes, stovetops, and more. The ergonomic rubber overmolded handle ensures comfortable and slip-free control during use. This manual provides essential information for the safe and effective operation and maintenance of your power scrubber.

SAFETY INFORMATION

General Safety Precautions

- Always read and understand all instructions before using the appliance.
- Keep hands, hair, and loose clothing away from the rotating scrub pad during operation.
- Do not operate the scrubber if the battery compartment is not securely closed.
- Ensure the scrubber is turned off before changing scrub pads or performing any maintenance.
- Use only the recommended accessories and replacement parts.
- Do not attempt to disassemble or repair the scrubber yourself. Contact qualified service personnel.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Battery Safety

- Use only AA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- Insert batteries with correct polarity (+ and -) as indicated in the battery compartment.
- Remove batteries if the scrubber will not be used for an extended period.
- Dispose of used batteries properly according to local regulations.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- BLACK+DECKER PKS160 Power Scrubber
- 4 x AA Batteries
- 2 x Heavy Duty Scrub Pads

SETUP

Battery Installation

1. Locate the battery compartment cover on the handle of the power scrubber.
2. Twist or slide the cover to open the compartment.
3. Insert four (4) AA batteries, ensuring the correct polarity (+ and -) as marked inside the compartment.
4. Securely close the battery compartment cover until it clicks into place. Ensure a tight seal to maintain water resistance.



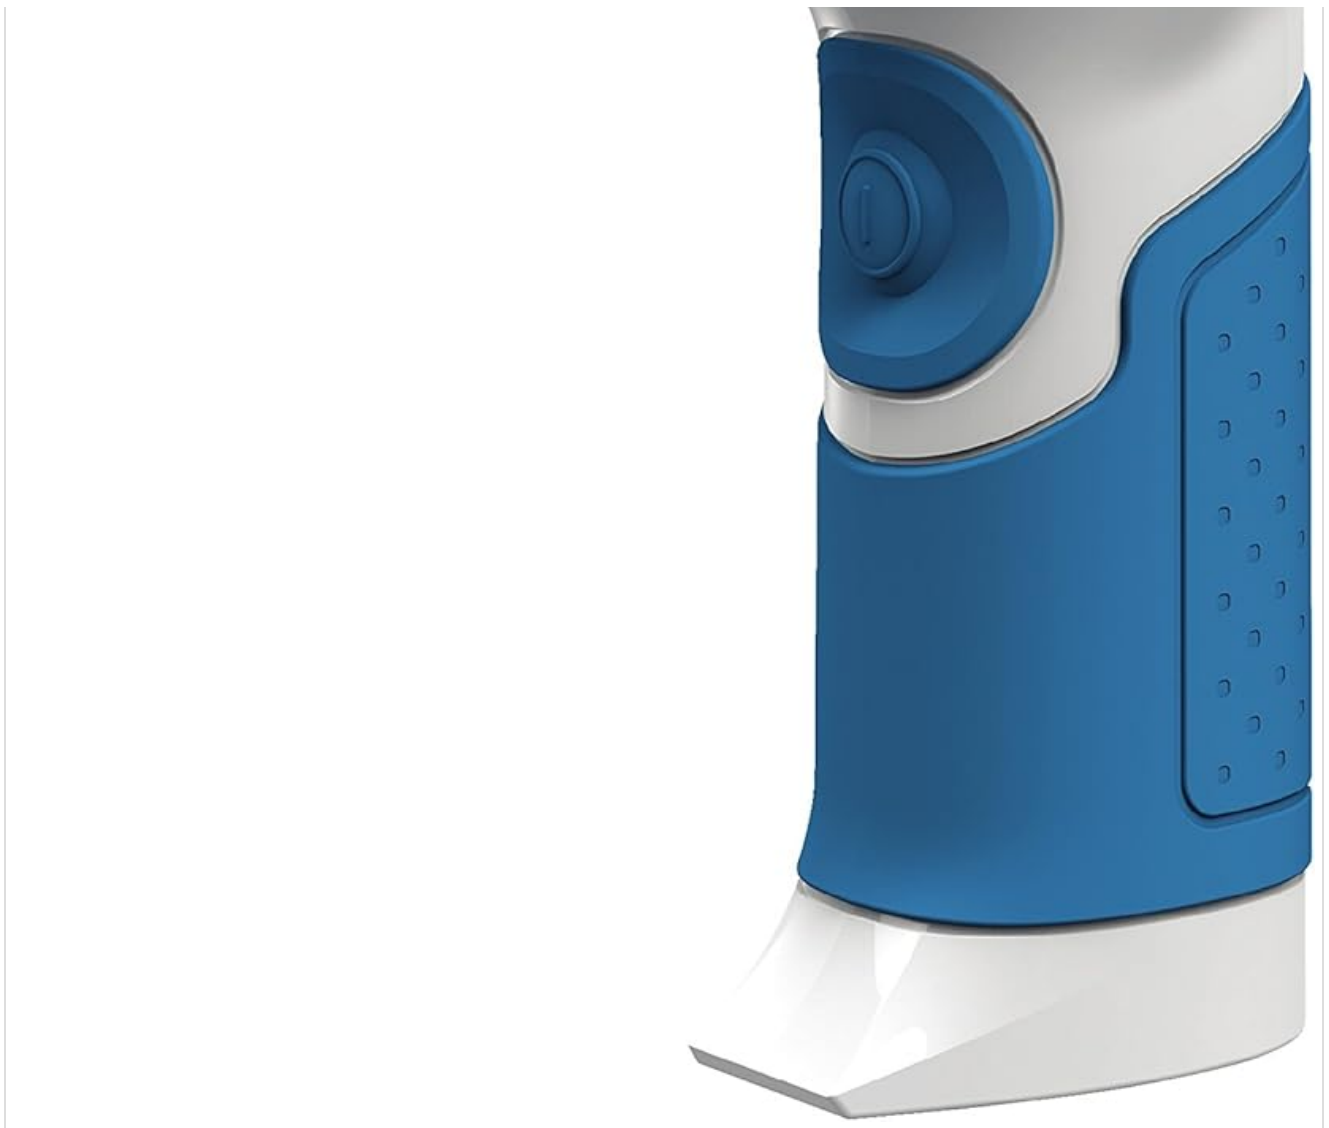


Image: The BLACK+DECKER PKS160 Power Scrubber, showing its compact design and the attached blue heavy-duty scrub pad. This image represents the product ready for use after battery installation.

OPERATING INSTRUCTIONS

Attaching Scrub Pads

- Ensure the scrubber is turned off.
- Align the scrub pad with the rotating head of the scrubber.
- Press the pad firmly onto the head until it is securely attached. The pads are designed for easy attachment and removal.

Using the Power Scrubber

1. Once batteries are installed and a scrub pad is attached, press the power button to turn on the scrubber.
2. Apply a small amount of cleaning solution to the surface to be cleaned or directly to the scrub pad, if desired.
3. Gently press the rotating scrub pad against the surface and move it in circular motions to clean. Avoid excessive pressure, as the scrubber's power is designed to do the work.
4. The scrubber is fully submersible, allowing for cleaning in sinks or under running water.
5. After cleaning, press the power button again to turn off the scrubber.



Image: A woman demonstrating the use of the BLACK+DECKER PKS160 Power Scrubber to clean a stovetop. This illustrates the practical application of the device for kitchen cleaning tasks.

MAINTENANCE

Cleaning the Scrubber

- After each use, rinse the scrubber head and scrub pad thoroughly under running water to remove any debris or cleaning solution residue.
- Wipe the body of the scrubber with a damp cloth. Do not use abrasive cleaners or solvents.
- Allow the scrubber and pads to air dry completely before storing.

Pad Replacement

Scrub pads will wear down over time with regular use. Replace pads when they show signs of significant wear or reduced cleaning effectiveness. Replacement pads can be purchased separately from authorized BLACK+DECKER retailers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Batteries are dead or incorrectly installed.	Replace all four (4) AA batteries with new ones, ensuring correct polarity.
Reduced scrubbing power.	Batteries are low.	Replace all four (4) AA batteries.
Scrub pad falls off during use.	Pad not securely attached or worn out.	Ensure pad is firmly pressed onto the head. Replace pad if worn.
Water inside battery compartment.	Battery compartment cover not sealed properly.	Ensure cover is securely closed and sealed before submersion. If water ingress persists, discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Model Number	PKS160
Brand	BLACK+DECKER
Power Source	4 x AA Batteries (included)
Dimensions (L x W x H)	6.3" x 3" x 9.4" (16 cm x 7.6 cm x 23.9 cm)
Item Weight	0.8 Pounds (12.8 ounces)
Handle Material	Rubber
Included Components	Power Scrubber, 4 AA batteries, 2 Heavy Duty Scrub Pads

Feature	Detail
Surface Recommendation	Kitchenware, Countertops, Tile, Grout

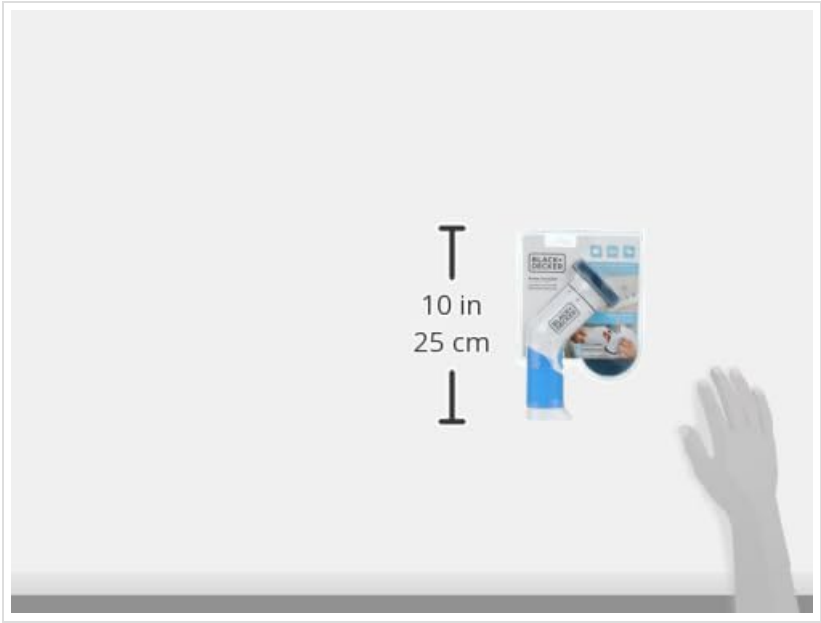


Image: A diagram illustrating the approximate dimensions of the BLACK+DECKER PKS160 Power Scrubber, indicating a height of 10 inches (25 cm).

WARRANTY AND SUPPORT

Warranty Information

The BLACK+DECKER PKS160 Power Scrubber comes with a 2-year limited warranty. This warranty covers defects in material or workmanship. For full terms and conditions, please refer to the warranty documentation included with your purchase or visit the official BLACK+DECKER website.

Customer Support

For technical assistance, replacement parts, or warranty claims, please visit the official BLACK+DECKER support website or contact their customer service. You can also refer to the official Instructions for Use (IFU) PDF document for additional details: [BLACK+DECKER PKS160 User Guide \(PDF\)](#).

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided data that meet the embedding criteria (e.g., m3u8 format with 'Seller' creator type).