

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bissell](#) /

› [Bissell Pet Eraser Corded Hand Vac \(Model 33A1\) Instruction Manual](#)

Bissell 33A1

Bissell Pet Eraser Corded Hand Vac (Model 33A1) Instruction Manual

Model: 33A1

INTRODUCTION

The Bissell Pet Eraser Corded Hand Vac, Model 33A1, is designed for efficient pet hair and dry mess pick-up around your home. Its lightweight and compact design, combined with powerful suction, makes it an ideal tool for quick cleanups on various surfaces, including upholstery, stairs, and hard floors.

SETUP

- Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the packaging contents are present.
- Nozzle Attachment:** The hand vac comes with two specialized nozzles. To attach a nozzle, align it with the vacuum's intake and snap it firmly into place. To switch nozzles, press down on the round nozzle-release button and attach the desired nozzle.
 - Flexible Rubber Contour Nozzle:** Ideal for attracting and removing pet hair and dirt from upholstery and stairs.
 - Hard Nozzle:** Suitable for cleaning dry messes on various surfaces, including inside automobiles.
- Power Connection:** Extend the 16-foot power cord and plug it into a suitable electrical outlet.



Every Purchase Saves Pets™

BISSELL® proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets.

Image: The Bissell Pet Eraser Hand Vac shown with its two interchangeable nozzles: the flexible rubber contour nozzle (attached) and the hard nozzle (detached).

OPERATING INSTRUCTIONS

- Power On/Off:** Locate the fingertip-access on/off switch on the handle. Press the switch to turn the vacuum on or off.
- Cleaning Surfaces:**
 - For Pet Hair and Upholstery:** Attach the flexible rubber contour nozzle. Gently pull the nozzle across the surface to attract and lift pet hair and embedded dirt.
 - For Dry Messes:** Attach the hard nozzle. Move the nozzle over the dry debris to vacuum it up.
- Optimal Performance:** For maximum suction, ensure the dirt container is not overfilled and the filters are clean.

Designed for pet hair pick-up around the house



Image: A hand using the Bissell Pet Eraser Hand Vac with the flexible rubber contour nozzle to clean pet hair from carpeted stairs.

Specialized rubber nozzle attracts hair and removes dirt from stairs and upholstery



Image: A hand using the Bissell Pet Eraser Hand Vac with the hard nozzle to clean dry debris from a tiled floor near a litter box.

MAINTENANCE

- Emptying the Dirt Container:** To maintain optimal suction performance, empty the dirt container after each use. Follow the instructions in your user manual for specific steps on detaching and emptying the container.
- Cleaning Filters:** The vacuum features a pleated post motor filter and a filter screen. Regularly check and clean these filters to ensure efficient operation. Refer to the user manual for detailed cleaning instructions.

Lightweight and mobile

for easy cleaning around the house



Image: The Bissell Pet Eraser Hand Vac with its transparent dirt container detached, showing the internal filter components.

TROUBLESHOOTING

- **Loss of Suction:** Check if the dirt container is full and needs emptying. Inspect the filters for clogs or excessive dirt buildup and clean them as per maintenance instructions. Ensure no blockages are present in the nozzle or hose.
- **Vacuum Not Turning On:** Verify that the power cord is securely plugged into a functional electrical outlet. Check the on/off switch for proper engagement.
- **Unusual Noise:** Turn off and unplug the vacuum immediately. Inspect the nozzles and intake for any foreign objects that might be causing the noise or obstruction.

SPECIFICATIONS

Feature	Detail
Brand	Bissell

Feature	Detail
Model Name	Bissell Pet Hair Eraser Handheld Vacuum
Model Number	33A1
Power Source	Corded Electric
Wattage	40 watts
Amperage	4 Amps
Capacity	0.28 Liters
Filter Type	HEPA Filter
Special Feature	Bagless, Compact, Lightweight
Included Components	Contour Nozzle, Hard Nozzle, Crevice Tool
Product Dimensions	10"L x 5"W x 8"H
Item Weight	4.2 pounds
Surface Recommendation	Hard Floor, Upholstery, Carpet
Recommended Uses	Car, Home, Stairs, Upholstery

WARRANTY & SUPPORT

This Bissell Pet Eraser Corded Hand Vac (Model 33A1) comes with a **1-year limited warranty**. For warranty claims, technical support, or replacement parts, please refer to the contact information provided in your product packaging or visit the official Bissell website.