

Oster 3157

Oster 3157 Single-Speed Juice Extractor User Manual

Model: 3157 | Brand: Oster

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Oster 3157 400-Watt Single-Speed Juice Extractor. Please read all instructions carefully before first use and retain for future reference. This appliance is designed to extract juice from various fruits and vegetables.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Always ensure the juicer cover is properly secured before the motor is switched on. Do not unfasten the locking arm while the juicer is in operation.
- Always make sure the juicer is switched to the OFF position after each use and before disassembling.
- Do not put fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in the opening, use the food pusher to push it down. If this method is not possible, turn off the motor and disassemble the juicer to remove the remaining food.
- Do not use the appliance for other than intended use.

3. PARTS IDENTIFICATION

Familiarize yourself with the components of your Oster 3157 Juice Extractor:

1. Food Pusher
2. Feed Chute
3. Juicer Cover
4. Stainless Steel Filter Basket
5. Pulp Collector Container
6. Motor Base with Control Dial
7. Locking Arm
8. Juice Spout
9. 20-ounce Juice Jar



Image 1: The Oster 3157 Juice Extractor shown with a glass of juice, peaches, and carrots, illustrating its function.

4. ASSEMBLY

Before assembling, ensure the appliance is unplugged from the power outlet.

1. Place the Motor Base on a clean, dry, and stable surface.
2. Insert the Stainless Steel Filter Basket securely onto the motor base.
3. Position the Pulp Collector Container by sliding it into place on the side of the motor base.
4. Place the Juicer Cover over the filter basket, aligning the juice spout with the opening on the motor base.

5. Engage the Locking Arm by lifting it and securing it over the juicer cover. Ensure it clicks into place, indicating the cover is firmly locked. The appliance will not operate unless the locking arm is correctly engaged.
6. Place the 20-ounce Juice Jar under the juice spout.
7. Insert the Food Pusher into the Feed Chute.



Image 2: The Oster 3157 Juice Extractor fully assembled, showing the pulp collector and juice jar in position.

5. OPERATING YOUR JUICER

Follow these steps for safe and effective juicing:

1. **Preparation:** Wash fruits and vegetables thoroughly. Most fruits and vegetables do not need to be peeled, but citrus fruits should be peeled before juicing. Remove large seeds or pits from fruits like peaches, cherries, or plums. Cut larger items into pieces that fit easily into the feed chute.
2. **Power On:** Plug the juicer into a standard electrical outlet. Turn the single-speed control dial to the 'ON' position.
3. **Juicing:** With the motor running, place prepared fruit or vegetable pieces into the feed chute. Use the food pusher to gently guide the food down. Do not force food into the chute, as this can damage the motor or reduce juice yield.
4. **Collection:** The extracted juice will flow through the angled spout into the 20-ounce jar. Pulp will collect in the pulp collector container.
5. **Completion:** Once juicing is complete, turn the control dial to the 'OFF' position and unplug the appliance.



Image 3: The Oster 3157 Juice Extractor shown with pineapple pieces, demonstrating its capability to process various produce.

Tips for Best Results:

- For maximum juice extraction, feed ingredients slowly and steadily.
- Juice harder fruits and vegetables (like carrots or apples) before softer ones (like berries or leafy greens) to help clear the filter.
- Empty the pulp collector and juice jar as needed during extended juicing sessions.

6. CARE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your juicer. All removable parts are dishwasher safe.

1. **Disassembly:** Ensure the juicer is unplugged. Release the locking arm and remove the juicer cover, filter basket, pulp collector, and food pusher.
2. **Rinsing:** Rinse all removable parts under running water immediately after use to prevent pulp from drying and

sticking.

3. **Washing:** Wash removable parts in warm, soapy water using a brush for the stainless steel filter basket to remove any trapped pulp. Alternatively, place them on the top rack of your dishwasher.
4. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
5. **Drying and Storage:** Dry all parts thoroughly before reassembling or storing. Store the juicer in a clean, dry place.



Image 4: The Oster 3157 Juice Extractor with a full jar of freshly extracted juice, ready for serving.

7. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

- **Juicer does not turn on:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Verify that the locking arm is fully engaged and secured over the juicer cover. The juicer has a safety interlock system.
- **Low juice yield or excessive wet pulp:**
 - The stainless steel filter basket may be clogged. Turn off and unplug the juicer, then clean the filter.
 - Food may be fed too quickly. Feed ingredients slowly and steadily.
 - Some fruits and vegetables naturally yield less juice.
- **Motor stops during operation:**
 - The juicer may be overloaded. Turn off and unplug the appliance. Remove any lodged food and allow the motor to cool for 15-20 minutes before restarting.
 - Check if the pulp collector is full and empty it if necessary.
- **Vibration or excessive noise:**
 - Ensure all parts are correctly assembled and the locking arm is securely fastened.
 - The juicer should be on a flat, stable surface.

If the problem persists after checking these points, contact customer service for assistance.

8. PRODUCT SPECIFICATIONS





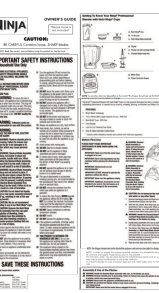
Brand	Oster
Model Number	3157
Power	400 Watts
Speed Settings	Single-Speed
Color	White/Grey
Blade Material	Stainless Steel
Product Dimensions	12.4 x 8.6 x 13.8 inches
Item Weight	6 pounds
Care Instructions	Dishwasher Safe (removable parts)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Oster website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may contact Oster customer service through their official channels.

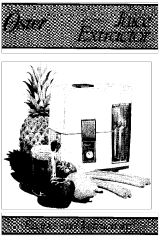

Related Documents - 3157

	<p>Oster Automatic Juice Extractor: Recipes and Instructions Manual</p> <p>Comprehensive user manual for the Oster Automatic Juice Extractor, including important safeguards, assembly and disassembly instructions, usage tips, care and cleaning guides, a juicing guide, vitamin information, and a collection of juice and food recipes.</p>
	<p>Oster FPSTJE9000 Series Juice Extractor User Manual and Recipes</p> <p>Comprehensive user manual and recipe guide for the Oster FPSTJE9000 Series Juice Extractor, covering safety precautions, assembly, operation, maintenance, and various juice recipes.</p>
	<p>Oster BLSTDG Series Blender User Manual and Recipes</p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
	<p>Oster Waffle Makers: Instructions and Recipes</p> <p>A comprehensive guide to using Oster waffle makers, including important safety information, operating instructions, care and cleaning tips, and a variety of delicious waffle recipes and toppings.</p>
	<p>Manual de Instrucciones Oster XL Express Multi-Cooker CKSTPCEC8801</p> <p>Guía completa de instrucciones para el Oster XL Express Multi-Cooker (Modelo CKSTPCEC8801), cubriendo seguridad, uso, mantenimiento y solución de problemas.</p>
	<p>Oster BL660 Owner's Guide: Refurbished Product Information and Support</p> <p>Comprehensive owner's guide for the Oster BL660 blender, detailing accessory variations, important notes on refurbished units, and product support contact information.</p>

