

[Manuals.plus](#) /

> [Tefal](#) /

> Tefal Simply Invents 5160 Raclette Grill User Manual

Tefal 5160

Tefal Simply Invents 5160 Raclette Grill User Manual

Model: 5160

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The Tefal Simply Invents 5160 Raclette Grill is designed for versatile indoor grilling and raclette preparation. It features a non-stick grill plate and individual raclette pans for a personalized cooking experience.

Components

- Non-stick grill plate (removable)
- Raclette base unit with heating element
- Individual raclette pans (quantity may vary)

- Removable power cord
- On/Off switch with indicator light
- Thermoplastic body



Figure 2.1: The Tefal Simply Invents 5160 Raclette Grill, showing the main unit with the non-stick grill plate on top and the individual raclette pans underneath.



Figure 2.2: The raclette grill in use, demonstrating various foods such as vegetables, meat skewers, and shrimp cooking on the grill plate, with melted cheese in the raclette pans below.

3. SETUP

1. **Unpack the Appliance:** Carefully remove all packaging materials and any promotional labels from the raclette grill. Retain packaging for future storage if desired.
2. **Inspect Components:** Check that all parts are present and undamaged. This includes the base unit, grill plate, raclette pans, and power cord.
3. **Clean Before First Use:** Before using for the first time, wipe the grill plate and raclette pans with a damp cloth and mild detergent. Rinse thoroughly and dry completely. The grill plate and raclette pans are dishwasher safe.
4. **Position the Appliance:** Place the raclette grill on a stable, heat-resistant, and dry surface. Ensure there is adequate

ventilation around the appliance. Do not place it too close to walls or under cabinets.

5. **Assemble the Grill:** Place the grill plate securely on top of the heating element on the base unit. Ensure it is properly seated.
6. **Connect Power:** Insert the removable power cord into the appliance's power inlet, then plug the other end into a grounded electrical outlet. Ensure the outlet voltage matches the appliance's requirements (1050W).

4. OPERATING INSTRUCTIONS

1. **Preheating:** Turn the appliance on using the On/Off switch. The indicator light will illuminate. Allow the grill to preheat for approximately 5-10 minutes. This ensures even cooking and optimal performance.
2. **Grilling on the Top Plate:**
 - Lightly brush the grill plate with a small amount of cooking oil, if desired, to prevent sticking and enhance flavor.
 - Place food items such as sliced meats, vegetables, or seafood directly onto the hot grill plate.
 - Cook until desired doneness, turning as needed.
3. **Using Raclette Pans:**
 - Place cheese, small portions of vegetables, or other ingredients into the individual raclette pans.
 - Slide the filled pans under the heating element in the base unit.
 - Cook until the cheese is melted and bubbly, or other ingredients are heated through.
4. **Serving:** Use non-metallic utensils to remove food from the grill plate and raclette pans to avoid scratching the non-stick coating.
5. **Switching Off:** After use, turn the On/Off switch to the "Off" position. The indicator light will turn off. Unplug the appliance from the wall outlet and allow it to cool completely before cleaning or storing.



Figure 4.1: Close-up view of the power switch, which includes an illuminated indicator light to show when the unit is active.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Tefal Simply Invents 5160 Raclette Grill.

1. **Cool Down:** Always ensure the appliance is unplugged and completely cool before attempting to clean it.
2. **Remove Grill Plate and Pans:** Carefully remove the grill plate and all raclette pans from the base unit.

3. **Cleaning Grill Plate and Pans:**

- The grill plate and raclette pans are dishwasher safe.
- Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
- For stubborn food residue, soak the parts in warm water before cleaning.
- Rinse thoroughly and dry completely before reassembling or storing.

4. **Cleaning the Base Unit:**

- Wipe the exterior of the thermoplastic body with a damp cloth.
- Do not immerse the base unit, power cord, or plug in water or any other liquid.
- Ensure no water enters the electrical components.

5. **Storage:** Store the clean and dry appliance in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	<ul style="list-style-type: none">• Not plugged in.• Power outlet malfunction.• On/Off switch not activated.	<ul style="list-style-type: none">• Ensure power cord is securely plugged into both the appliance and a working electrical outlet.• Test the outlet with another appliance.• Press the On/Off switch to the "On" position.
Food not cooking evenly or slowly.	<ul style="list-style-type: none">• Appliance not preheated sufficiently.• Too much food on the grill plate.• Grill plate not properly seated.	<ul style="list-style-type: none">• Allow the grill to preheat for the recommended 5-10 minutes.• Cook food in smaller batches.• Ensure the grill plate is correctly positioned on the heating element.
Smoke or unusual odor during first use.	<ul style="list-style-type: none">• Protective coating burning off.• Residue from manufacturing.	<ul style="list-style-type: none">• This is normal for the first few uses. Ensure good ventilation. If smoke persists after initial uses, discontinue use and contact support.

7. SPECIFICATIONS

Feature	Detail
Model Number	5160
Brand	Tefal
Wattage	1050 Watts
Color	Black

Feature	Detail
Material	Thermoplastic body, Non-stick grill plate
Item Weight	2.2 Pounds (approximately 1 kg)
Dishwasher Safe Parts	Grill plate, Raclette pans
Power Cord	Removable

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Tefal website. Keep your proof of purchase for warranty claims.

Tefal Official Website: www.tefal.com

9. VIDEO RESOURCES

No official product videos from the seller are available for embedding at this time.

© 2023 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B001F5187I>

More documents and user manuals: <https://manuals.plus/>