

Manuals.plus /

› Zeppelin /

› Zeppelin Flatline 7336-5 Men's Watch Instruction Manual

Zeppelin 73365

Zeppelin Flatline 7336-5 Men's Watch Instruction Manual

Model: 73365

INTRODUCTION

Thank you for choosing the Zeppelin Flatline 7336-5 Men's Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. This watch features a precise Swiss Quartz movement and a durable cowhide leather strap, designed for reliability and classic style.





Image: Front view of the Zeppelin Flatline 7336-5 watch, showcasing its brown dial, rose gold-tone case, and dark brown leather strap. The dial features Arabic numerals at 12 and 9, stick markers for other hours, a date window at 3 o'clock, and a small seconds sub-dial at 6 o'clock.

1. INITIAL SETUP

1.1 Unpacking

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. Retain all packaging materials for future reference or transport.

1.2 Setting the Time

1. Gently pull the crown (the small knob on the side of the watch case) outwards to the first position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position against the watch case. The small seconds hand will begin to move, indicating the watch is running.



Image: Side view of the Zeppelin Flatline 7336-5 watch, highlighting the crown used for setting the time. The rose gold-tone case and dark brown leather strap are also visible.

1.3 Wearing the Watch

Adjust the cowhide leather strap to fit comfortably around your wrist. The strap should be snug enough to prevent the watch from sliding freely, but not so tight as to restrict circulation. Use the tang buckle to secure the strap.



Image: The Zeppelin Flatline 7336-5 watch displayed on a wrist, demonstrating how it appears when worn. The dark brown leather strap and the watch's profile are clearly visible.

2. OPERATION

2.1 Timekeeping

Your Zeppelin Flatline 7336-5 watch is powered by a reliable Swiss Quartz movement, providing accurate timekeeping. The hour, minute, and small seconds hands continuously display the current time.

2.2 Date Display

The watch features a date window located at the 3 o'clock position. The date automatically advances once every 24 hours. To manually adjust the date, pull the crown out to the first position (the same position for setting time) and turn it counter-clockwise. Adjust the date to the previous day, then advance the time past midnight to set the correct date for the current day. This prevents the date from changing at noon instead of midnight.

2.3 Small Seconds Sub-dial

The sub-dial located at the 6 o'clock position displays the running seconds for the watch. This provides a continuous indication that the watch is functioning.

3. CARE AND MAINTENANCE

3.1 Cleaning

To maintain the appearance of your watch, wipe the case and crystal with a soft, dry cloth. For the leather strap, use a slightly damp cloth to gently clean, then allow it to air dry completely. Avoid using harsh chemicals or abrasive materials.

3.2 Water Resistance

This watch is specified as **Not Water Resistant**. While some specifications may mention a 30-meter depth, this typically refers to laboratory pressure testing and does not indicate suitability for swimming, showering, or submersion in water. To prevent damage, avoid all contact with water, including rain, splashes, and high humidity.

3.3 Battery Replacement

The watch is powered by a product-specific battery. When the battery needs replacement, it is recommended to take your watch to an authorized Zeppelin service center or a qualified watchmaker. Attempting to replace the battery yourself may void the warranty or damage the watch.

3.4 Strap Care

The cowhide leather strap is a natural material and requires care to maintain its condition. Avoid prolonged exposure to direct sunlight, extreme temperatures, and moisture. Clean the strap regularly as described above. Over time, the leather will develop a unique patina, which is a natural characteristic of quality leather.

4. TROUBLESHOOTING

4.1 Watch Not Running

- Ensure the crown is fully pushed in against the watch case.
- If the watch still does not run, the battery may need replacement. Refer to section 3.3.

4.2 Incorrect Time/Date

- Follow the instructions in section 1.2 and 2.2 to reset the time and date.
- If the time or date consistently becomes incorrect, this may indicate a need for service.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	73365
Movement Type	Swiss Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	40 Millimetres
Case Thickness	7 Millimetres
Band Material	Leather (Cowhide)
Band Width	20 Millimetres
Clasp Type	Tang Buckle
Crystal Type	Mineral
Water Resistance	Not Water Resistant
Power Source	Battery Powered
Included Components	Leather Strap

6. WARRANTY INFORMATION

Your Zeppelin watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and point of purchase. Please refer to the warranty card included with your watch or visit the official Zeppelin website for detailed warranty information and registration procedures. Keep your proof of purchase for warranty claims.

7. CUSTOMER SUPPORT

For further assistance, service, or inquiries regarding your Zeppelin Flatline 7336-5 watch, please contact Zeppelin customer service or an authorized Zeppelin dealer. Contact information can typically be found on the official Zeppelin website or in your watch's documentation.