

Tefal GV9360

Tefal Protect Steam Generator GV9360 User Manual

Model: GV9360

INTRODUCTION

Thank you for choosing the Tefal Protect Steam Generator GV9360. This appliance is designed to provide efficient and powerful steam ironing for all your garments. Please read this manual carefully before first use and keep it for future reference. It contains important information regarding safety, operation, and maintenance.

Key Features:

- Five bar pressure for powerful steam output.
- Very large 1.8 liter removable water tank with a clear water level indicator for extended ironing sessions.
- Integrated anti-calc collector system for easy maintenance and prolonged appliance life.
- Ultragliss ceramic soleplate for smooth gliding and optimal heat distribution.
- Turbo steam function delivering 200 g/min for stubborn creases.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the appliance out of reach of children and persons with reduced physical, sensory, or mental capabilities.
- Never immerse the appliance, power cord, or plug in water or any other liquid.
- Unplug the appliance from the mains socket before filling the water tank, cleaning, or performing any maintenance.
- Do not use the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- Place the iron on a stable, heat-resistant surface when not in use.
- The soleplate and steam are extremely hot and can cause burns. Handle with care.

PRODUCT COMPONENTS



Figure 1: The Tefal Protect Steam Generator GV9360, showcasing its compact design and purple accents. This view highlights the iron unit docked on its base, the large water tank, and the steam hose connection.



Figure 2: Rear view of the Tefal Protect Steam Generator GV9360, showing the integrated carrying handle for easy portability and the overall structure of the steam station.



Figure 3: The Tefal Protect Steam Generator GV9360 positioned on an ironing board stand, demonstrating its practical use during garment ironing. The iron is shown ready for use.

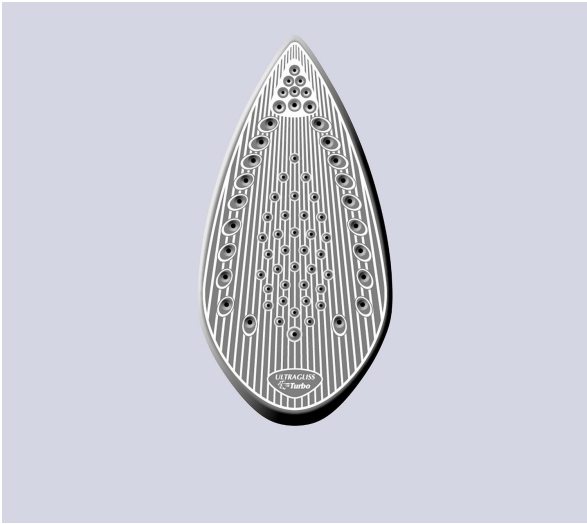


Figure 4: A detailed view of the Ultragliss ceramic soleplate, highlighting its steam vents and smooth surface designed for effortless gliding over fabrics.

SETUP

1. **Unpacking:** Carefully remove the steam generator from its packaging. Retain the packaging for future storage or transport.
2. **Positioning:** Place the steam generator on a stable, flat, and heat-resistant surface, such as an ironing board designed for steam stations. Ensure there is adequate ventilation around the unit.
3. **Filling the Water Tank:**
 - Ensure the appliance is unplugged from the mains.
 - Remove the 1.8-liter removable water tank.
 - Fill the tank with tap water. For optimal performance and to prevent scale buildup, it is recommended to use a mixture of 50% tap water and 50% distilled water, or solely distilled water in areas with very hard water. Do not use scented water or water from tumble dryers.
 - Replace the water tank securely into the base unit.
4. **Connecting to Power:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On:** Press the On/Off button. The indicator light will illuminate.
2. **Heating Up:** The appliance will begin to heat up. This typically takes a few minutes. The steam ready indicator light will turn solid when the iron is ready for use.
3. **Selecting Temperature:** Adjust the temperature dial on the iron according to the fabric type. Always check the garment's care label.
4. **Steam Generation:**
 - To generate continuous steam, press and hold the steam trigger located under the iron handle.
 - For a powerful burst of steam (Turbo Steam), press the steam boost button. This is ideal for stubborn creases.
 - For vertical steaming, hold the iron vertically a few centimeters from the fabric and press the steam trigger.
5. **Ironing:** Begin ironing your garments, moving the iron smoothly over the fabric.

- Refilling During Use:** If the water tank runs low, the water level indicator will alert you. You can refill the tank at any time without switching off the appliance.
- Power Off:** After use, press the On/Off button to switch off the appliance. Unplug the power cord from the wall socket.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your steam generator.

1. Cleaning the Soleplate:

- Allow the iron to cool completely.
- Wipe the soleplate with a damp cloth. Do not use abrasive cleaners or metallic scouring pads.

2. Descaling (Anti-Calc Collector):

- The GV9360 features an anti-calc collector. When the "Calc-Away" indicator light illuminates, it's time to clean the collector.
- Ensure the appliance is unplugged and completely cool (at least 2 hours after use).
- Unscrew the anti-calc collector cap, usually located on the side or rear of the base unit.
- Remove the collector rod and rinse it thoroughly under running water to remove any scale deposits.
- Reinsert the clean collector rod and screw the cap back on tightly.

3. Water Tank Cleaning: The removable water tank can be rinsed periodically with clean water.

4. Storage: Once the appliance has cooled down, wrap the steam hose and power cord neatly. Store the iron securely on its base.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty or low. Appliance not heated up. Steam trigger not pressed.	Fill the water tank. Wait for the steam ready indicator light. Press the steam trigger firmly.
Water drips from the soleplate.	Iron temperature is too low for steam.	Increase the iron temperature setting. Wait for the iron to reach the correct temperature before using steam.
"Calc-Away" indicator light is on.	Anti-calc collector needs cleaning.	Refer to the "Descaling (Anti-Calc Collector)" section in Maintenance and Cleaning.
Appliance does not turn on.	Not plugged in. Power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.

SPECIFICATIONS

Brand: Tefal

Model Number: GV9360

Color: Purple

Power / Wattage: 2200 Watts

Material: Ceramic (Soleplate)

Water Tank Capacity: 1.8 Liters (Removable)

Steam Pressure: 5 Bar

Turbo Steam Output: 200 g/min

Special Features: Water level indicator, Anti-calc collector

Recommended Uses: Garment Ironing

Item Weight: 7.3 Kilograms

Package Dimensions: 47.8 x 37.4 x 29 cm

First Available Date: August 8, 2012

WARRANTY AND SUPPORT

Tefal products are manufactured to high quality standards. For information regarding warranty coverage, service, or technical support, please refer to the warranty card included with your purchase or visit the official Tefal website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Tefal customer service through their official channels. Contact details can typically be found on the product packaging or the Tefal website.

© 2024 Tefal. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

