

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Wahl Professional](#) /
- › [Wahl Professional Peanut Corded Trimmer \(Model 8655-200\) Instruction Manual](#)

Wahl Professional 8655-200

Wahl Professional Peanut Corded Trimmer (Model 8655-200) Instruction Manual

Brand: Wahl Professional | **Model:** 8655-200

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Wahl Professional Peanut Corded Trimmer, Model 8655-200. This compact and lightweight grooming tool features a powerful rotary motor and a detachable blade for easy maintenance. Please read all instructions carefully before operation.



Figure 1: Front view of the Wahl Professional Peanut Corded Trimmer.

SAFETY INFORMATION

- Always unplug the appliance from the electrical outlet immediately after use.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.

- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken comb, as facial injury may result.
- To disconnect, turn all controls to "OFF" then remove plug from outlet.

PRODUCT OVERVIEW

Components and Features

The Wahl Professional Peanut Trimmer is designed for precision grooming. Key features include its compact size, powerful rotary motor, and detachable blade system.



Figure 2: The compact design of the Peanut Trimmer fits comfortably in hand.



TOP SELLING
PROFESSIONAL TOOL

Peanut

COMPACT & VERSATILE
CLIPPER/TRIMMER

Peanut-like body style provides both grip and comfort. Includes a detachable blade for easy cleaning and maintenance.



Figure 3: Overview of the trimmer's compact and versatile design.



Powerful Motor

The strong rotary motor allows you to feel the power in the palm of your hand.


Figure 4: The powerful rotary motor ensures consistent performance.

What's in the Box

Your Wahl Professional Peanut Trimmer package includes the following items:

- Wahl Professional Peanut Clipper/Trimmer
- 4 Trimming Guides (1/8", 1/4", 3/8", 1/2")
- Blade Oil
- Cleaning Brush
- Red Blade Guard
- Operating Instructions (this manual)

What's in The Box

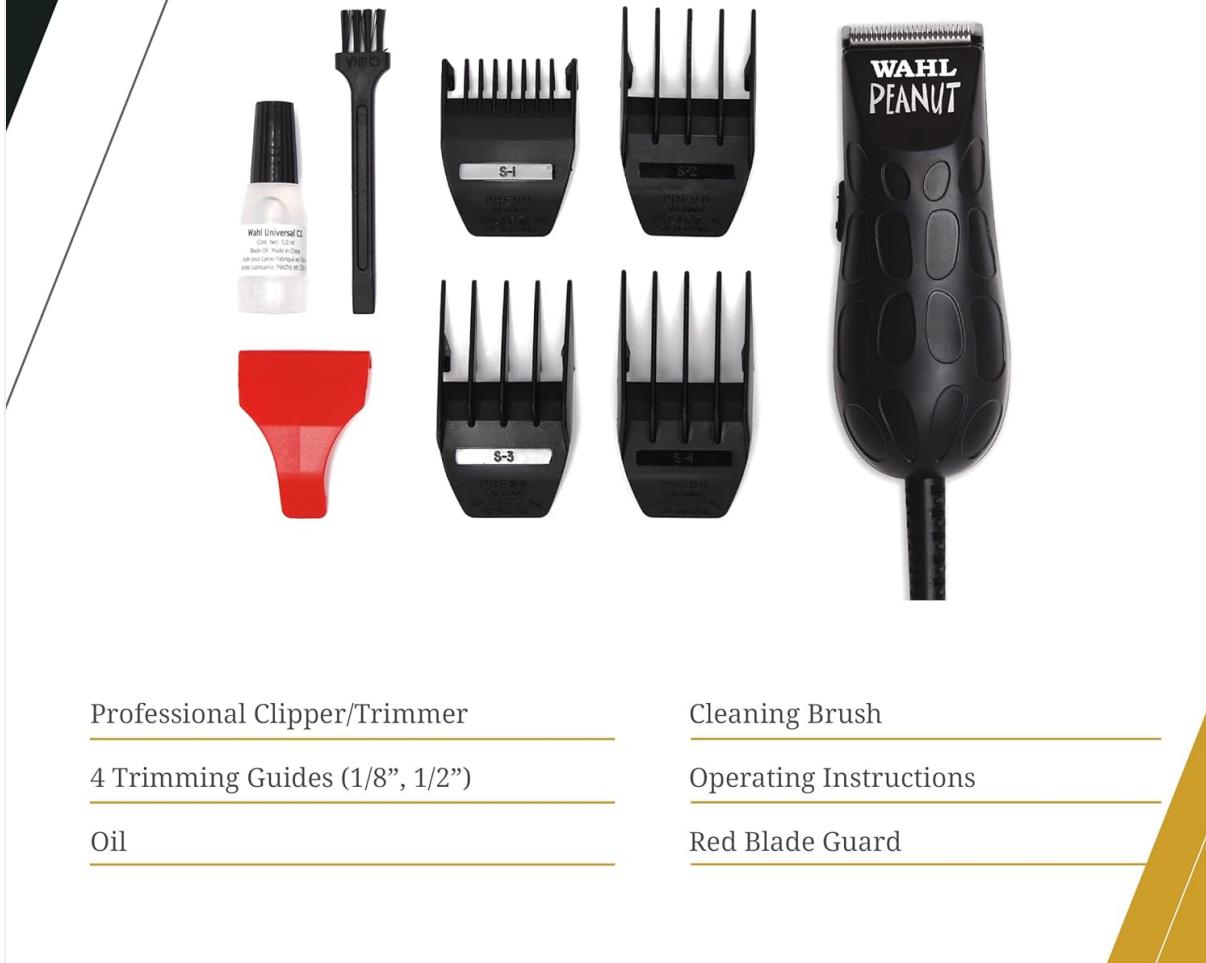

Professional Clipper/Trimmer

4 Trimming Guides (1/8", 1/2")

Oil

Cleaning Brush

Operating Instructions

Red Blade Guard

Figure 5: All included accessories for your trimmer.

SETUP

Before first use, ensure all packaging materials are removed. Inspect the trimmer and its accessories for any damage. The trimmer is corded electric and requires no battery charging. Simply plug it into a suitable electrical outlet.

Attaching Guide Combs

To attach a guide comb, align the comb with the trimmer blade and snap it securely into place. Ensure it is firmly seated before use. To remove, gently pull the comb away from the blade.

Your browser does not support the video tag.

Video 1: A seller-provided video demonstrating the Wahl Professional Peanut Clipper/Trimmer, including its features and how to use it for various grooming tasks.

OPERATING INSTRUCTIONS

The Wahl Professional Peanut Trimmer is designed for detailing, trimming, and light clipping. Its compact size allows for precise control.

General Trimming Tips

- For best results, use the trimmer on clean, dry hair.
- Always move the trimmer against the direction of hair growth.
- Use light, even pressure. Do not press too hard against the skin.

Beard Trimming

Attach the desired guide comb for your preferred beard length. Start trimming from the ear down towards the chin, following the natural line of your beard. For detailing around the mouth and neckline, remove the guide comb and use the bare blade carefully.

Hairline and Sideburns

For crisp lines on hairlines and sideburns, use the trimmer without a guide comb. Hold the trimmer at a slight angle and gently press the blade against the skin, moving downwards to create a clean edge. Be cautious around the ears.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your trimmer.

Cleaning the Blades

- **Always unplug the trimmer before cleaning.**
- Use the provided cleaning brush to remove loose hairs from the blades after each use.
- The blade set is detachable for thorough cleaning. To detach, push the blade set forward from the back of the trimmer.
- After cleaning, reattach the blade set by aligning it with the trimmer housing and snapping it back into place.

Detachable Blade

The detachable blade allows for easy maintenance and quick blade replacement.



Figure 6: Detachable blade for easy cleaning and maintenance.

Oiling the Blades

To maintain cutting efficiency and prevent rust, oil the blades regularly. Apply 2-3 drops of the provided Wahl Clipper Oil across the top of the blades and 1 drop on each side of the blade teeth. Turn the trimmer on for a few seconds to distribute the oil, then wipe off any excess with a soft cloth.

Blade Replacement

If blades become dull or damaged, they can be replaced. Detach the old blade set as described in the "Cleaning the Blades" section. Install a new Wahl replacement blade set by aligning it and snapping it into position.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Not plugged in, power outlet issue, damaged cord.	Ensure trimmer is securely plugged into a working outlet. Check for visible cord damage.

Problem	Possible Cause	Solution
Trimmer pulls hair or cuts poorly.	Dull blades, dirty blades, insufficient oil.	Clean and oil blades. If problem persists, replace blades.
Trimmer runs loudly or vibrates excessively.	Lack of lubrication, loose blade.	Oil blades. Ensure blade set is securely attached.

SPECIFICATIONS

- **Model Number:** 8655-200
- **Brand:** Wahl Professional
- **Power Source:** Corded Electric
- **Motor Type:** Rotary Motor
- **Weight:** Approximately 4 ounces
- **Dimensions:** Approximately 4 x 1.75 x 2 inches
- **Color:** Black
- **UPC:** 043917865522

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official Wahl Professional website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.