

Yamaha EZ-200

Yamaha EZ-200 61-Key Lighted Electronic Keyboard Instruction Manual

Model: EZ-200

1. INTRODUCTION

Thank you for choosing the Yamaha EZ-200 61-Key Lighted Electronic Keyboard. This instrument is designed to make learning and playing music enjoyable and accessible for beginners and experienced players alike. Featuring 61 full-sized, touch-sensitive keys with a unique key-lighting system, 367 high-quality instrument voices, and a built-in instructional method, the EZ-200 provides a rich musical experience. Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your new keyboard.



Image 1.1: The Yamaha EZ-200 61-Key Lighted Electronic Keyboard.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure you have the Yamaha EZ-200 keyboard, AC power adapter, and any included accessories. Retain the packaging for future transport or storage.

2.2 Power Connection

1. Locate the DC IN jack on the rear panel of the keyboard.
2. Connect the supplied AC power adapter to the DC IN jack.
3. Plug the AC power adapter into a standard wall outlet.

Important: Use only the Yamaha-specified AC power adapter to prevent damage to the instrument.

2.3 Optional Stand Assembly

If using an optional keyboard stand, ensure it is assembled correctly and provides a stable, level surface for the EZ-200. Place the keyboard securely on the stand.

2.4 Headphone Connection

For private practice, connect standard stereo headphones to the PHONES/OUTPUT jack. This will mute the internal speakers.

2.5 USB/MIDI Connection

The EZ-200 features a USB port for MIDI connectivity, allowing you to connect the keyboard to a computer for use with music software. Connect a standard USB cable (Type A to Type B, not included) from the keyboard's USB TO HOST port to your computer's USB port. Install any necessary drivers as prompted by your operating system or Yamaha support website.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

Press the **[POWER]** button located on the control panel to turn the keyboard on or off. The display will illuminate upon power-on.

3.2 Volume Control

Adjust the master volume using the **[MASTER VOLUME]** slider or buttons to a comfortable listening level.

3.3 Selecting Voices (Tones)

The EZ-200 offers 367 high-quality instrument voices. Use the **[VOICE]** buttons and the numeric keypad or data entry dial to select your desired instrument sound, such as Grand Piano, Strings, or Guitar.

3.4 Touch Sensitivity

The keys are touch-sensitive, meaning the volume and timbre of the sound change based on how hard you strike the keys. Practice varying your touch to achieve expressive performances.

3.5 Key Lighting System

The unique key lighting system guides you through songs by illuminating the keys you need to play. This feature is particularly useful for learning new pieces.

3.6 Learning Features (Yamaha Education Suite)

The EZ-200 incorporates the Yamaha Education Suite (Y.E.S.) to assist with learning. This includes:

- **Lesson Functions:** Practice left hand, right hand, or both hands separately.
- **Waiting Function:** The keyboard waits for you to play the correct note before continuing the song.
- **Repeat Function:** Practice specific measures or phrases repeatedly until mastered.
- **Chord Dictionary:** Learn and practice various chords.

Refer to the on-screen display and dedicated buttons for navigating and utilizing these learning modes.

4. MAINTENANCE

4.1 Cleaning

Wipe the keyboard's surface with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then wipe dry immediately. Avoid using abrasive cleaners, solvents, or chemical wipes, as these can damage the finish.

4.2 Storage

When not in use for extended periods, store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity. Disconnect the power adapter.

5. TROUBLESHOOTING

If you encounter issues with your Yamaha EZ-200, please refer to the following common solutions:

- **No Sound:**
 - Ensure the power is on and the AC adapter is securely connected.
 - Check the master volume level.
 - If headphones are connected, disconnect them to enable internal speakers.
 - Verify that a voice is selected and not set to a silent patch.
- **Keys Not Responding:**
 - Ensure the keyboard is powered on.
 - If in a lesson mode, ensure you are playing the correct notes as indicated by the lighted keys.
- **Display Not Working:**
 - Check power connection.
 - Try turning the unit off and on again.
- **MIDI/USB Connection Issues:**
 - Ensure the USB cable is securely connected to both the keyboard and the computer.
 - Verify that the correct drivers are installed on your computer.
 - Check your music software's MIDI settings to ensure the EZ-200 is recognized.

If the problem persists after attempting these solutions, please contact Yamaha customer support.

6. SPECIFICATIONS

Model Name	EZ-200
Number of Keys	61
Key Type	Full-sized, Touch-Sensitive, Lighted Keys
Polyphony	32 Notes
Number of Voices	367 high-quality tones
Connectivity	USB (MIDI), Headphone/Output Jack
Power Source	AC adapter
Dimensions (L x W x H)	45.75 x 9.5 x 18.25 inches
Item Weight	24.3 pounds
Manufacturer	Yamaha Corporation of America

UPC	874171002657
-----	--------------

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The Yamaha EZ-200 typically comes with a standard manufacturer's warranty. Some bundles or promotions may include an extended warranty, such as a 2-year extended warranty. Please refer to your product registration card or the official Yamaha website for specific warranty terms and conditions applicable to your purchase.

7.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official Yamaha website or contact their customer service department. You can find detailed support information and contact options at the [Yamaha Store on Amazon](#) or directly through the Yamaha Corporation of America's official channels.