

## GRUNDIG GLR2020

# Grundig Ovation CDS 6580 A SPCD Compact System User Manual

Model: GLR2020

## 1. INTRODUCTION

Thank you for choosing the Grundig Ovation CDS 6580 A SPCD Compact System. This manual provides essential information for the safe and efficient operation of your new audio system. Please read these instructions thoroughly before use and retain them for future reference.

## 2. SAFETY INFORMATION

- Ensure the power supply voltage matches the rating label on the unit.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Avoid placing the unit in direct sunlight or near heat sources.
- Do not block ventilation openings.
- Refer all servicing to qualified service personnel.

## 3. PACKAGE CONTENTS

Verify that all items are present in the packaging:

- Grundig Ovation CDS 6580 A SPCD Compact System
- Power Cable
- User Manual (this document)

## 4. PRODUCT OVERVIEW

The Grundig Ovation CDS 6580 A SPCD is a compact micro CD station featuring Magic Fidelity audio technology. It supports CD-DA and MP3 formats and includes an auxiliary input for external devices.



**Figure 4.1:** Front view of the Grundig Ovation CDS 6580 A SPCD Compact System. The image displays the silver-metallic and graphite unit with a central blue LCD screen showing "15:42" and "ANTENNE". Control buttons are located on the left, and a CD loading area is on the right, partially obscured by a disc.

### Key Features:

- Micro CD station with Magic Fidelity audio concept
- 80 watt PMPO audio output
- 5-band preset digital equalizer
- CD player compatible with CD-Rs/RWs in CD-DA and MP3 formats
- Auxiliary input for connecting external devices (PC, Notebook, MP3 Player, Smartphone, Tablet)

## 5. SETUP

### 5.1 Unpacking and Placement

1. Carefully remove the unit and all accessories from the packaging.
2. Place the compact system on a stable, flat surface. Ensure adequate ventilation around the unit.
3. Avoid placing the unit near strong magnetic fields or direct heat sources.

### 5.2 Power Connection

1. Connect the supplied power cable to the AC IN socket on the rear of the unit.
2. Plug the other end of the power cable into a suitable wall outlet.

### 5.3 Antenna Connection (if applicable)

If your unit includes an external antenna, connect it to the designated antenna input for optimal radio reception.

### 5.4 Auxiliary Device Connection

To connect an external audio source (e.g., MP3 player, PC, smartphone), use an appropriate audio cable (not supplied) to connect the device's audio output to the AUX IN port on the Grundig Ovation system.

## 6. OPERATING INSTRUCTIONS

---

## 6.1 Power On/Off

Press the **POWER** button to turn the unit on or off.

## 6.2 Source Selection

Press the **SOURCE** button repeatedly to cycle through available input sources: CD, Radio, AUX.

## 6.3 CD Playback

1. Select the CD source.
2. Open the CD compartment and insert a CD (CD-DA, CD-R, CD-RW, MP3 CD) with the label side facing up.
3. Close the CD compartment. The unit will begin reading the disc.
4. Use the **PLAY/PAUSE**, **STOP**, **SKIP** (forward/backward) buttons for playback control.

## 6.4 Radio Operation

1. Select the Radio source.
2. Use the **TUNE +/-** buttons to manually tune to a station.
3. Press and hold **TUNE +/-** for automatic station scanning.
4. To save a preset station, tune to the desired station, then press and hold a **PRESET NUMBER** button until the display confirms storage.
5. To recall a preset station, press the corresponding **PRESET NUMBER** button.

## 6.5 Auxiliary Input

Select the AUX source. Audio from the connected external device will now play through the system. Control playback directly from the external device.

## 6.6 Equalizer Settings

Press the **EQ** button repeatedly to cycle through the 5 preset digital equalizer settings to adjust the sound profile.

## 6.7 Volume Control

Use the **VOLUME +/-** buttons to adjust the audio output level.

---

## 7. MAINTENANCE

### 7.1 Cleaning

- Before cleaning, disconnect the unit from the power outlet.
- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

### 7.2 CD Lens Care

To ensure optimal CD playback, periodically clean the CD lens using a commercially available CD lens cleaner disc.

---

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected securely.	Check power cable connection to the unit and wall outlet.
No sound	Volume too low; incorrect source selected; external device not connected properly.	Increase volume; select correct source (CD, Radio, AUX); ensure external device is connected and playing.
CD not playing	CD inserted incorrectly; disc is dirty or scratched; unsupported disc format.	Reinsert CD correctly; clean or replace disc; ensure disc is CD-DA, CD-R, CD-RW, or MP3 CD.
Poor radio reception	Antenna not properly positioned or connected; interference.	Adjust antenna position; ensure antenna is connected; move unit away from other electronic devices.

## 9. SPECIFICATIONS

- **Brand:** GRUNDIG
- **Model:** GLR2020
- **Product Dimensions (L x W x H):** 19 x 31 x 18 cm
- **Item Weight:** 3.3 Kilograms
- **Wattage:** 20 watts (RMS, based on 80 watt PMPO)
- **Audio Output Mode:** Stereo
- **Speaker Type:** Stereo
- **Supported Audio Formats:** MP3, CD-DA
- **Compatible Media Types:** MP3, CD-RW, CD-R
- **Connectivity Technology:** Auxiliary
- **Compatible Devices:** MP3 Player, Personal Computer, Smartphone, Tablet
- **Special Features:** Digital Equalizer
- **Power Source:** Mains powered

## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact Grundig customer service. Keep your proof of purchase for any warranty claims.

For further assistance, visit the official Grundig website or contact your local dealer.