

## Viper 7153V

# Viper 7153V 5-Button Remote Control Instruction Manual

## 1. PRODUCT OVERVIEW

---

The Viper 7153V is a 1-way, 5-button replacement remote control designed for use with compatible Viper security and remote start systems. It offers a range of up to 1/2 mile, allowing for convenient remote operation of your vehicle's functions.

### Key Features:

- 1-Way communication
- 5-Button control layout
- Up to 1/2 mile operating range
- Functions include lock, unlock, and remote vehicle start

### System Compatibility:

This remote is compatible with the following Viper systems: 3203V, 5204V, 4204V, 5202V, 5102V, 4202V, 4102V, 4104V, 5104V, VSS4000, 3303V, 3203V, 3303V, 4108V, 4208V, 9153VL, 9251VL. Always verify your system's compatibility before attempting to program a new remote.



Image of the Viper 7153V 5-button remote control, showing its ergonomic design and button layout.

## 2. SETUP AND PROGRAMMING

---

Programming the Viper 7153V remote to your vehicle's security system requires specific steps. The exact procedure may vary slightly depending on your Viper system model. The following is a general guide; refer to your specific system's manual for precise instructions if these steps do not work.

### **Battery Installation:**

The Viper 7153V remote requires one CR2032 battery. To install or replace the battery, carefully open the remote casing, insert the new CR2032 battery with the correct polarity, and reassemble the casing.

### **General Programming Steps (Example for Viper 5101 System):**

These steps are provided as a common example. Your system's Valet button location or programming sequence might differ.

#### **1. Prepare the Remote:**

- Hold down the small, rounded button (often marked with a cursive 'f') on the bottom of the remote until the remote's light turns solid. Release the button.

- Press and hold the start button for a few seconds until it blinks three times, then turns solid. Release the button.

## 2. Prepare the Vehicle:

- Insert the key into the ignition and turn it to the "ON" position. Do not start the engine.

## 3. Program the Remote:

- While the key is in the "ON" position, press and release the Valet button. Immediately press and hold the Valet button again.
- While still holding the Valet button, press the "Lock" button on the new remote.
- Release the Valet button.

## 4. Complete Programming:

- Turn the vehicle's ignition to the "OFF" position.
- Wait for the remote's light to turn off.

## 5. Test the Remote:

- Test the "Unlock," "Lock," and "Start" buttons to ensure successful programming.

*If these steps do not work, consult your Viper system's specific installation manual or contact a professional installer. Online resources and forums may also provide alternative programming methods for various Viper systems.*

## 3. OPERATING INSTRUCTIONS

---

The Viper 7153V remote provides basic control over your vehicle's security and remote start functions. The 5-button layout typically includes:

- **Lock Button:** Press to lock your vehicle's doors.
- **Unlock Button:** Press to unlock your vehicle's doors.
- **Start Button:** Press and hold (or press twice, depending on system configuration) to remotely start your vehicle.
- **Auxiliary/Trunk Release Button:** May control additional functions like trunk release or auxiliary outputs, depending on your system's installation.
- **Function/Panic Button:** Often used for panic alarm activation (press and hold) or to access secondary remote functions.

Refer to your Viper system's user manual for detailed information on specific button functions and advanced operations.

## 4. MAINTENANCE

---

### Battery Replacement:

The remote control is powered by one CR2032 lithium coin cell battery. When the remote's range decreases significantly or the LED indicator fails to light up, it is time to replace the battery.

1. Carefully separate the two halves of the remote casing, typically by prying gently along the seam with a small, flat tool.
2. Remove the old CR2032 battery.

3. Insert a new CR2032 battery, ensuring the positive (+) side faces up.
4. Carefully snap the remote casing back together.

Dispose of old batteries according to local regulations.

### Cleaning:

Wipe the remote with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the casing or internal components.

## 5. TROUBLESHOOTING

---

### Remote Not Responding:

- **Check Battery:** Ensure the CR2032 battery is fresh and correctly installed.
- **Out of Range:** Confirm you are within the remote's operating range (up to 1/2 mile). Obstructions and interference can reduce range.
- **Reprogramming:** If the remote stops responding after a battery change or for no apparent reason, it may need to be reprogrammed to your vehicle's system. Follow the programming steps in Section 2.
- **System Issue:** If multiple remotes fail to work, or if the vehicle's security system is unresponsive, there may be an issue with the main control unit. Consult a professional installer.

### Programming Difficulties:

Some users report that the programming instructions provided with the remote or system may not always work for all vehicle models or system configurations. If you encounter difficulties:

- **Consult System Manual:** Always refer to the specific installation or user manual for your Viper security/remote start system.
- **Online Resources:** Search online forums or manufacturer support pages for alternative programming methods specific to your vehicle and Viper system model.
- **Professional Assistance:** If you are unable to program the remote after several attempts, it is recommended to seek assistance from an authorized Viper dealer or a professional car audio/security installer.

## 6. SPECIFICATIONS

---

<b>Model Number</b>	7153V
<b>Product Dimensions</b>	7.75 x 5.75 x 0.5 inches
<b>Item Weight</b>	1.28 ounces
<b>Battery Type</b>	1 CR2032 battery (required)
<b>Connectivity Technology</b>	Infrared
<b>Color</b>	Black, Grey
<b>Manufacturer</b>	Viper

## 7. WARRANTY AND SUPPORT

---

**Legal Disclaimer:**

This item is a brand new product. However, if this remote is not purchased from an authorized Viper dealer, there may be no warranty coverage. We cannot guarantee that this remote will work with your unit if the unit you are trying to program it to is not in working order.

**Customer Support:**

For further assistance, technical support, or warranty inquiries, please contact Viper customer service or visit the official Viper website. It is recommended to have your product model number and any relevant system information ready when contacting support.