

[Manuals.plus](#) /

› [SINGER](#) /

› SINGER Confidence 7469Q Computerized & Quilting Sewing Machine User Manual

SINGER 7469Q

SINGER Confidence 7469Q Computerized & Quilting Sewing Machine User Manual

Model: 7469Q

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this sewing machine to ensure safe operation and prevent injury or damage.

- Always unplug the machine from the electrical outlet immediately after using and before cleaning, making any adjustments, or removing any parts.
- Do not allow children to operate the machine unsupervised.
- Use this appliance only for its intended use as described in this manual.
- Never operate this machine if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not pull or push fabric while stitching. This may deflect the needle, causing it to break.
- Wear safety glasses when operating the machine.

PACKAGE CONTENTS

Your SINGER Confidence 7469Q sewing machine package includes the following items:

- SINGER Confidence 7469Q Sewing Machine
- General Purpose Pressure Foot (pre-installed)
- Satin Special Purpose Pressure Decorative Sewing Foot

- One-Step Buttonhole Foot
- Zipper Foot
- Blind Hem Foot
- Darning and Embroidery Foot
- 1/4-inch Foot
- Open-toe Foot
- Even Feed Foot
- Needles (various sizes)
- 4 Standard Bobbins
- Lint Brush-Seam Ripper
- Screwdriver for Needle Plate
- Auxiliary Spool Pin
- 2 Spool Pin Felt Discs
- 3 Thread Spool Caps (Small, Medium, Large)
- Quilter's Extension Table
- Seam Guide
- Quilting Guide

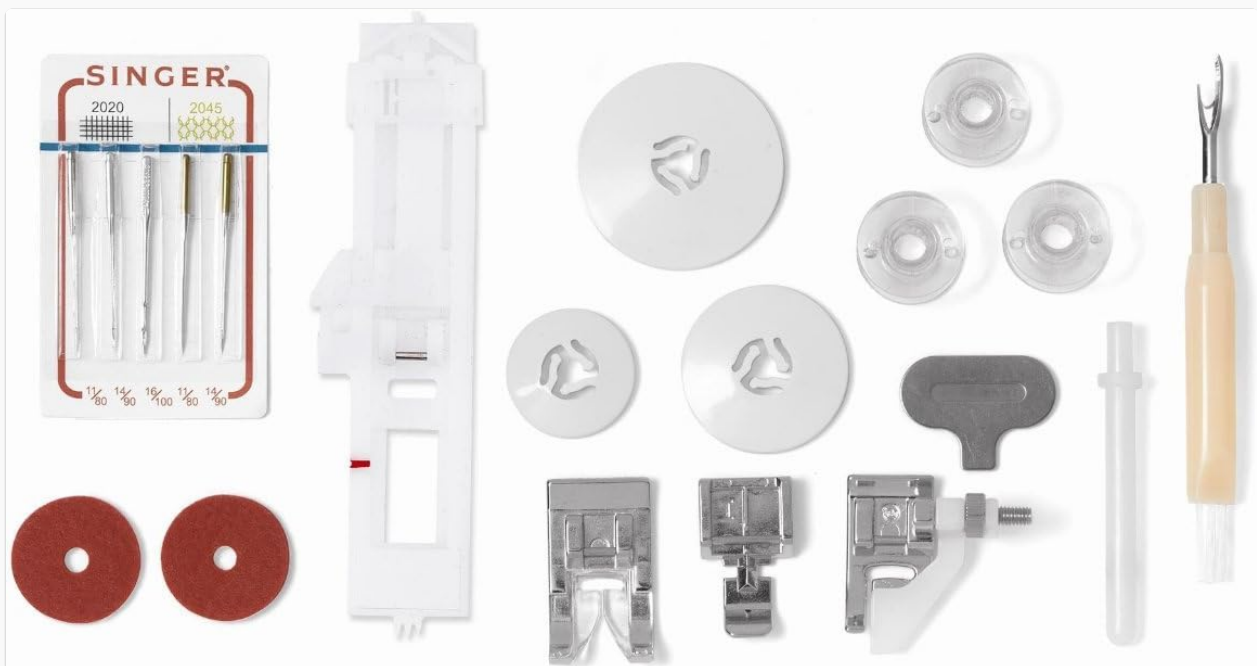


Image: Included accessories for the SINGER Confidence 7469Q.

SETUP

Unpacking and Placement

Carefully remove the machine from its packaging. Place the machine on a stable, flat surface. Ensure there is adequate space around the machine for comfortable operation and fabric handling. Attach the Quilter's Extension Table if desired for larger projects.



Image: SINGER Confidence 7469Q with the quilting extension table attached.

Power Connection

Connect the power cord to the machine and then to a suitable 110-volt electrical outlet. This machine is designed for United States and Canadian use only.

Bobbin Winding and Insertion

The Drop & Sew bobbin system simplifies bobbin preparation. Place a bobbin into the bobbin case. Guide the thread tail into the designated groove. The machine will automatically draw up the bobbin thread when you begin sewing, eliminating the need for manual retrieval.



Image: Proper insertion of the bobbin into the bobbin case.

Video: Demonstration of the Drop & Sew bobbin system, showing how to insert the bobbin and begin sewing without manually drawing up the thread.

Threading the Machine

Follow the numbered threading path indicated on the machine. The built-in needle threader assists in quickly and easily threading the needle. Ensure the presser foot is raised before threading to allow the thread to seat correctly in the tension discs.

OPERATING INSTRUCTIONS

Selecting Stitches

The SINGER Confidence 7469Q features 98 built-in stitches, including seven fully automatic one-step buttonholes. Use the control panel to select your desired stitch. The machine's display will show the selected stitch number.

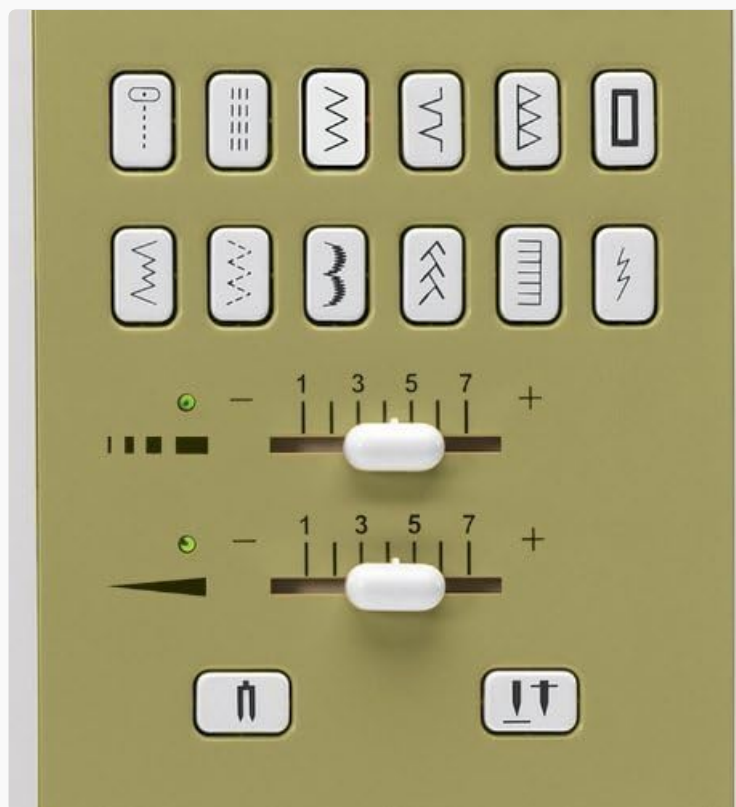


Image: Control panel for stitch selection and adjustments.

Adjusting Stitch Length and Width

Adjust the stitch length and width using the dedicated controls on the machine's panel. These electronic controls allow for precise customization of your stitches to suit various fabric types and project requirements.

Using the Needle Up/Down Feature

The programmable needle up/down feature allows you to stop the needle in either the up or down position. This is particularly useful for pivoting fabric, especially during quilting, ensuring precise corners and turns.

Quilting with the Extension Table

For quilting projects, attach the included extension table to provide a larger work surface, supporting your fabric and making it easier to maneuver large quilts. The drop feed mechanism also aids in free-motion quilting.



Image: Fabric being guided during a quilting operation.

Using Different Presser Feet

The machine comes with several specialized presser feet for various sewing tasks. Refer to the stitch guide for recommended presser feet for each stitch type. To change a presser foot, raise the needle and presser foot lever, then detach the current foot and snap the new one into place.



Image: Selection of specialized presser feet.

MAINTENANCE

Cleaning the Machine

Regular cleaning is essential for maintaining your sewing machine's performance. Always unplug the machine before cleaning. Use the included lint brush to remove lint and dust from the bobbin area and feed dogs. Periodically clean the exterior with a soft, dry cloth.

TROUBLESHOOTING

- **Skipped Stitches:** Ensure the needle is inserted correctly and is not bent or dull. Use the appropriate needle size and type for your fabric. Re-thread the machine, ensuring the thread is properly seated in the tension discs.
- **Thread Breaking:** Check for proper threading, correct tension settings, and ensure the needle is not bent or dull. Verify that the thread is not catching on any part of the machine or spool.
- **Bobbin Thread Jamming:** Ensure the bobbin is wound evenly and inserted correctly into the bobbin case. Clean any lint or debris from the bobbin area.
- **Uneven Stitches:** Check the tension settings for both upper and bobbin threads. Ensure the fabric is not being pulled or pushed excessively during sewing.
- **Machine Not Powering On:** Verify the power cord is securely plugged into both the machine and the electrical outlet. Check the power switch.

SPECIFICATIONS

- **Model Number:** 7469Q
- **Product Dimensions:** 17 x 8 x 12.5 inches (43.2 x 20.3 x 31.8 cm)
- **Item Weight:** 16.25 pounds (7.37 kg)
- **Power Source:** Corded Electric (110-volt for US/Canada)
- **Built-in Stitches:** 98
- **Buttonhole Styles:** 7 (fully automatic one-step)
- **Features:** Automatic Needle Threader, Drop & Sew Bobbin System, Programmable Needle Up/Down, Drop Feed, Electronic Twin Needle Control, Adjustable Stitch Length and Width.
- **Material:** Plastic

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official SINGER website. SINGER provides comprehensive support for its products.

If you encounter any issues or require assistance, please contact SINGER customer support through their official website or the contact information provided in your product documentation. Have your model number (7469Q) and purchase details ready when contacting support.