

Fiskars 1000812

Fiskars Clip-Sharp Scissors Sharpener

Model: 1000812

INTRODUCTION

The Fiskars Clip-Sharp Scissors Sharpener is designed to restore the sharpness of your scissors, extending their lifespan and ensuring precise cuts. This compact and easy-to-use tool is suitable for most standard scissors, accommodating both right-handed and left-handed users. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Always keep the sharpener and scissors out of reach of children.
- Use the sharpener on a stable, flat surface to prevent accidental slips.
- Handle scissors with care, as sharpened blades can be very sharp.
- This sharpener is not suitable for serrated blades or pinking shears. Attempting to sharpen these types of blades may damage both the sharpener and the scissors.
- Do not disassemble the sharpener. There are no user-serviceable parts inside.

PRODUCT OVERVIEW

The Fiskars Clip-Sharp Scissors Sharpener features a durable plastic body with an integrated ceramic sharpening mechanism. Its design allows for stable handling during the sharpening process.

Components

- Sharpener Body: The main housing of the device.
- Sharpening Slot: The opening where scissor blades are inserted.
- Ceramic Sharpening Blades: Internal components that hone the scissor edges.

Features

- Compact and ergonomic design for easy handling.
- Suitable for most standard straight-edge scissors.
- Extends the life and performance of your scissors.
- Dishwasher safe for easy cleaning.



Figure 1: The Fiskars Clip-Sharp Scissors Sharpener, a compact tool for maintaining scissor sharpness.

SETUP

The Fiskars Clip-Sharp Scissors Sharpener requires minimal setup before use.

1. Remove the sharpener from its packaging.
2. Place the sharpener on a stable, flat, and non-slip surface.
3. Ensure the area is clear of obstructions and that you have adequate space to operate the sharpener safely.

OPERATING INSTRUCTIONS

Follow these steps to sharpen your scissors effectively:

1. **Hold the Sharpener:** Grip the sharpener firmly with one hand, ensuring it is stable on your work surface.
2. **Prepare Scissors:** Open your scissors fully.
3. **Insert Blade:** Insert one scissor blade into the sharpening slot of the sharpener. Ensure the blade is fully seated against the sharpening mechanism.



Figure 2: Carefully insert one scissor blade into the sharpening slot.

4. **Sharpening Motion:** While holding the sharpener steady, slowly close the scissors, drawing the blade through the sharpening mechanism. Apply gentle, consistent pressure.



Figure 3: Draw the scissor blade through the sharpener by closing the scissors.

5. **Repeat:** Repeat the sharpening motion 4-5 times for the first blade.
6. **Test Sharpness:** Carefully test the sharpness of the blade on a piece of paper.
7. **Sharpen Second Blade:** Repeat steps 3-6 for the other scissor blade.



Figure 4: Ensure consistent pressure and motion for effective sharpening.

8. **Final Test:** Once both blades are sharpened, test the scissors on a material you typically cut to ensure satisfactory performance.

Note: For optimal results, ensure the scissor blade is fully inserted and drawn through the sharpener with a firm, closing motion. Some scissors, particularly those with very dull blades, may require more repetitions.



Figure 5: This sharpener is designed for straight-edge scissors. Do not use with serrated or specialty blades.

MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your Fiskars Clip-Sharp Scissors Sharpener.

- **Cleaning:** After use, wipe the sharpener with a damp cloth to remove any metal shavings or debris. The sharpener is also dishwasher safe for thorough cleaning.
- **Storage:** Store the sharpener in a dry place, away from extreme temperatures and direct sunlight.
- **Inspection:** Periodically inspect the sharpening slot for any signs of wear or damage. If the ceramic sharpening blades appear worn, the sharpener's effectiveness may diminish.

TROUBLESHOOTING

If you encounter issues while using your sharpener, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Scissors are not getting sharp.	Incorrect sharpening technique; insufficient repetitions; scissors are serrated or damaged.	Review 'Operating Instructions' and ensure correct technique. Increase the number of repetitions (e.g., 8-10 times per blade). Confirm scissors are straight-edge and not serrated. Severely damaged blades may require professional sharpening or replacement.
Difficulty inserting scissors into the slot.	Scissors not fully open; incorrect angle.	Ensure scissors are fully opened before inserting a blade. Insert the blade straight into the slot, aligning it with the sharpening mechanism.
Sharpener feels unstable during use.	Not placed on a flat, stable surface; insufficient grip.	Place the sharpener on a firm, flat, and non-slip surface. Hold the sharpener firmly with one hand while operating with the other.

SPECIFICATIONS

Attribute	Detail
Model Number	1000812
Brand	Fiskars
Color	Black
Material	Plastic
Blade Material (Sharpening Mechanism)	Ceramic
Dimensions (Length)	4 cm
Weight	75 g
Hand Orientation	Ambidextrous

WARRANTY AND SUPPORT

Fiskars products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official Fiskars website. If you require further assistance or have questions not covered in this manual, please contact Fiskars customer support through their official channels.

