

Ray-Ban RB3016

Ray-Ban RB3016 Clubmaster Sunglasses User Manual

Model: RB3016

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Ray-Ban RB3016 Clubmaster Square Sunglasses. Designed with a timeless aesthetic and functional features, these sunglasses offer both style and protection. Please read this manual thoroughly to ensure optimal performance and longevity of your eyewear.

WHAT'S IN THE BOX

Upon unboxing your Ray-Ban RB3016 Clubmaster Sunglasses, you should find the following items:

- Ray-Ban RB3016 Clubmaster Sunglasses
- Signature Protective Case
- Premium Cleaning Cloth
- Original Packaging
- Certificate of Authenticity



Image: The Ray-Ban Clubmaster sunglasses, protective case, cleaning cloth, and original box.

SETUP AND FITTING

Proper fitting ensures comfort and optimal vision. Follow these steps for initial setup:

1. **Initial Inspection:** Carefully remove your sunglasses from the protective case. Inspect the frames and

lenses for any visible damage or manufacturing defects.

2. **Frame Fit:** The RB3016 Clubmaster is designed for a comfortable fit. It is available in various sizes (e.g., 49 mm, 51 mm) to accommodate different face widths. Refer to the size guide below to determine the best fit for your face.
3. **Nose Pad Adjustment:** The sunglasses feature adjustable nose pads. If the fit feels too loose or too tight on your nose, gently adjust the nose pads inward or outward until a secure and comfortable fit is achieved. Avoid excessive force to prevent damage.



Image: Step 1 of the frame size guide, illustrating how to determine face width (S, M, L).



Image: Step 2 of the frame size guide, showing recommended frame sizes (49mm, 51mm, 55mm) based on face width for both men and women.

OPERATING INSTRUCTIONS

Your Ray-Ban Clubmaster sunglasses are designed for daily wear to protect your eyes from harmful UV rays and enhance visual clarity.

- **Wearing:** Place the sunglasses on your face, ensuring the nose pads rest comfortably on your nose bridge and the temples extend over your ears without causing pressure. The lenses should cover your eyes adequately.
- **Lens Features:** The G-15 Green Crystal lenses provide exceptional optical clarity and true color perception. They block 100% of harmful UVA and UVB rays, offering UV400 protection. The lenses are also scratch-resistant for enhanced durability.



Image: Key features of the Ray-Ban Clubmaster, highlighting G-15 Crystal lenses, comfort, iconic design, and scratch-resistant coating.

MAINTENANCE AND CARE

To maintain the quality and appearance of your Ray-Ban sunglasses, follow these care guidelines:

- **Cleaning:** Use the provided premium cleaning cloth to gently wipe the lenses and frames. For more thorough cleaning, use a mild soap solution and lukewarm water. Rinse thoroughly and dry with the cleaning cloth. Avoid using abrasive cleaners, paper towels, or clothing, as these can scratch the lenses.
- **Storage:** Always store your sunglasses in the signature protective case when not in use. This protects them from scratches, dust, and accidental damage. Avoid leaving sunglasses in direct sunlight for extended periods, especially in hot environments like a car dashboard, as extreme heat can damage the frame and lens coatings.
- **Handling:** Handle your sunglasses by the frame, not the lenses, to avoid smudges and potential damage.

TROUBLESHOOTING

If you encounter any issues with your Ray-Ban Clubmaster sunglasses, consider the following:

- **Loose Fit:** If the sunglasses feel loose, gently adjust the nose pads inward. If the temples feel too wide, a professional optician can make minor adjustments.
- **Tight Fit:** If the sunglasses feel too tight, gently adjust the nose pads outward. If the temples feel too narrow, consult an optician for adjustment.
- **Smudged Lenses:** Clean lenses thoroughly using the provided cleaning cloth and, if necessary, a mild soap solution as described in the Maintenance section.
- **Scratched Lenses:** While lenses are scratch-resistant, they are not scratch-proof. Minor scratches may occur with improper care. Significant scratches may require lens replacement by an authorized Ray-Ban service center.
- **Authenticity Concerns:** Ensure your purchase was made from an authorized Ray-Ban dealer. Your sunglasses come with a certificate of authenticity.

SPECIFICATIONS

Feature	Detail
Model Number	RB3016
Frame Material	Plastic (Black on Gold) with metal accents
Frame Style	Clubmaster, Square Shape
Lens Material	Crystal
Lens Color	G-15 Green
UV Protection	UV400, blocks 100% UVA/UVB
Lens Coating	Scratch Resistant Coating
Available Sizes	49 mm, 51 mm (Lens Width)
Bridge Width	21 mm
Arm Length	145 mm
Item Weight	1.2 ounces (approx. 0.08 Pounds)
Origin	Imported (Made in Italy/China, depending on specific model batch)



Image: Various views of the RB3016 Clubmaster sunglasses, showcasing the front, side, and top profiles.

WARRANTY AND SUPPORT

Your Ray-Ban RB3016 Clubmaster Sunglasses are backed by Ray-Ban’s extended warranty against manufacturing defects. This warranty covers defects in materials and workmanship under normal use.

- **Warranty Claims:** For warranty service, please contact the authorized Ray-Ban dealer from whom you purchased the product. Proof of purchase may be required.
- **Authenticity:** To ensure authenticity and warranty coverage, always purchase Ray-Ban products from authorized retailers.

- **Further Assistance:** For additional support or inquiries, please visit the official Ray-Ban website or contact their customer service.

[Visit the Official Ray-Ban Store](#)