

Manuals.plus /

- › Casio /
- › Casio HS-70W-1JH Digital Stopwatch User Manual

## Casio HS-70W-1JH

# Casio HS-70W-1JH Digital Stopwatch User Manual

## INTRODUCTION

---

This manual provides detailed instructions for the proper use and care of your Casio HS-70W-1JH Digital Stopwatch. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This stopwatch is designed for precise timekeeping in various sports and timing applications.



Figure 1: Casio HS-70W-1JH Digital Stopwatch in use, showing the display and buttons.

## PRODUCT OVERVIEW

---

The Casio HS-70W-1JH is a robust digital stopwatch featuring multiple timing modes and a clear display. Familiarize yourself with the main components:

- **Display:** Shows time, lap/split times, and mode indicators.
- **MODE Button:** Cycles through different operational modes (Stopwatch, Timer, Alarm, Time).
- **START/STOP Button:** Initiates and halts timing operations.
- **LAP/RESET Button:** Records lap/split times or resets the stopwatch.
- **RECALL Button:** Accesses stored lap/split time data.





Figure 2: Side view highlighting the control buttons.

## SETUP

---

### Initial Power-On and Time Setting

1. Upon first use or after battery replacement, the stopwatch may display a default time or require setting.
2. Press the **MODE** button repeatedly until the Timekeeping mode is displayed.
3. Hold down the **RECALL** button for a few seconds until the seconds digits begin to flash, indicating setting mode.
4. Use the **START/STOP** button to adjust the flashing value (e.g., seconds, hours, minutes).
5. Use the **LAP/RESET** button to move the flashing selection to the next setting (e.g., from seconds to minutes).
6. Once all settings are correct, press the **RECALL** button again to exit the setting mode.

### Selecting 12/24-Hour Format

In Timekeeping mode, press the **START/STOP** button to toggle between 12-hour and 24-hour time formats.

## OPERATING INSTRUCTIONS

---

### Stopwatch Mode

1. Press the **MODE** button until "STW" or "STOPWATCH" appears on the display.
2. Press **START/STOP** to begin timing.
3. To record a lap or split time, press **LAP/RESET** while the stopwatch is running. The display will momentarily show the lap/split time.
4. Press **START/STOP** again to pause the timing.

5. To resume timing, press **START/STOP**.
6. To reset the stopwatch to zero, ensure it is stopped (paused), then press **LAP/RESET**.

## Lap/Split Memory Recall

The HS-70W-1JH can store multiple lap and split times. To view recorded data:

1. In Stopwatch mode, with the stopwatch stopped and reset, press the **RECALL** button.
2. Use the **START/STOP** and **LAP/RESET** buttons to scroll through the stored lap and split times.
3. Press **RECALL** again to exit memory recall mode.

## Timer Mode (if available)

*Note: Specific timer functions may vary. Refer to the full Casio manual for advanced timer settings.*

1. Press the **MODE** button until "TMR" or "TIMER" appears.
2. Hold **RECALL** to enter setting mode for the countdown time.
3. Use **START/STOP** and **LAP/RESET** to set the desired countdown duration.
4. Press **RECALL** to confirm and exit setting mode.
5. Press **START/STOP** to begin the countdown.
6. Press **START/STOP** to pause/resume. Press **LAP/RESET** to reset.

## Alarm Mode (if available)

*Note: Specific alarm functions may vary. Refer to the full Casio manual for advanced alarm settings.*

1. Press the **MODE** button until "ALM" or "ALARM" appears.
2. Hold **RECALL** to enter setting mode for the alarm time.
3. Use **START/STOP** and **LAP/RESET** to set the desired alarm time.
4. Press **RECALL** to confirm and exit setting mode.
5. Press **START/STOP** to toggle the alarm ON/OFF.

## MAINTENANCE

---

### Cleaning

Wipe the stopwatch with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth with mild soap, then wipe dry. Avoid harsh chemicals or abrasive cleaners.

### Water Resistance

The Casio HS-70W-1JH is designed with 5 ATM water resistance. This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. However, it is not recommended for swimming, diving, or operating buttons underwater.

### Battery Replacement

When the display becomes dim or functions become erratic, the battery may need replacement. This model typically uses a CR2032 lithium battery. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and water resistance. If replacing yourself, carefully open the back cover, replace the battery with the correct type, and ensure the gasket is properly seated before re-securing the cover.



Figure 3: Rear view of the stopwatch, showing battery compartment area.

## TROUBLESHOOTING

---

- **Display is blank or dim:**

This usually indicates a low battery. Replace the battery as described in the Maintenance section.

- **Buttons are unresponsive:**

Check for dirt or debris around the buttons. If the issue persists after cleaning, a battery replacement might be necessary, or there could be an internal malfunction. Avoid forcing buttons.

- **Incorrect time displayed:**

Re-set the time according to the "Initial Power-On and Time Setting" instructions in the Setup section.

- **Stopwatch not starting/stopping:**

Ensure you are in Stopwatch mode. If the issue continues, try a battery replacement or a full reset (if a reset pinhole is available, consult the official Casio manual).

## SPECIFICATIONS

---

Feature	Detail
Model Number	HS-70W-1JH
Brand	Casio
Material	Plastic
Product Dimensions (D x W x H)	0.94" x 2.52" x 3.27" (2.39 cm x 6.40 cm x 8.31 cm)
Item Weight	85 Grams
Screen Size	63.5 Millimeters
Number of Settings	4 (referring to modes/functions)
Water Resistance	5 ATM (50 meters)

## WARRANTY INFORMATION

---

Casio products typically come with a manufacturer's warranty covering defects in materials and workmanship. The duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims. For specific warranty details, refer to the documentation included with your purchase or visit the official Casio website.

## SUPPORT

---

For further assistance, technical support, or to download a full digital manual, please visit the official Casio support website:

**Visit Casio Support**

You can also contact Casio customer service directly through their website for product inquiries or service requests.