

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER Spacemaker Under-Counter Toaster Oven TROS1000D Instruction Manual](#)

## BLACK+DECKER TROS1000D

# BLACK+DECKER Spacemaker Under-Counter Toaster Oven

MODEL: TROS1000D - INSTRUCTION MANUAL

## Introduction

Thank you for choosing the BLACK+DECKER Spacemaker Under-Counter Toaster Oven, Model TROS1000D. This appliance is designed to provide efficient baking, toasting, and warming functions while saving valuable countertop space. Please read this manual thoroughly before installation and operation to ensure safe and optimal performance.



Figure 1: BLACK+DECKER Spacemaker Under-Counter Toaster Oven (Model TROS1000D) with the door open, showing the interior rack and crumb tray.

## Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury. Keep this manual for future reference.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Do not install closer than 4 inches (10 cm) to any vertical surface or to any horizontal surface beneath the unit. Ensure adequate ventilation around the appliance.

## Setup and Installation

---

The BLACK+DECKER Spacemaker Toaster Oven is designed for under-cabinet mounting to maximize countertop space. Follow these steps for proper installation:

1. **Unpack the Appliance:** Carefully remove all packaging materials, including any protective films or stickers. Retain packaging for future transport if needed.
2. **Choose Location:** Select a suitable under-cabinet location. Ensure there is at least 4 inches (10 cm) of clearance from any vertical surfaces and any horizontal surfaces directly below the unit for proper ventilation and safety.
3. **Mounting Bracket Assembly:** The under-cabinet mounting kit is included. Assemble the mounting bracket according to the diagrams provided in the separate installation guide.
4. **Marking Drill Holes:** Position the mounting bracket under the cabinet where the oven will be installed. Use the provided stencil or the bracket itself to accurately mark the drill points for the mounting screws. It is recommended to mark two front holes first, then use the stencil to align the remaining holes precisely.
5. **Drilling:** Drill pilot holes at the marked locations. Ensure the drill bit size is appropriate for the mounting screws to prevent splitting the cabinet wood.
6. **Attach Mounting Bracket:** Secure the mounting bracket to the underside of the cabinet using the provided screws. Use the appropriate length screws and spacers (thin, medium, or long) to ensure a flush and secure fit, especially if your cabinet has a lip. Spacers are typically needed for the back two bolts if mounting flush with the cabinet edge.
7. **Attach Toaster Oven:** Carefully lift the toaster oven and align its top hooks with the slots on the mounted bracket. Slide the oven into place until it clicks securely. Ensure the "ears" that hook into the notch at the top of the toaster oven are not bent during this process. If they are, gently bend them back into shape with small pliers before attempting to attach.
8. **Secure the Oven:** Once the oven is hooked onto the bracket, secure it further using any additional screws or fasteners as indicated in the installation guide.
9. **Power Connection:** Plug the appliance into a standard electrical outlet.



Figure 2: Interior view of the BLACK+DECKER Spacemaker Under-Counter Toaster Oven, highlighting the removable slide-out rack and crumb tray.

## Operating Instructions

---

The TROS1000D features digital controls for easy operation. Familiarize yourself with the control panel before first use.

### Control Panel Overview

The intuitive control panel includes dedicated buttons for power, function selection (Bake, Toast, Keep Warm), temperature adjustment, and toast shade settings. An LED display shows current settings.

### Functions:

- **Bake:** Ideal for baking items like a 9-inch pizza. Temperatures can be set from 200°F to 400°F.
- **Toast:** Perfect for toasting up to four slices of bread. Features toast settings from 1 (light) to 7 (dark).
- **Keep Warm:** Maintains food at a warm temperature without further cooking.

### General Operation Steps:

1. **Prepare Food:** Place food directly on the removable slide-out rack or in an oven-safe dish on the rack. The oven interior accommodates a 9-inch pizza or four slices of bread.
2. **Close Door:** Ensure the oven door is fully closed.
3. **Power On:** Press the Power button to turn on the appliance.
4. **Select Function:** Press the desired function button (Bake, Toast, or Keep Warm).
5. **Adjust Settings:**
  - For *Bake*: Use the temperature control buttons to set the desired temperature between 200°F and 400°F. Set the cooking time using the timer controls. The oven will turn off automatically when the set time expires.
  - For *Toast*: Use the toast shade control buttons to select a setting from 1 to 7. The oven will automatically adjust the toasting time.

- For *Keep Warm*: No temperature adjustment is typically needed. Set the desired duration for keeping warm.
6. **Start Cooking:** The oven will begin operation once settings are confirmed or after a brief delay.
  7. **Monitor Progress:** The LED display will show the remaining time or current settings.
  8. **Completion:** The oven will signal completion and turn off automatically. Carefully remove food using oven mitts.

*Note:* The digital display is not backlit. You may need to use external lighting to clearly read the screen in dimly lit environments.

## Maintenance and Cleaning

---

Regular cleaning ensures optimal performance and extends the life of your toaster oven.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** The drop-down crumb tray is designed for easy cleaning. Open the tray and slide it out. Wipe it clean with a damp cloth or wash it in warm, soapy water. Ensure it is completely dry before reinserting.
3. **Interior:** Wipe the interior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can damage the non-stick coating.
4. **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Removable Rack:** The slide-out rack can be washed in warm, soapy water.
6. **Do Not Immerse:** Never immerse the main unit, cord, or plug in water or any other liquid.

## Troubleshooting

---

If you encounter issues with your BLACK+DECKER Spacemaker Toaster Oven, refer to the following common solutions:

- **Appliance Does Not Turn On:**
  - Ensure the power cord is securely plugged into a functional electrical outlet.
  - Check your household circuit breaker or fuse box.
- **Food Not Cooking Evenly:**
  - Ensure the oven door is fully closed during operation.
  - Verify that the correct temperature and time settings are selected for the food item.
  - Avoid overcrowding the oven.
- **Digital Display is Difficult to Read:**
  - The display is not backlit. Use adequate ambient lighting to view the screen.
- **Installation Difficulty (Oven not securing to bracket):**
  - Ensure the "ears" or hooks on the top of the toaster oven are not bent. Gently straighten them with pliers if necessary before attempting to slide the oven onto the mounting bracket.
  - Verify that the mounting bracket is securely installed and aligned correctly.

If the problem persists after attempting these solutions, please contact customer support.

## Specifications

---

<b>Brand</b>	BLACK+DECKER
<b>Model Name</b>	TROS1000D
<b>Color</b>	Black
<b>Special Feature</b>	Under-the-cabinet spacemaker design
<b>Control Type</b>	Button Control
<b>Door Style</b>	Dropdown Door
<b>Included Components</b>	Crumb Tray
<b>Finish Type</b>	Silver
<b>Power Source</b>	AC adapter
<b>Number of Shelves</b>	1
<b>Product Dimensions (L x W x H)</b>	13.5 x 17 x 9 inches
<b>Item Weight</b>	14.85 pounds
<b>Capacity</b>	9 Inches (fits 9" pizza)
<b>Wattage</b>	1400 watts

## Warranty and Support

---

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. You can also visit the [BLACK+DECKER Store on Amazon](#) for additional product information and support resources.