

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony DVP-SR200P/B DVD Player Instruction Manual](#)

## Sony DVP-SR200/B

# Sony DVP-SR200P/B DVD Player Instruction Manual

### INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Sony DVP-SR200P/B DVD Player. Please read these instructions thoroughly before using the unit to ensure optimal performance and longevity. The Sony DVP-SR200P/B is a versatile DVD player designed to deliver quality picture and sound. It supports playback of DVDs, music CDs, and MP3s from CD-ROM discs. Key features include:

- **Progressive Output (480p):** For enhanced picture quality on compatible displays.
- **Precision Drive 3 System:** Designed to compensate for flaws in DVD discs, allowing playback of some damaged or warped media.
- **Multi-Brand TV Remote Control:** The included remote can control basic functions of various TV brands.
- **12-Bit Video DAC with 108MHz Processing:** For high-quality video signal conversion.



Figure 1: Angled front view of the Sony DVP-SR200P/B DVD Player.

### SETUP

Follow these steps to connect your DVD player to your television and audio system.

#### 1. Connecting to a Television

The DVP-SR200P/B offers several video output options. Choose the connection type that provides the best quality supported by your television.

- **Component Video (Y/Pb/Pr):** For the best progressive scan picture quality. Connect the green (Y), blue (Pb), and red (Pr) jacks from the DVD player to the corresponding input jacks on your TV.
- **Composite Video:** A standard video connection. Connect the yellow video jack from the DVD player to the yellow video input on your TV.

## 2. Connecting to an Audio System

For audio, you have the following options:

- **RCA Audio Output:** Connect the red (right) and white (left) audio jacks from the DVD player to the corresponding audio input jacks on your TV or stereo receiver.
- **Coaxial Digital Audio Output:** For connecting to a home theater receiver with a coaxial digital audio input, providing multi-channel sound.



Figure 2: Rear panel connections, including video and audio outputs.

## 3. Power Connection

After all audio and video connections are made, plug the AC power cord of the DVD player into a wall outlet (AC 120V, 60Hz).

## 4. Remote Control Battery Installation

Insert two AA batteries (included) into the remote control, ensuring correct polarity (+/-) as indicated inside the battery compartment.



Figure 3: The included remote control for the DVD player.

## OPERATING INSTRUCTIONS

This section covers the basic operation of your DVD player.

### 1. Turning On/Off

Press the **POWER** button on the front panel or the remote control to turn the unit on or off.

### 2. Disc Playback

1. Press the **OPEN/CLOSE** button on the front panel or remote to open the disc tray.
2. Place a DVD, CD, or MP3 CD-ROM disc onto the tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray.

4. Playback will usually start automatically. If not, press the **PLAY** button on the remote control.



Figure 4: Front panel of the DVD player, showing the disc tray and control buttons.

### 3. Basic Remote Control Functions

- **PLAY** (▶): Starts or resumes playback.
- **PAUSE** (⏸): Pauses playback. Press again to resume.
- **STOP** (⏹): Stops playback.
- **FAST/SLOW PLAY** (⏩/⏪): Fast forward/rewind.
- **PREV** (⏮)/**NEXT** (⏭): Skips to the previous or next track/chapter.
- **TOP MENU/MENU**: Accesses the disc's top menu or title menu.
- **RETURN**: Returns to the previous screen or menu.
- **DISPLAY**: Shows playback information on screen.
- **AUDIO**: Changes the audio track.
- **SUBTITLE**: Changes the subtitle track.

The remote control also features navigation buttons (up, down, left, right, ENTER) for menu selection and a multi-brand TV control section (TV INPUT, TV POWER, VOL +/-) for basic television functions.

## MAINTENANCE

Proper care ensures the longevity and optimal performance of your DVD player.

### 1. Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene, as these may damage the finish.

### 2. Disc Handling

- Always hold discs by their edges to avoid fingerprints on the playing surface.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases away from direct sunlight and heat.
- Avoid writing on the label side of discs with ballpoint pens or other hard-tipped instruments.

## TROUBLESHOOTING

If you encounter problems with your DVD player, refer to this section for possible solutions.

## No Power

- Ensure the power cord is securely plugged into both the DVD player and a working wall outlet.
- Check if the power outlet is functional by plugging in another device.

## No Picture or Poor Picture Quality

- Verify that the video cables (Component or Composite) are correctly connected to both the DVD player and the TV.
- Ensure your TV is set to the correct input source (e.g., Video 1, Component, AV).
- Check the disc for scratches or dirt. Clean if necessary.
- If using Component Video, ensure all three cables (Y, Pb, Pr) are connected to their respective color-coded inputs.

## No Sound or Poor Sound Quality

- Confirm that the audio cables (RCA or Coaxial Digital) are properly connected to both the DVD player and your TV or audio receiver.
- Check the volume level on your TV or audio receiver.
- Ensure your TV or audio receiver is set to the correct audio input source.
- If using a digital audio connection, verify the audio settings on your receiver.

## Disc Does Not Play or "No Disc" Error

- Ensure the disc is inserted correctly with the label side facing up.
- Check if the disc is clean and free from scratches or damage. The Precision Drive 3 system can help with minor flaws, but severely damaged discs may not play.
- Verify that the disc type (DVD, CD, MP3 CD-ROM) is supported by the player.
- The player is Region 1 DVD compatible. Ensure your DVD disc matches this region code.

## SPECIFICATIONS

<b>Brand Name</b>	Sony
<b>Model Number</b>	DVP-SR200/B
<b>Item Weight</b>	2.24 pounds (1.02 kg)
<b>Product Dimensions (W x H x D)</b>	12.6 x 1.26 x 8.23 inches (320 x 32 x 209 mm)
<b>Power Requirements</b>	AC 120V, 60Hz
<b>Media Type Supported</b>	DVD, CD, CD-R, CD-RW, MP3 (on CD-ROM)
<b>Video Output</b>	Component Video (Y/Pb/Pr), Composite Video
<b>Audio Output</b>	RCA Stereo Audio, Coaxial Digital Audio
<b>Video DAC</b>	12-Bit, 108MHz
<b>Special Features</b>	Progressive Scan, Precision Drive 3 System, Multi-Brand TV Remote Control
<b>Region Code</b>	DVD Region 1
<b>Remote Control Batteries</b>	2 AA batteries (included)

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase. Sony provides customer support for product inquiries, technical assistance, and service requests.

For further assistance, please visit the official Sony support website or contact their customer service directly. You may find helpful resources and contact information at the [Sony Store on Amazon](#) or the main Sony support portal.