

[Manuals.plus](#) /

› [Dahle](#) /

› DAHLE Durley 155 Pencil Sharpener with Clamp Instruction Manual

Dahle 155

DAHLE Durley 155 Pencil Sharpener with Clamp

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your DAHLE Durley 155 Pencil Sharpener. Please read all instructions carefully before operation to ensure optimal performance and longevity of your device.



Figure 1: Front view of the DAHLE Durley 155 Pencil Sharpener, showcasing its compact design, pencil insertion hole, and transparent shavings tray.

PRODUCT FEATURES

- **High-quality plastic body:** Ensures durability and a lightweight design.
- **Transparent shavings tray:** Allows for easy monitoring of the fill level, indicating when to empty.
- **Adjustable pencil point:** Provides flexibility to achieve desired sharpness, from blunt to fine.
- **Automatic cutting stop:** Prevents over-sharpening by disengaging the blade once the optimal point is reached.
- **Integrated clamp:** Secures the sharpener firmly to a desk or table for stable operation.
- **Wide pencil compatibility:** Accommodates pencils with diameters ranging from 8 mm to 12 mm.

SETUP

1. Unpacking

Carefully remove the pencil sharpener and its components from the packaging. Verify that all parts, including the sharpener unit and the desk clamp, are present and undamaged.

2. Attaching the Desk Clamp

1. Locate the clamp attachment point on the underside of the sharpener unit.
2. Insert the metal arm of the clamp into the designated slot until it is seated firmly.
3. Position the sharpener on the edge of a stable surface, such as a desk or table.
4. Tighten the clamp screw by turning it clockwise until the sharpener is securely fastened and does not move during operation.



Figure 2: The sharpener securely clamped to a desk, demonstrating the reliable desk fastening mechanism for stable use.

1. Adjusting Pencil Point (Optional)

The DAHLE 155 allows for adjustment of the pencil point. To select your desired sharpness, rotate the adjustment dial located near the pencil insertion hole. Typically, rotating towards a higher number or specific icon will yield a finer point, while rotating towards a lower number or different icon will result in a blunter point.

2. Sharpening a Pencil

1. Gently insert the pencil into the sharpening hole until it is firmly gripped by the internal mechanism. Ensure the pencil is inserted straight and without excessive force.
2. Begin turning the crank handle clockwise. Apply steady, even pressure.
3. Continue turning the handle. The sharpener features an automatic cutting stop; the handle will begin to turn freely once the pencil has reached the desired sharpness, preventing over-sharpening.
4. Once the handle turns freely, carefully remove the sharpened pencil.

Professionelle Spitzergebnisse

Hochwertiger Stahlfräser

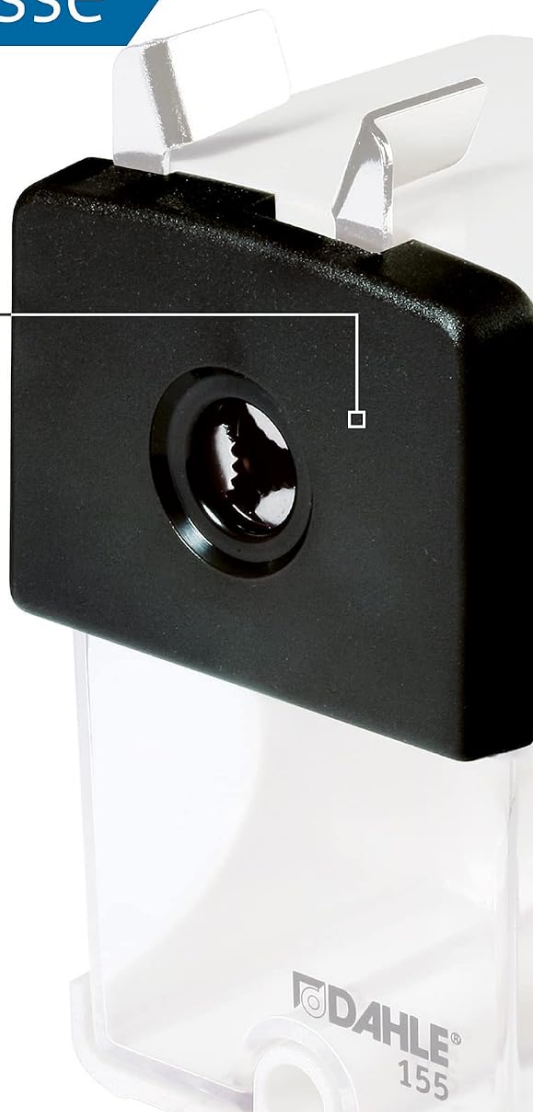


Figure 3: Close-up view of the high-quality steel cutter, designed to deliver professional and precise sharpening results.

1. Emptying the Shavings Tray

The DAHLE 155 features a transparent shavings tray, allowing you to easily monitor its contents and determine when it needs emptying. To empty the tray:

1. Carefully pull out the transparent shavings tray from the front of the sharpener.
2. Dispose of the collected pencil shavings in a waste bin.
3. Slide the tray back into its position until it clicks securely into place.

Seltenes Ausleeren

Großer Auffangbehälter



Figure 4: The large collection container for shavings, illustrating the ease of removal for emptying.

2. Cleaning

Wipe the exterior surfaces of the sharpener with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the plastic body or internal mechanisms. Avoid getting water inside the sharpening mechanism.

Problem	Possible Cause	Solution
Pencil not sharpening or sharpening unevenly.	Pencil not inserted correctly; blade dull or jammed; shavings tray full.	Ensure pencil is inserted firmly and straight. Empty shavings tray. If the problem persists, the internal blade may be worn and require professional servicing (the blade is not user-replaceable).
Crank handle is stiff or difficult to turn.	Shavings buildup in mechanism; pencil inserted too forcefully.	Empty the shavings tray. Ensure the pencil is not forced into the sharpener. Turn the handle gently and consistently.
Sharpener slides on desk during use.	Clamp not tightened sufficiently or surface is unsuitable.	Re-tighten the desk clamp securely to a stable, non-slippery surface. Ensure the clamp is fully engaged.

SPECIFICATIONS

- **Model:** DAHLE Durley 155
- **Item Model Number:** 00155-20094
- **Dimensions (L x W x H):** 6.22 x 4.13 x 2.56 inches (approx. 158 x 105 x 65 mm)
- **Item Weight:** 3.52 ounces (approx. 100 grams)
- **Material:** High-quality Plastic Body
- **Color:** Grey
- **Pencil Diameter Compatibility:** 0.3 - 0.5 inch (8 - 12 mm)
- **Key Features:** Adjustable Pencil Point, Automatic Cutting Stop, Transparent Shavings Tray, Integrated Desk Clamp
- **Power Source:** Hand Powered

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please refer to the official Dahle website or contact their customer service department. It is recommended to retain your purchase receipt as proof of purchase for any warranty claims.

Dahle Official Website: www.dahle.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question