

Oster 004722-000-000

Oster 6-Cup Rice Cooker with Steamer Instruction Manual

Model: 004722-000-000

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plug, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to persons or property.

PRODUCT OVERVIEW

The Oster 6-Cup Rice Cooker with Steamer is designed for convenient preparation of rice and steamed foods. It features one-touch operation, an automatic keep-warm function, and auto shut-off for ease of use.



Image: The Oster 6-Cup Rice Cooker with Steamer, featuring a red exterior, a clear glass lid, and a control switch on the front.

Components

- Heating Base
- Removable Non-Stick Inner Pot

- Tempered Glass Lid with Steam Vent
- Steaming Tray
- Measuring Cup
- Serving Ladle
- Power Cord



Image: A view of the removable components: the black non-stick inner pot, the silver steaming tray, and the tempered glass lid with a handle.

BEFORE FIRST USE

1. Carefully unpack the rice cooker and remove all packaging materials.
2. Wash the inner pot, steamer tray, glass lid, measuring cup, and serving ladle in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.

SETUP

1. Place the rice cooker on a dry, level, heat-resistant surface, away from walls or cabinets to ensure proper ventilation.
2. Ensure the power cord is not obstructed and is within reach of a suitable electrical outlet.

OPERATING INSTRUCTIONS

Cooking Rice

The included measuring cup is designed for rice cooker use and is approximately 3/4 of a standard US cup.

1. Measure the desired amount of rice using the provided measuring cup. For best results, rinse the rice under cold water until the water runs clear.
2. Place the rinsed rice into the non-stick inner pot.
3. Add the appropriate amount of water. A general guideline is 1.5 to 2 measuring cups of water for every 1 measuring cup of rice. Adjust water levels based on rice type and desired consistency. The inner pot may have water level markings for guidance.
4. Place the inner pot into the heating base, ensuring it is seated correctly.
5. Cover the inner pot with the tempered glass lid. Ensure the steam vent is clear.
6. Plug the power cord into a 100V AC electrical outlet.
7. Press the control switch down to the "COOK" position. The cook indicator light will illuminate.
8. Once the rice is cooked, the cooker will automatically switch to the "WARM" setting, and the warm indicator light will illuminate.
9. Allow the rice to rest on "WARM" for 5-10 minutes before serving. This allows for even moisture distribution.
10. Unplug the cooker and use the serving ladle to fluff and serve the rice.

Steaming Food

The steaming tray allows you to steam vegetables, fish, or other foods while rice cooks below, or independently.

1. Add water to the inner pot. Ensure the water level is below the bottom of the steaming tray when placed inside.
2. Place the food to be steamed into the steaming tray. Do not overcrowd the tray to allow for proper steam circulation.
3. Place the steaming tray into the inner pot.
4. Cover with the tempered glass lid.
5. Plug the power cord into a 100V AC electrical outlet.
6. Press the control switch down to the "COOK" position.
7. Monitor the food for desired doneness. Steaming times vary based on the type and quantity of food.

8. Once steaming is complete, carefully remove the lid (steam will be hot) and use heat-resistant gloves to remove the steaming tray.
9. Unplug the cooker.

Keep Warm Function

The rice cooker automatically switches to the "WARM" function once the cooking cycle is complete. This feature keeps your food at an optimal serving temperature. It is recommended not to leave food on the "WARM" setting for more than a few hours to maintain food quality and safety.

CARE AND CLEANING

Proper care and cleaning will extend the life of your rice cooker.

1. Always unplug the rice cooker from the electrical outlet and allow it to cool completely before cleaning.
2. The inner pot, steamer tray, glass lid, measuring cup, and serving ladle are dishwasher safe or can be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating of the inner pot.
3. To clean the heating base, wipe the exterior with a damp cloth. Do not immerse the heating base in water or any other liquid.
4. Ensure all parts are thoroughly dry before storing or next use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard or dry	Not enough water; lid not sealed properly.	Add slightly more water next time; ensure lid is securely in place during cooking.
Rice is too soft or mushy	Too much water.	Reduce water slightly next time.
Rice sticks to the bottom of the pot	Insufficient water; non-stick coating wear; rice not rinsed.	Ensure proper water ratio; add a small amount of cooking oil to the water; rinse rice thoroughly before cooking.
Cooker does not turn on	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power to the outlet; try a different outlet.
Excessive steam escaping from lid	Lid not seated correctly.	Adjust lid to ensure it is properly seated on the inner pot.

SPECIFICATIONS

- **Model Number:** 004722-000-000
- **Capacity:** 6-cup cooked rice (equivalent to 3-cup uncooked rice using the provided measuring cup)
- **Power:** 500 Watts
- **Voltage:** 100 Volts
- **Product Dimensions:** 10"D x 10"W x 10.6"H
- **Item Weight:** 3.4 Pounds
- **Material:** Plastic (housing), Non-stick (inner pot), Tempered Glass (lid)
- **Special Features:** One-touch operation, Automatic Keep-Warm, Auto Shut-Off
- **Included Components:** Heating Base, Inner Pot, Steaming Tray, Glass Lid, Measuring Cup, Serving Ladle, Power Cord

WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product packaging or visit the official Oster website. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, product inquiries, or service, please contact Oster Customer Service. Contact information can typically be found on the product packaging or the official Oster website.

You can visit the Oster Store for more information:[Oster Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question