

## Coby DP-702

# Coby DP702 7-Inch Widescreen Digital Photo Frame User Manual

Model: DP-702

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Coby DP702 7-Inch Widescreen Digital Photo Frame. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.



Image: The Coby DP702 Digital Photo Frame, featuring a woodgrain finish and displaying a vibrant image of a family in a park. The frame is shown at an angle, highlighting its design and the clear display.

## PRODUCT FEATURES

- 7-inch widescreen TFT LCD color display.
- Handsome woodgrain frame design.
- Supports JPEG photo files.
- Plays MP3 and WMA audio files.
- Plays Motion JPEG, MPEG-1, MPEG-2, and MPEG-4 (XviD) video files.
- Photo slideshow mode with optional music playback.
- Integrated calendar and clock with alarm timer.
- Multiple card slots: SD, MMC, MS, xD, and CF.
- Full-size USB port for flash memory drives.
- Built-in speaker.
- Full-function remote control included.
- Wall-mountable design with detachable stand.

## PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present:

- Coby DP702 Digital Photo Frame
- AC Power Adapter
- Remote Control
- Detachable Stand
- User Manual (this document)

## SETUP GUIDE

---

### 1. Attaching the Stand

Locate the detachable stand. Align the stand with the slot on the back of the digital photo frame. Gently push the stand into place until it clicks securely. Ensure the frame is stable on a flat surface.

### 2. Power Connection

Connect the AC power adapter to the DC IN port on the back of the frame. Plug the other end of the adapter into a standard electrical outlet. The frame should power on automatically or enter standby mode.

### 3. Inserting Memory Cards or USB Drives

The Coby DP702 supports various memory card types (SD, MMC, MS, xD, CF) and USB flash drives. Insert your desired memory card into the corresponding slot or plug your USB drive into the USB port. Ensure the card/drive is inserted correctly and fully.

**Note:** The device does not have internal memory. A memory card or USB drive is required to display photos, play music, or videos.

## OPERATING INSTRUCTIONS

---

### Basic Navigation

Use the buttons on the back of the frame or the included remote control to navigate the menus. The primary navigation buttons typically include: MENU, ENTER, UP, DOWN, LEFT, RIGHT.

- **MENU:** Access the main menu or return to the previous screen.
- **ENTER:** Confirm a selection or play a file.
- **UP/DOWN/LEFT/RIGHT:** Navigate through menu options or files.

### Viewing Photos

Once a memory card or USB drive with JPEG images is inserted, the frame will typically start a slideshow automatically. You can also manually select the "Photo" option from the main menu.

- Press **LEFT/RIGHT** to move between photos during manual viewing.
- Press **PLAY/PAUSE** (on remote) to start or pause the slideshow.
- Access photo settings (e.g., slideshow interval, transition effects) through the MENU.

### Playing Music and Videos

Select "Music" or "Video" from the main menu. Navigate to your desired file and press **ENTER** to play. The frame supports MP3/WMA for music and Motion JPEG, MPEG-1, MPEG-2, MPEG-4 (XviD) for video.

- Use **VOLUME +/-** on the remote to adjust audio levels.
- Use **FF/REW** buttons for fast forward/rewind.

Calendar and Clock

Select "Calendar" from the main menu to view the current date and time. You can set the time and alarm through the system settings.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. Do not use liquid cleaners or abrasive materials, as they may damage the display.
- **Cleaning the Frame:** Wipe the woodgrain frame with a dry or slightly damp cloth. Avoid excessive moisture.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and the electrical outlet. Try a different electrical outlet.
No images displayed.	Verify that a memory card or USB drive is inserted correctly. Ensure the files on the card/drive are in a supported format (JPEG for photos). Check if the memory card/USB drive is corrupted or empty.
Remote control not working.	Check the battery in the remote control and replace if necessary. Ensure there are no obstructions between the remote and the frame's IR sensor. Point the remote directly at the frame.
Poor picture quality.	Ensure the original image files are of good quality and resolution. Adjust brightness and contrast settings in the frame's menu.

SPECIFICATIONS

Feature	Detail
Model Number	DP-702
Screen Size	7 Inches
Display Type	TFT LCD Color Display
Supported Photo Formats	JPEG

Feature	Detail
Supported Audio Formats	MP3, WMA
Supported Video Formats	Motion JPEG, MPEG-1, MPEG-2, MPEG-4 (XviD)
Memory Card Slots	SD, MMC, MS, xD, CF
USB Port	Full-size USB for flash memory drives
Power Source	Corded Electric (AC Adapter)
Dimensions (L x W x H)	6.65 x 9.25 x 1.59 inches
Item Weight	0.01 ounces

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Coby website. Keep your purchase receipt as proof of purchase for warranty claims.

**Legal Disclaimer:** This product is sold as is and works in perfect condition. No SD card is included. It may come in a different box than originally packaged.