

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DeLonghi](#) /

› [DeLonghi EN670.B Nespresso Lattissima Espresso Maker User Manual](#)

DeLonghi EN670.B

DeLonghi EN670.B Nespresso Lattissima Espresso Maker User Manual

Model: EN670.B

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your DeLonghi EN670.B Nespresso Lattissima Single-Serve Espresso Maker. Please read this manual thoroughly before using the appliance and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your DeLonghi EN670.B Nespresso Lattissima machine.



Figure 1: DeLonghi EN670.B Nespresso Lattissima Espresso Maker. This image displays the main unit of the espresso maker, highlighting its compact design and control panel without the milk frother attached.

Key Components:

- **Water Tank:** Removable tank for fresh water.
- **Nespresso Capsule Slot:** For inserting coffee capsules.

- **Coffee Outlet:** Where the brewed coffee dispenses.
- **Drip Tray:** Collects excess liquid and accommodates various cup sizes.
- **Used Capsule Container:** Stores ejected used capsules.
- **Control Panel:** Illuminated buttons for various drink selections (Espresso, Lungo, Cappuccino, Latte Macchiato) and power.
- **Milk Container:** Detachable unit for frothing and dispensing milk.
- **Milk Frother Spout:** Dispenses frothed milk.

SETUP AND FIRST USE

1. Unpacking

Carefully remove all packaging materials and ensure all components are present. Place the machine on a stable, flat surface away from water sources and heat.

2. Rinsing the Water Tank

Before first use, rinse the water tank with fresh drinking water. Fill the tank with fresh water up to the MAX level and place it back into the machine.

3. Priming the Machine

1. Plug the machine into a grounded electrical outlet.
2. Press the Power button to turn on the machine. The buttons will flash as the machine heats up.
3. Once the buttons are steady, place a container (at least 0.5 liters) under the coffee outlet.
4. Press the Lungo button. The machine will dispense hot water. Repeat this process 2-3 times to thoroughly rinse the internal circuits.

4. Attaching the Milk Container (Optional)

If you plan to make milk-based beverages, attach the milk container. Ensure the milk frother spout is correctly positioned. The milk container can be filled with fresh cold milk.



Figure 2: DeLonghi EN670.B Nespresso Lattissima with the milk container attached. This view shows the milk container securely connected to the side of the machine, ready for milk-based beverage preparation, with a cup of latte positioned below the spout.

OPERATING INSTRUCTIONS

1. Making Espresso or Lungo

1. Ensure the water tank is filled.
2. Lift the lever and insert a Nespresso capsule into the slot. Close the lever.
3. Place a cup under the coffee outlet.
4. Press either the **Espresso** button (for a short coffee) or the **Lungo** button (for a longer coffee). The machine will start brewing and stop automatically.
5. After brewing, lift the lever to eject the used capsule into the internal container.

2. Making Cappuccino or Latte Macchiato

1. Fill the milk container with fresh, cold milk up to the desired level. Attach it to the machine.
2. Lift the lever and insert a Nespresso capsule. Close the lever.
3. Adjust the drip tray to accommodate your cup.
4. Place your cup under the milk frother spout and coffee outlet.
5. Press either the **Cappuccino** button or the **Latte Macchiato** button. The machine will first froth and dispense milk, then brew the coffee.
6. After brewing, lift the lever to eject the used capsule.



Figure 3: DeLonghi EN670.B Nespresso Lattissima in operation, preparing a milk-based beverage. This image shows a tall glass filled with a layered latte macchiato, demonstrating the machine's capability to create specialty coffee drinks with frothed milk.

3. Programming Cup Sizes

You can customize the volume of your Espresso, Lungo, Cappuccino, and Latte Macchiato:

- **For Espresso/Lungo:** Insert a capsule and place a cup. Press and hold the desired button (Espresso or Lungo). Release the button when the desired volume is reached. The machine will remember this setting for future use.
- **For Cappuccino/Latte Macchiato:** Fill the milk container and insert a capsule. Place a cup. Press and hold the desired button. The machine will first dispense milk. Release the button when the desired milk volume is reached. The machine will then start brewing coffee. Press and hold the button again to program the coffee volume. Release when desired coffee volume is reached.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your machine.

1. Daily Cleaning

- **Drip Tray and Used Capsule Container:** Empty and rinse daily.
- **Milk Container:** After each milk-based drink, press the "Clean" button on the milk container to rinse the milk system. For thorough cleaning, disassemble the milk container components and wash them with warm soapy water or in a dishwasher.
- **Machine Exterior:** Wipe with a damp cloth. Do not use abrasive cleaners or immerse the machine in water.

2. Descaling

The machine has an indicator light that will illuminate when descaling is required. Descaling removes mineral deposits that can affect machine performance and coffee taste. Use a Nespresso-approved descaling solution and follow the instructions provided with the descaler or in the full product manual.

1. Empty the drip tray and used capsule container.
2. Fill the water tank with the descaling solution as per the descaler's instructions.
3. Place a large container (at least 1 liter) under the coffee outlet.
4. Follow the specific descaling procedure for your model, usually involving pressing and holding certain buttons.
5. After the descaling cycle, rinse the machine by running several cycles with fresh water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee flow.	Water tank empty, machine not primed, or blocked coffee outlet.	Fill water tank, prime the machine, or clean the coffee outlet.
Coffee is cold.	Cups not pre-warmed, or machine needs descaling.	Pre-warm cups with hot water, or descale the machine.
Milk not frothing correctly.	Milk container dirty, milk type unsuitable, or milk too warm.	Clean milk container thoroughly, use fresh cold milk (preferably semi-skimmed), ensure milk container components are correctly assembled.

Problem	Possible Cause	Solution
Machine leaking.	Water tank not correctly inserted, or drip tray full.	Ensure water tank is firmly in place, empty drip tray.
Descaling light on.	Machine requires descaling.	Perform the descaling procedure as outlined in the maintenance section.

If the problem persists after attempting these solutions, please contact DeLonghi customer support.

SPECIFICATIONS

Brand: DeLonghi

Model: EN670.B

Type: Single-Serve Espresso Maker

Capacity: 1.2 Liters (Water Tank)

Power: 1300 watts

Voltage: 230 Volts

Material: Plastic

Dimensions (LxWxH): 34.29 x 20.32 x 25.4 cm

Weight: 0.01 Ounces (approximately 0.28 grams). *Note: This weight appears unusually low for an espresso machine and may be a data entry error.*

Special Features: Patented "Single Touch" hot milk system, Cup Warmer, Illuminated controls.

Note: Specifications are subject to change without notice.


WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official DeLonghi website. For technical support, spare parts, or service, please contact DeLonghi customer service in your region. Keep your proof of purchase for warranty claims.

Online Resources: www.delonghi.com

Related Documents - EN670.B

	<p>DeLonghi Nespresso CitiZ Coffee Machine User Manual</p> <p>Comprehensive user manual for the DeLonghi Nespresso CitiZ coffee machine, providing detailed instructions on setup, operation, maintenance, cleaning, descaling, and troubleshooting.</p>
	<p>DeLonghi Nespresso Le Cube Coffee Machine User Manual</p> <p>Comprehensive user manual for the DeLonghi Nespresso Le Cube coffee machine, covering safety precautions, operation, preparation, cleaning, descaling, troubleshooting, and specifications.</p>

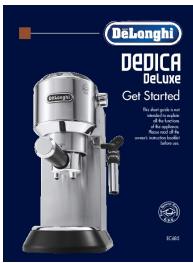

[DeLonghi Dedica Deluxe EC685 Espresso Machine: Get Started Guide](#)

Quick start guide for the DeLonghi Dedica Deluxe EC685 espresso machine. Learn how to set up, brew espresso, cappuccinos, and lattes, and perform basic maintenance.



[DeLonghi EAM3500 Automatic Coffee Maker User Manual](#)

Comprehensive user manual for the DeLonghi EAM3500 automatic coffee maker, detailing setup, operation, maintenance, and troubleshooting for optimal coffee brewing and beverage preparation.



[DeLonghi Dedica Maestro Plus EC950 Coffee Maker User Manual](#)

Comprehensive instructions for use, maintenance, and troubleshooting of the DeLonghi Dedica Maestro Plus EC950 coffee maker. Learn how to make espresso, steam milk, and customize settings for the perfect coffee experience.



[DeLonghi Magnifica Plus ECAM32070SB Quick Start Guide](#)

A quick start guide for the DeLonghi Magnifica Plus ECAM32070SB automatic espresso machine, covering unboxing, initial setup, operation, maintenance, and accessories.