Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > INLAND /
- > INLAND 2.4GHZ Wireless Keyboard/Mouse Combo User Manual

INLAND 70120

INLAND 2.4GHZ Wireless Keyboard/Mouse Combo User Manual

Model: 70120

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your INLAND 2.4GHZ Wireless Keyboard/Mouse Combo. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



Figure 1: INLAND 2.4GHZ Wireless Keyboard/Mouse Combo components.

PACKAGE CONTENTS

- INLAND Wireless Keyboard
- Wireless Mouse
- USB Receiver (typically stored inside the mouse or keyboard battery compartment)

· User Manual (this document)

SETUP

1. Battery Installation

The keyboard and mouse require batteries for operation. Locate the battery compartments on the underside of both devices. Insert the required batteries, ensuring correct polarity (+/-). Close the battery covers securely.

2. Connecting the USB Receiver

Locate the 2.4 GHz USB receiver. This small dongle is often stored within the mouse's battery compartment for safekeeping. Plug the USB receiver into an available USB port on your computer. The system should automatically detect and install the necessary drivers.

3. Powering On

Ensure both the keyboard and mouse have their power switches in the "ON" position. These switches are typically located on the underside of each device. The devices should connect to the receiver automatically.

OPERATING INSTRUCTIONS

Keyboard Functions

The keyboard features 103 keys and supports multi-language input. It includes standard alphanumeric keys, function keys (F1-F12), a numeric keypad, and navigation keys.

Internet Hotkeys

The keyboard is equipped with nine dedicated internet hotkeys for quick access to common web functions. Refer to the key labels for specific functions such as home, email, search, etc.

System Hotkeys

Two system hotkeys are provided for convenient control over system functions. These may include media playback controls or volume adjustments, depending on the specific model.

Mouse Functions

The mouse features standard left and right click buttons, a scroll wheel (which also functions as a middle click button), and dedicated back and forward buttons for web browsing or file navigation.

MAINTENANCE

Cleaning

To clean the keyboard and mouse, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the devices. Avoid abrasive cleaners or solvents.

Battery Replacement

Replace batteries when performance degrades or devices become unresponsive. Always use new batteries of the specified type. Dispose of old batteries according to local regulations.

Storage

When storing the combo for extended periods, remove the batteries to prevent leakage. Store in a cool, dry place away

from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low batteries; USB receiver not connected; Devices out of range; Interference.	Replace batteries; Ensure USB receiver is securely plugged in; Move devices closer to the receiver; Avoid placing receiver near other wireless devices.
Lag or intermittent connection	Interference; Obstructions; USB port issue.	Move receiver to a different USB port, preferably on the front of the computer; Ensure clear line of sight between devices and receiver; Reduce other 2.4GHz wireless activity.
Mouse cursor erratic	Dirty optical sensor; Uneven surface.	Clean the optical sensor on the underside of the mouse with a soft cloth; Use the mouse on a smooth, opaque surface or a mouse pad.

SPECIFICATIONS

Feature	Detail
Brand	INLAND
Model Number	70120
Connectivity Technology	2.4 GHz Radio Frequency Wireless
Compatible Devices	Personal Computer (PC), Mac
Keyboard Key Count	103 Keys
Keyboard Hotkeys	9 Internet Hotkeys, 2 System Hotkeys
Mouse Buttons	Left, Right, Middle (Scroll Wheel), Back, Forward
Color	Black
Product Dimensions	6.5 x 0.69 x 17.72 inches
Item Weight	0.01 ounces
First Available Date	August 21, 2008

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact INLAND customer service. Specific warranty terms may vary by region and purchase date.

Note: As per available information, direct contact details for support are not provided in this manual. Please check the manufacturer's official website or product packaging for the most current support information.

Related Documents - 70120



Inland 70119 2.4GHZ Wireless Keyboard and Mouse Combo Quick Setup Guide

Get your Inland 70119 2.4GHZ wireless keyboard and mouse combo up and running quickly with this easy-to-follow setup guide. Learn how to insert batteries and connect the USB receiver.

#inland USER MANUAL

Inland MK PRO V3 RGB Wireless Mechanical Keyboard - Time Calibration Guide

Instructions for recalibrating the time on the Inland MK PRO V3 RGB Wireless Mechanical Keyboard, including tool download information from Micro Center.



Inland ThunderSound PCI 5.1 Sound Card - Product Overview

Detailed product information for the Inland ThunderSound PCI 5.1 Sound Card, featuring 6-channel audio, Dolby Digital AC-3 support, and Microsoft WHQL certification.

Minland USER MANUAL

Inland MK PRO V2 Max HE Keyboard: Setup and Calibration Guide

Instructions for setting up and calibrating the Inland MK PRO V2 Max HE Gaming Keyboard, including driver installation and stroke calibration procedures.

∉inland GAMING MK PRO 75% USER MANUAL

Inland KB83 Gaming MK Pro 75% Wired Mechanical Keyboard User Manual

Comprehensive user manual for the Inland KB83 Gaming MK Pro 75% wired mechanical keyboard, detailing features, customization, multimedia functions, and troubleshooting.



Inland MK PRO V2 Max Keyboard: Quantum Mechanical Kit Guide

Learn how to personalize your Inland MK PRO V2 Max RGB Wireless Tri-Mode Magnetic Keyboard using the Quantum Mechanical Kit web app. Features include key settings, lighting customization, macro recording, and sharing options.