



Manuals.plus /

› INLAND /

› INLAND Pro Sound 2000 Computer Speakers User Manual

INLAND 88034

INLAND Pro Sound 2000 Computer Speakers User Manual

Model: 88034

INTRODUCTION

Thank you for choosing the INLAND Pro Sound 2000 Computer Speakers. This manual provides essential information for the proper setup, operation, and maintenance of your new speakers. Please read it thoroughly before use to ensure optimal performance and longevity of the product.



Image: Front view of the INLAND Pro Sound 2000 Computer Speakers, showcasing their compact design.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- INLAND Pro Sound 2000 Computer Speakers (Set of 2)
- Integrated 3.5mm Stereo Audio Cable
- Integrated Power Cable
- User Manual (this document)

PRODUCT FEATURES

The INLAND Pro Sound 2000 Computer Speakers are designed to deliver clear, dynamic sound for your computing and

portable audio needs. Key features include:

- **100 Watts (PMPO) Power Output:** Provides robust audio performance.
- **Cloth Speaker Grill:** Enhances aesthetic appeal.
- **Front-Side Headphone Jack:** Convenient for private listening.
- **Power Indicator Switch:** Clearly shows power status.
- **Magnetic Shielding:** Protects monitors, drives, and disks from interference.
- **Wide Compatibility:** Works with all PC sound cards and portable music devices (e.g., CD players, portable radios).

SETUP INSTRUCTIONS

1. **Placement:** Position the two speakers on either side of your computer monitor or audio source for optimal stereo separation. Ensure they are on a stable, flat surface.
2. **Connect Audio Cable:** Locate the integrated 3.5mm audio cable extending from one of the speakers. Plug this cable into the audio output jack (typically green) on your computer's sound card or the headphone jack of your portable music device.
3. **Connect Power:** Plug the integrated power cable into a standard AC power outlet.
4. **Power On:** Locate the power switch on one of the speakers (usually the right speaker). Flip the switch to the "ON" position. The power indicator light should illuminate.
5. **Adjust Volume:** Start with the volume knob on the speaker set to a low level. Play audio from your device and gradually increase the volume to a comfortable listening level.

OPERATING INSTRUCTIONS

- **Power On/Off:** Use the power switch to turn the speakers on or off.
- **Volume Control:** Rotate the volume knob (typically on the front of the right speaker) clockwise to increase volume and counter-clockwise to decrease volume.
- **Headphone Use:** To listen privately, plug your headphones into the front-side headphone jack. This will typically mute the speakers automatically. Unplugging the headphones will restore audio to the speakers.
- **Audio Source:** Ensure your computer or portable device's audio output is active and its volume is adjusted appropriately.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker surfaces. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.
- **Ventilation:** Ensure the speakers are placed in a well-ventilated area to prevent overheating. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, store the speakers in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the audio and power cables excessively to prevent internal damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speakers.	Speakers not powered on. Volume too low. Audio cable disconnected. Headphones plugged in. Audio source issue.	Ensure power switch is ON and indicator light is lit. Increase speaker volume. Check 3.5mm audio cable connection to both speakers and audio source. Unplug headphones from the speaker's jack. Verify audio output settings and volume on your computer/device.
Distorted or poor sound quality.	Volume too high. Loose cable connection. Audio source quality.	Reduce speaker volume. Ensure all cables are securely connected. Test with a different audio source or file.
Buzzing or humming noise.	Electrical interference. Ground loop issue.	Move speakers away from other electronic devices. Try plugging the speakers into a different power outlet.

SPECIFICATIONS

Model Number	88034
Brand	INLAND
Speaker Type	Surround (Compact Stereo Speakers)
Connectivity Technology	Wired
Speaker Maximum Output Power	100 Watts (PMPO)
Audio Output Mode	Stereo
Item Dimensions (D x W x H)	8"D x 3"W x 9"H
Item Weight	1.7 Pounds
Power Source	Corded Electric
Color	Black
Additional Features	Magnetic Shielding, Headphone Jack, Power On/Off Switch

WARRANTY AND SUPPORT

The INLAND Pro Sound 2000 Computer Speakers are backed by a **Limited One-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims or technical support, please contact your retailer or the manufacturer directly. Please retain your proof of purchase for warranty service.

Note: The warranty does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.



