

## Rowenta IS9100U1

# Rowenta IS9100U1 Precision Valet Full Size Garment Steamer User Manual

Model: IS9100U1 | Brand: Rowenta

## 1. INTRODUCTION

---

Thank you for choosing the Rowenta IS9100U1 Precision Valet Full Size Garment Steamer. This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Rowenta IS9100U1 is designed to quickly and effectively remove wrinkles and refresh fabrics, offering a convenient alternative to traditional ironing. Its powerful steam output and user-friendly features make garment care effortless.





Figure 1.1: The Rowenta IS9100U1 Precision Valet Full Size Garment Steamer in its upright position.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

**WARNING:** To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions carefully before using the appliance.

- Use only clean tap water in the water tank. Do not add perfumes, vinegar, starch, descaling agents, or other chemicals, as this may damage the appliance or cause spitting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Always unplug the steamer from the electrical outlet when filling or emptying the water tank, when cleaning, and when the appliance is not in use.
- Keep steam away from hands, face, and body. Steam is extremely hot and can cause severe burns.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged. Contact customer service for repair.
- Close supervision is necessary when any appliance is used by or near children or incapacitated individuals.
- Place the steamer on a stable, level, heat-resistant surface during use.
- Ensure the power cord is not tangled or in contact with hot surfaces.

### 3. PACKAGE CONTENTS

---

Carefully unpack your Rowenta IS9100U1 Garment Steamer and ensure all components are present and in good condition. The package should include:

- Main Steamer Unit with Base
- Telescopic Pole Assembly
- Integrated Hanger and Wand Holder
- Steam Hose with Steam Head
- Removable Water Reservoir
- Fabric Brush Attachment
- Upholstery Brush Attachment
- Lint Brush Attachment
- Crease Attachment
- User Manual (this document)



Figure 3.1: The steamer base with its integrated accessory storage compartment, showing various attachments.

## 4. SETUP AND ASSEMBLY

---

Follow these steps to set up your garment steamer for first use:

1. **Unpack Components:** Remove all components from the packaging.
2. **Assemble Telescopic Pole:** Insert the telescopic pole into the designated slot on the main steamer unit base. Extend the pole to your desired height and secure it.
3. **Attach Hanger and Wand Holder:** Slide the integrated hanger and wand holder onto the top of the telescopic pole.
4. **Connect Steam Hose:** Ensure the steam hose is securely connected to the steam outlet on the main unit.
5. **Fill Water Reservoir:** Remove the water reservoir from the base. Open the cap and fill the reservoir with clean tap water. Do not overfill. Close the cap securely and place the reservoir back into the base.



Figure 4.1: Illustrates the process of filling the removable water reservoir with tap water.

## 5. OPERATING INSTRUCTIONS

---

Using your Rowenta IS9100U1 Garment Steamer is simple and efficient:

1. **Power On:** Plug the steamer into a standard electrical outlet. Press the foot-operated ON/OFF button located on the base of the unit. The indicator light will illuminate.
2. **Heat Up:** The steamer will begin to heat up. It takes approximately 60 seconds to reach operating temperature. You will hear the water heating and see steam begin to emit from the steam head.
3. **Select Steam Output:** Use the variable steam control switch on the base to adjust the steam intensity according to the fabric type.
4. **Prepare Garment:** Hang the garment on the integrated hanger. For best results, gently pull the fabric taut with one hand while steaming with the other.
5. **Steam Garment:** Hold the steam head a few inches away from the fabric and move it up and down over the wrinkles. For stubborn wrinkles, press the steam head gently against the fabric.
6. **Use Attachments:** Select and attach the appropriate brush (fabric, upholstery, lint) or crease attachment to the steam head as needed for different fabrics or tasks.
7. **Power Off:** When finished, press the foot-operated ON/OFF button to turn off the steamer. Unplug the unit from the outlet.



Figure 5.1: Demonstrates the convenient foot-operated on/off switch for easy control.



Figure 5.2: Shows the steam head in use on a garment, utilizing the integrated hanger.

## 6. CARE AND MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your steamer:

- **Empty Water Tank:** After each use, allow the steamer to cool down completely. Remove the water reservoir and empty any remaining water. This prevents mineral buildup.
- **Clean Exterior:** Wipe the exterior of the steamer unit and steam head with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (as needed):** If you notice reduced steam output or spitting, descaling may be necessary. Consult the Rowenta website or customer support for specific descaling instructions for your model, typically involving a water and white vinegar solution.
- **Store Properly:** Retract the telescopic pole for compact storage. Store all attachments in the on-board storage compartment. Store the steamer in a cool, dry place.



Figure 6.1: The steamer unit with the steam hose and head detached, illustrating components that may require cleaning or storage.

## 7. TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty. Steamer not heated up. Mineral buildup (calcification).	Refill water tank. Allow 60 seconds for heating. Perform descaling procedure.
Water spitting from steam head.	Overfilled water tank. Mineral buildup. Steamer not fully heated.	Do not overfill. Perform descaling procedure. Wait for full heat-up.
Steamer not turning on.	Not plugged in. Power outlet issue. Appliance malfunction.	Ensure plug is fully inserted. Test outlet with another appliance. Contact customer service.
Steam head dripping water.	Condensation in hose. Overfilling.	Hold steam head upright to allow condensation to drain back. Do not overfill water tank.

If the problem persists after trying these solutions, please contact Rowenta Customer Service.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Rowenta
Model	IS9100U1
Item Weight	9.16 kg
Product Dimensions	30.5L x 17.8W x 157.5H Centimetres
Colour	Grey
Style	Compact
Wattage	1550 watts
Voltage	120 Volts

Feature	Detail
Heat Time	1 minute
Capacity	1 gallon (water reservoir)
Included Components	Water Reservoir, Fabric Brush, Upholstery Brush, Lint Brush, Crease Attachment
Assembly Required	No (minimal assembly for setup)
Product Benefits	Efficiently removes wrinkles, saves time and money, refreshes clothing and furnishings

## 9. WARRANTY AND CUSTOMER SUPPORT

---

### Warranty Information:

This Rowenta IS9100U1 Garment Steamer comes with a **1 Year Manufacturer's Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair.

### Customer Support:

For technical assistance, warranty claims, or to purchase replacement parts, please contact Rowenta Customer Service. You can find contact information on the official Rowenta website or through your local retailer.

Manufacturer: Rowenta

Place of Business: Scarborough, ON M1V 0E2, CA