

[manuals.plus](#) /› [KODAK](#) /› [KODAK EasyShare M340 Digital Camera User Manual](#)**KODAK M340**

KODAK EasyShare M340 Digital Camera User Manual

Model: M340

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your KODAK EasyShare M340 Digital Camera. Please read this manual thoroughly to ensure proper use and to maximize your camera's performance. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The KODAK EasyShare M340 is a compact digital camera designed for ease of use and high-quality imaging. It features a 10.2-megapixel sensor, a 3x optical zoom lens, and a 2.7-inch LCD screen for clear viewing and navigation.



Figure 1: Front view of the KODAK EasyShare M340 Digital Camera, showcasing the lens and flash.



Figure 2: Rear view of the KODAK EasyShare M340 Digital Camera, displaying the 2.7-inch LCD screen and navigation controls.

3. SETUP AND FIRST USE

3.1. Battery Installation and Charging

Your camera uses a KODAK Li-Ion rechargeable digital camera battery KLIC-7001. Ensure the battery is fully charged before first use.

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the KLIC-7001 battery with the contacts facing the correct direction, as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. Connect the camera to the KODAK USB AC adapter using the provided USB cable for in-camera charging. The charging indicator light will illuminate.
5. Charging is complete when the indicator light turns off.

3.2. Memory Card Insertion

The camera supports SD/SDHC memory cards (not included). It also has up to 16 MB of internal memory for immediate use.

1. Locate the memory card slot, usually near the battery compartment.
2. Insert the SD/SDHC card with the label facing the front of the camera until it clicks into place.
3. To remove, press the card gently until it ejects slightly, then pull it out.

3.3. Powering On/Off

Press the power button located on the top of the camera to turn it on or off. The lens will extend when powered on.

4. BASIC OPERATION

4.1. Taking Photos

The M340 captures 10.2-megapixel images, suitable for prints up to 30 x 40 inches.

1. Turn on the camera.
2. Frame your shot using the 2.7-inch LCD screen.
3. Press the shutter button halfway down to focus. The camera will automatically adjust settings using Smart Capture.
4. Press the shutter button all the way down to take the picture.

4.2. Recording Videos

Record continuous VGA video (640 x 480) or QVGA (320 x 240) at 24 frames per second.

1. Switch to video mode (refer to your camera's mode dial or menu).
2. Press the shutter button to start recording.

3. Press the shutter button again to stop recording.

4.3. Playback

View your captured photos and videos on the 2.7-inch LCD screen.

1. Press the Playback button (often indicated by a triangle icon).
2. Use the navigation buttons to scroll through your images and videos.
3. The camera supports auto picture rotation for correct orientation.

5. ADVANCED FEATURES

5.1. Smart Capture

KODAK's innovative Smart Capture feature automatically adjusts camera settings for optimal pictures in various environments. It includes intelligent scene detection, capture control (exposure, focus, ISO), and image processing for vibrant, crisp details.

5.2. Face Detection and Blur Reduction

For clear portraits, Face Detection locates faces and adjusts settings. Blur Reduction minimizes camera shake and subject movement for sharper images.

5.3. High ISO

Capture details in low light or fast-action situations with high ISO settings (up to 1600).

5.4. Text and Sound Tags

Add text or sound tags to your pictures directly on the camera for easier organization and searching later with KODAK EasyShare Software.

5.5. Multimedia Slideshow

Create multimedia slideshows with music and effects directly from your camera.

5.6. KODAK PERFECT TOUCH Technology

In manual mode, use KODAK PERFECT TOUCH Technology to enhance pictures, making them brighter and clearing up dark shadows.

5.7. Internal Memory Plus

If your memory card fills up, the camera can switch to its internal memory, ensuring you don't miss a shot.

6. SHARING AND CONNECTIVITY

6.1. One-Button Upload

The M340 is part of the KODAK EasyShare System. Use the dedicated Share button on the camera to easily upload photos and videos to platforms like YouTube and KODAK Gallery via KODAK EasyShare Software.

6.2. KODAK EasyShare Software

The included KODAK EasyShare Software simplifies organizing, editing, creating, and sharing your digital media.

7. MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, dust, or moisture.
- Clean the lens gently with a lens cleaning cloth.
- Store the camera in a protective case when not in use.

8. TROUBLESHOOTING

8.1. Camera Does Not Turn On

Ensure the battery is correctly inserted and fully charged. Try recharging the battery.

8.2. Pictures Are Blurry

Check if Blur Reduction is enabled. Ensure the lens is clean. Hold the camera steady when taking pictures.

8.3. Memory Card Full

Transfer photos to a computer or replace the memory card. Utilize the Internal Memory Plus feature if available.

9. SPECIFICATIONS

Feature	Detail
Model Name	m340
Photo Sensor Resolution	10.2 MP
Optical Zoom	3x
Digital Zoom	5x
Screen Size	2.7 Inches
Display Type	LCD

Video Resolution	640 x 480 (30, 15 fps), 320 x 240 (30, 15 fps)
Image Stabilization	Unknown (Blur Reduction feature available)
ISO Range	Auto, 64, 100, 200, 400, 800, 1600
Battery Type	Kodak KLIC-7001 Lithium-Ion & charger
Storage Media	SD/SDHC card, Internal (up to 16 MB)
Connectivity	USB
Item Weight	5 Ounces

10. WHAT'S IN THE Box

- KODAK EasyShare M340 Digital Camera
- KODAK Li-Ion rechargeable digital camera battery KLIC-7001
- Wrist strap
- USB cable
- KODAK USB AC adapter for in-camera charging
- User's Guide with KODAK EasyShare Software

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official KODAK support website. Keep your proof of purchase for warranty claims.

Related Documents - M340

	<p>Kodak EasyShare M1063 Digitalkamera Bedienungsanleitung</p> <p>Diese Bedienungsanleitung bietet detaillierte Anweisungen zur Installation, Bedienung und Wartung Ihrer Kodak EasyShare M1063 Digitalkamera, einschließlich Tipps zur Aufnahme, Bearbeitung und Übertragung von Bildern und Videos.</p>
	<p>KODAK EASYSHARE M853 Zoom Digital Camera: Features, Specifications, and Accessories</p> <p>Comprehensive overview of the KODAK EASYSHARE M853 Zoom Digital Camera, detailing its key features, technical specifications, package contents, system requirements, and available accessories for enhanced photography and printing.</p>



[KODAK EASYSHARE M583 Digital Camera: Extended User Guide](#)

Comprehensive extended user guide for the KODAK EASYSHARE M583 digital camera, covering setup, operation, features, troubleshooting, and specifications from Eastman Kodak Company.



[KODAK EASYSHARE CD82 Digital Camera: Extended User Guide](#)

Comprehensive extended user guide for the KODAK EASYSHARE CD82 Digital Camera, covering setup, taking pictures and videos, editing, transferring, troubleshooting, and specifications. Learn how to use your Kodak camera effectively.



[Kodak EasyShare CD14 Digital Camera Extended User Guide](#)

Explore the features and functionalities of the Kodak EasyShare CD14 Digital Camera with this comprehensive extended user guide. Learn about setup, taking pictures and videos, editing, troubleshooting, and more.



[Kodak EasyShare Z1015 IS Digital Camera: Extended User Guide](#)

This comprehensive guide provides detailed instructions for operating the Kodak EasyShare Z1015 IS digital camera, covering setup, photography techniques, image management, and troubleshooting.