

OM SYSTEM FE-3000

OM SYSTEM OLYMPUS FE-3000 Digital Camera Instruction Manual

Model: FE-3000

[Introduction](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your OM SYSTEM OLYMPUS FE-3000 Digital Camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference. The FE-3000 is a 10-megapixel digital camera featuring a 3x optical zoom and a 2.7-inch LCD screen, designed for ease of use and high-quality imaging.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- OM SYSTEM OLYMPUS FE-3000 Digital Camera
- Rechargeable Lithium-Ion Battery
- USB Cable
- Wrist Strap
- Instruction Manual (this document)

3. SETUP

3.1. Charging the Battery

Before initial use, fully charge the included lithium-ion battery. Insert the battery into the camera and connect the camera to a power source using the provided USB cable and an AC adapter (sold separately) or a computer. The charging indicator will show the charging status.

3.2. Inserting a Memory Card

The FE-3000 supports both xD-Picture Card and microSD memory cards. Open the memory card slot cover, insert the memory card in the correct orientation until it clicks into place, and then close the cover securely.



Figure 1: Front view of the camera, highlighting the lens and flash unit.

3.3. Setting Date and Time

Upon first power-on or after the battery has been removed for an extended period, you will be prompted to set the date and time. Use the camera's navigation buttons to adjust the settings and confirm.

4. OPERATING THE CAMERA

4.1. Power On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.



Figure 2: Top view of the camera, indicating the power button.

4.2. Basic Shooting

To take a picture:

1. Turn on the camera.
2. Frame your shot using the 2.7-inch LCD monitor.
3. Press the shutter button halfway down to focus. The focus indicator will illuminate.
4. Press the shutter button fully down to capture the image.



Figure 3: Rear view of the camera, displaying the LCD and various control buttons.

4.3. Shooting Modes

The FE-3000 offers various shooting modes to optimize your photos for different scenes:

- **Intelligent Auto:** Automatically detects the scene (Portrait, Landscape, Night + Portrait, Macro, Sports) and adjusts settings for optimal results.
- **Program Auto:** Allows manual adjustment of ISO and white balance settings.
- **Pre-set Shooting Modes:** Includes specific modes like Sports, Fireworks, Night + Portrait, Landscape, and Macro.

4.4. Advanced Features

- **Advanced Face Detection:** Automatically detects and focuses on up to 16 faces in a frame, optimizing exposure for sharp portraits.
- **Digital Image Stabilization:** Reduces blur caused by camera shake or subject movement by using high ISO sensitivity and fast shutter speeds.
- **In-Camera Editing:** Features such as resizing and cropping allow for basic image adjustments after capture.
- **In-Camera Help Guides:** Provides brief descriptions of camera settings and features directly on the LCD.
- **Exposure Compensation:** Allows previewing and selecting various exposure effects on a live, multi-frame window on the LCD before taking the shot.



Figure 4: Rear view of the camera with a sample image displayed on the LCD screen.

4.5. Video Recording

The FE-3000 can record VGA-quality videos with sound. To start recording, switch to video mode (usually indicated by a movie camera icon) and press the shutter button.

5. MAINTENANCE

5.1. Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens with your fingers.
- **LCD Screen:** Gently wipe with a soft, dry cloth. Do not use abrasive cleaners.
- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water.

5.2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight, high temperatures, and humidity. Remove the battery if the camera will not be used for an extended period.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted correctly.

Problem	Possible Cause	Solution
Cannot take pictures.	Memory card is full, locked, or not inserted.	Delete unnecessary images, unlock the memory card, or insert a new card.
Images are blurry.	Camera shake, subject movement, or incorrect focus.	Hold the camera steady, use Digital Image Stabilization, or ensure proper focus before shooting.
Flash does not fire.	Flash mode is set to OFF or battery is low.	Change flash mode to Auto or On. Recharge the battery.

7. SPECIFICATIONS

Feature	Detail
Model Name	FE-3000
Photo Sensor Resolution	10 MP
Optical Zoom	3x
Digital Zoom	4x
Screen Size	2.7 Inches LCD
Image Stabilization	Digital, Optical
Supported File Format	JPEG, RAW
Video Resolution	640 x 480 (30, 15 fps), 320 x 240 (30, 15 fps)
Compatible Memory Cards	xD-Picture Card, microSD
Battery Type	Lithium Ion
Connectivity Technology	USB
Item Weight	3.84 ounces
Manufacturer	Olympus

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official OM SYSTEM website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question