

## **BLACK+DECKER EC59D**

# **BLACK+DECKER EC59D Space Saver Under Cabinet Electric Can Opener User Manual**

Model: EC59D

## **1. INTRODUCTION**

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your BLACK+DECKER EC59D Space Saver Under Cabinet Electric Can Opener. Please read all instructions carefully before use and retain this manual for future reference.

The BLACK+DECKER EC59D is designed for convenient, hands-free can opening, featuring an under-cabinet mounting design to save counter space.

## **2. IMPORTANT SAFETY INFORMATION**

- Always unplug the appliance from the outlet before cleaning or when not in use.
- Do not immerse the motor housing in water or other liquids.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- This appliance is intended for household use only.
- Use only attachments recommended or sold by the manufacturer.

## **3. PARTS IDENTIFICATION**

Familiarize yourself with the components of your can opener:

- **A. Motor Housing:** The main body containing the motor and controls.
- **B. Cutting Blade Assembly:** The mechanism that pierces and cuts the can lid. This part is removable for cleaning.
- **C. Magnetic Lid Holder:** Holds the can lid after it is cut.
- **D. Can Guide:** Helps position the can correctly.

- **E. Activation Lever:** Engages the cutting mechanism.
- **F. Mounting Bracket:** Used to secure the can opener under a cabinet.



Image 1: Overview of the BLACK+DECKER EC59D Space Saver Under Cabinet Electric Can Opener. This image shows the compact design and how it appears when mounted, highlighting the main body and the can opening mechanism.

#### 4. SETUP AND INSTALLATION

The EC59D is designed for under-cabinet mounting to maximize counter space. Follow these steps for installation:

1. **Choose Location:** Select a suitable location under a kitchen cabinet, ensuring there is enough clearance for cans of various sizes and access to a power outlet.
2. **Attach Mounting Bracket:** Position the mounting bracket (F) against the underside of the cabinet. Use a pencil to mark the screw holes.
3. **Drill Pilot Holes:** Drill pilot holes at the marked locations. Ensure the drill bit size is appropriate for the screws provided.
4. **Secure Bracket:** Attach the mounting bracket securely to the cabinet using the provided screws. Ensure it is firmly fastened to prevent movement during operation.
5. **Mount Can Opener:** Slide the can opener unit onto the secured mounting bracket until it clicks into place. Ensure it is locked firmly.
6. **Plug In:** Plug the can opener into a standard electrical outlet.

*Note:* Some users have reported issues with bolt sizes. Ensure the provided bolts are compatible with the mounting bracket and the cabinet material. If not, suitable hardware may need to be acquired separately.

## 5. OPERATING INSTRUCTIONS

Using your BLACK+DECKER EC59D can opener is simple and hands-free:

1. **Prepare Can:** Place the can on a flat surface or hold it steady. Ensure the can is not dented or misshapen, as this can affect operation.
2. **Position Can:** Lift the activation lever (E) and position the rim of the can under the can guide (D) and against the cutting blade assembly (B).
3. **Engage Cutting:** Press down firmly on the activation lever (E) until the cutting blade pierces the can lid. The "Power Pierce" feature ensures easy puncturing.
4. **Hands-Free Operation:** Once the blade has pierced the can and the cutting action begins, you can release the lever. The can opener will automatically hold the can and rotate it, cutting the lid.
5. **Automatic Shut-Off:** The can opener will automatically stop once the can has been fully opened.
6. **Remove Can:** Carefully lift the can away from the opener. The magnetic lid holder (C) will retain the lid.
7. **Dispose of Lid:** Remove the lid from the magnetic holder and dispose of it safely.

*Caution:* The edges of opened cans and lids can be sharp. Handle with care.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene:

1. **Unplug:** Always unplug the can opener from the electrical outlet before cleaning.
2. **Remove Cutting Blade Assembly:** The cutting blade assembly (B) is removable for easy cleaning. Gently pull it downwards and outwards to detach it from the motor housing.
3. **Clean Blade:** Wash the removable cutting blade assembly in warm, soapy water or place it in the dishwasher. Rinse thoroughly and dry completely before reattaching.
4. **Wipe Motor Housing:** Wipe the exterior of the motor housing (A) with a damp cloth. Do not immerse the motor housing in water.
5. **Reattach Blade:** Once clean and dry, reattach the cutting blade assembly by aligning it with the slots and pushing it upwards until it clicks securely into place.

*Note:* If the can opener's performance diminishes over time, the cutting blade may be dull. Replacing the removable cutting blade assembly can restore performance.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Can opener does not operate.	Not plugged in; power outage; activation lever not fully engaged.	Ensure unit is plugged into a working outlet. Check circuit breaker. Press activation lever firmly until cutting begins.
Can opener stops mid-operation or does not cut cleanly.	Dull cutting blade; can is dented or misshapen; can not properly positioned.	Clean or replace the cutting blade assembly. Use undamaged cans. Reposition the can, ensuring the rim is correctly aligned.
Lid falls into can.	Magnetic lid holder is dirty or weak.	Clean the magnetic lid holder to ensure proper adhesion.

Problem	Possible Cause	Solution
Unit feels loose after installation.	Mounting bracket not securely fastened; unit not properly clicked into bracket.	Re-tighten mounting screws. Ensure the can opener unit is fully engaged and locked onto the mounting bracket.

## 8. SPECIFICATIONS

---

**Model Number:** EC59D

**Brand:** BLACK+DECKER

**Color:** Black

**Material:** Stainless Steel

**Operation Mode:** Automatic

**Product Dimensions:** 6.4 x 4.7 x 7.7 inches

**Item Weight:** 2.75 pounds

**UPC:** 050875010338

## 9. WARRANTY AND CUSTOMER SUPPORT

---

For warranty information or customer support, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Do not attempt to repair the appliance yourself; contact authorized service personnel for assistance.

**Website:** [www.blackanddecker.com](http://www.blackanddecker.com)