

[Manuals.plus](#) /

› [Samsung](#) /

› User Manual for Genuine Samsung TV Remote Control BN59-00678A

Samsung BN59-00678A

User Manual for Samsung TV Remote Control

Model: BN59-00678A

1. INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your Genuine Samsung TV Remote Control, model BN59-00678A. This remote is designed to be compatible with various Samsung TV models, including HL61A510J1F, HL67A510J1F, LN19A330J1D, and many others listed in the compatibility section. It serves as a direct replacement or additional remote for your Samsung television, ensuring seamless control over your viewing experience.

2. SAFETY INFORMATION

Please read and understand all safety precautions before using this product. Failure to follow these instructions may result in injury or damage to the device.

- **Battery Safety:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always insert batteries correctly, observing the positive (+) and negative (-) polarity markings.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

- **General Use:**

- Keep the remote control away from direct sunlight, heat sources, and moisture.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the remote control.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Genuine Samsung TV Remote Control (Model: BN59-00678A)
- *(Batteries are typically not included and must be purchased separately.)*

4. SETUP

4.1. Installing Batteries

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the Samsung BN59-00678A remote control, showing the battery compartment. The cover is partially open, revealing the slots for two AAA batteries.

4.2. Initial Use

This remote control is designed to work with compatible Samsung TVs without requiring any programming. Once batteries are installed, simply point the remote at your television and press the **POWER** button to turn on or off your TV.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the various buttons and their functions:

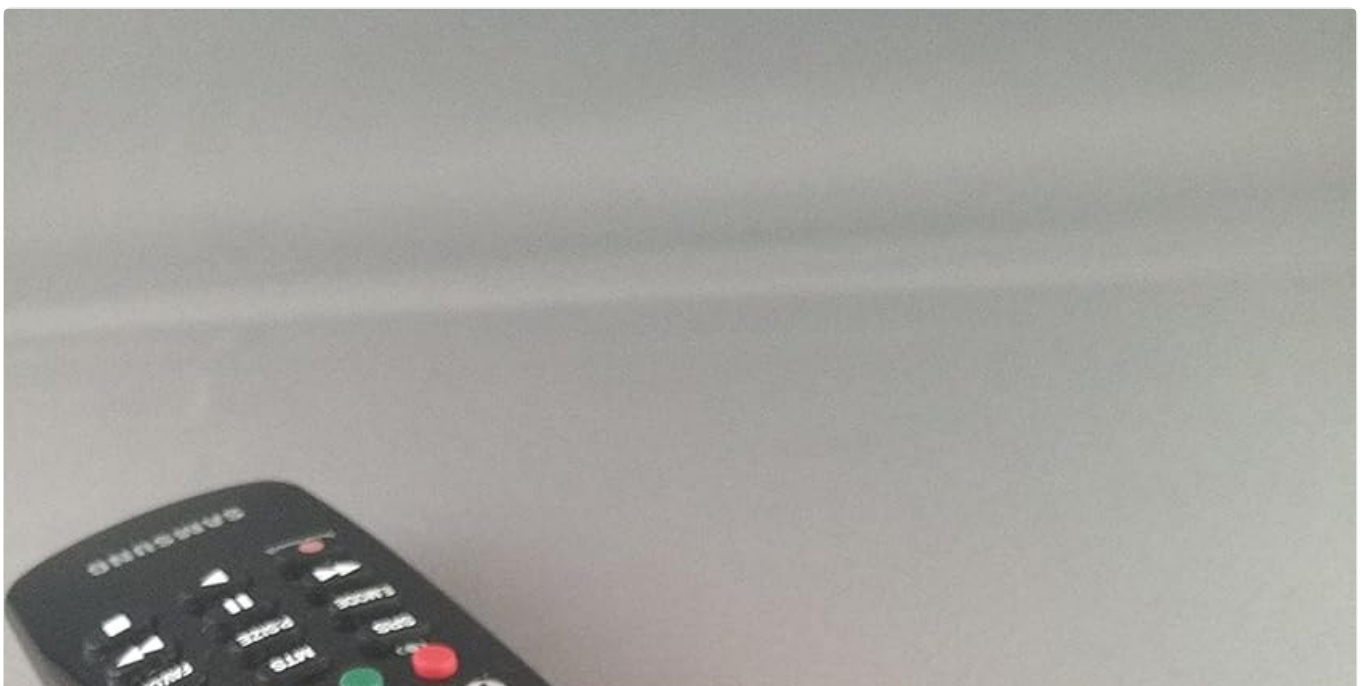




Image: Front view of the Samsung BN59-00678A remote control, displaying its array of buttons for various TV functions.

Button	Function
POWER	Turns the TV on or off.
SOURCE	Cycles through available input sources (HDMI, AV, Component, TV).

Button	Function
VOL +/-	Adjusts the volume level up or down.
CH +/-	Changes the channel up or down.
MUTE	Mutes or unmutes the TV audio.
MENU	Opens the TV's main menu for settings and options.
EXIT	Exits the current menu or on-screen display.
TOOLS	Accesses quick settings or context-sensitive options.
INFO	Displays information about the current program or input.
Number Buttons (0-9)	Directly enters channel numbers.
Directional Pad (Up/Down/Left/Right) & ENTER	Navigates through menus and confirms selections.

For specific functions related to your TV model, refer to your television's user manual.

6. MAINTENANCE

6.1. Cleaning the Remote Control

To keep your remote control in optimal condition:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the finish or internal components.

6.2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Refer to Section 4.1 for battery installation instructions.

6.3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage.

7. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote control is not working.	<ul style="list-style-type: none"> ◦ Check if the batteries are inserted correctly with the correct polarity. ◦ Replace old or depleted batteries with new ones. ◦ Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. ◦ Remove any obstructions between the remote and the TV.
Remote control works intermittently.	<ul style="list-style-type: none"> ◦ Batteries may be low. Replace them. ◦ Ensure you are within the effective range of the TV's IR receiver. ◦ Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with the IR signal. Try to minimize such interference.
Specific buttons are not responding.	<ul style="list-style-type: none"> ◦ The button might be stuck or dirty. Gently clean around the button. ◦ If only one or two buttons are not working, the remote might be damaged. Consider replacing the remote.

If the problem persists after trying these steps, contact Samsung customer support or a qualified service technician.

8. SPECIFICATIONS

Feature	Detail
Model Number	BN59-00678A
Brand	Samsung
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Various Samsung models including HL61A510J1F, HL67A510J1F, LN19A330J1D, LN19A330J1H, LN19A450C1D, LN19A650A1D, LN22A330J1D, LN22A450C1, LN22A450C1D, LN22A450C1H, LN22A650A1D, LN26A330J1, LN26A330J1D, LN32A300J1D, LN32A330J1, LN32A330J1D, LN32A330J1N, LN37A330J1D, LN40A330J1, LN40A330J1D, LS23CFUKFYD, LS24TDNSUVD, PL42A410C1D, PL42A410C2D, PL50A410C1D, PN42A400C2D, PN42A410C1D, PN50A400C2D, PN50A410C1D, T200HD, T220HD, T240HD, T260HD, 2333HD)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6 x 2 x 1.3 inches (approximately)
Item Weight	4 ounces (approximately)
Special Feature	Ergonomic design

9. WARRANTY INFORMATION

This product is manufactured by Samsung. For detailed warranty information, including terms, conditions, and duration, please refer to the warranty card included with your original product purchase or visit the official Samsung support website. Warranty coverage typically applies to manufacturing defects and does not cover damage caused by misuse, accidents, or unauthorized modifications.

10. SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Samsung customer service through their official channels:

- **Samsung Official Website:** www.samsung.com/us/support/
- **Customer Service Phone:** Refer to the Samsung support website for regional contact numbers.
- **Online Chat Support:** Available on the Samsung support website.

When contacting support, please have your product model number (BN59-00678A) and any relevant purchase information ready.

