

[Manuals.plus](#) /

› [Hardware House](#) /

› Satin Nickel Hinge Pin Door Stop User Manual

Hardware House 914-0385

Satin Nickel Hinge Pin Door Stop User Manual

Model: 914-0385

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Hardware House Satin Nickel Hinge Pin Door Stop. This product is designed to prevent doors from opening too far and causing damage to adjacent walls, furniture, or fixtures. Its hinge pin design allows for discreet and effective door stopping.



This image displays the Satin Nickel Hinge Pin Door Stop, showcasing its design and finish. The door stop is designed to attach to a door hinge to prevent the door from opening too far and damaging adjacent walls or furniture.

COMPONENTS

The Hardware House Hinge Pin Door Stop package typically includes:

- One (1) Satin Nickel Hinge Pin Door Stop
- One (1) Rubber Tip (pre-installed)
- One (1) Adjustment Screw (pre-installed)


INSTALLATION INSTRUCTIONS

Follow these steps to properly install your hinge pin door stop:

1. **Identify the Hinge:** Choose the top or middle hinge of the door that you wish to stop.
2. **Remove Hinge Pin:** Carefully tap the hinge pin upwards from the bottom using a hammer and a nail set or a similar tool. Remove the pin completely.
3. **Place Door Stop:** Slide the hinge pin door stop onto the top of the hinge, aligning its opening with the hinge barrel.
4. **Reinsert Hinge Pin:** Insert the original hinge pin back through the hinge barrel and the door stop. Tap it down gently until it is fully seated.
5. **Adjust Position:** Open the door to the desired stopping point. Loosen the adjustment screw on the door stop slightly. Rotate the door stop arm until the rubber tip makes contact with the door frame or wall at the desired stopping angle.
6. **Secure Adjustment:** Once the desired position is achieved, tighten the adjustment screw firmly to secure the door stop in place. Do not overtighten.

AUTNMATE YOUR HOME

Turn on and off the bedside lamp regularly for you

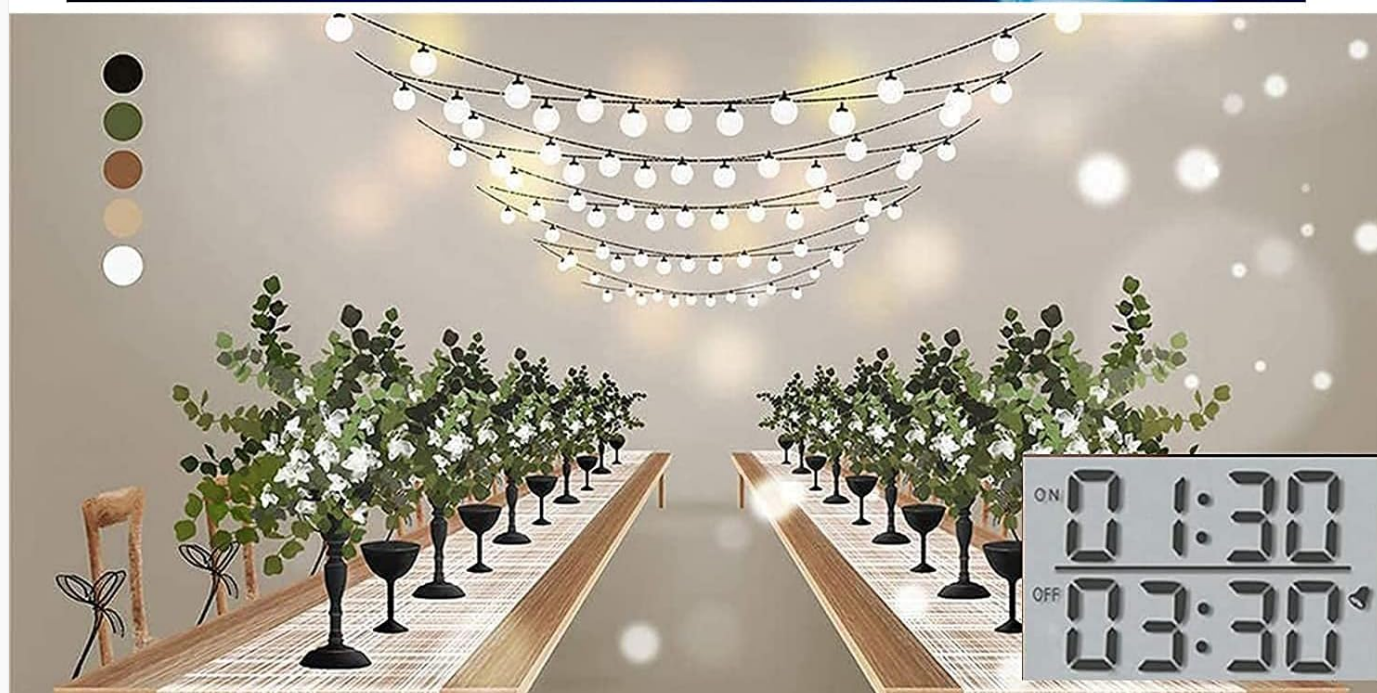


This image provides a side view of the Satin Nickel Hinge Pin Door Stop, highlighting the adjustable screw mechanism that allows for precise positioning to control the door's swing.



Timing per day

Eg: Set the device to be on at 10:30am and off at 12:40pm. This working mode repeats every 24 hours

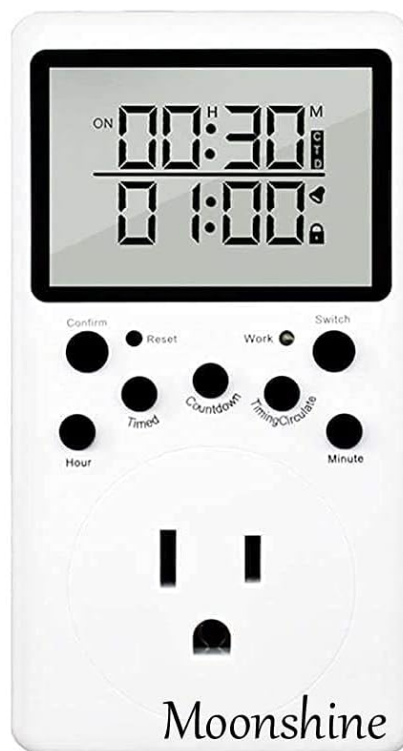


Count down and turn off

Eg: Device will cut off power after 30 mins

OR

Count down and turn on

Eg: Device will connect to power after 1 hours

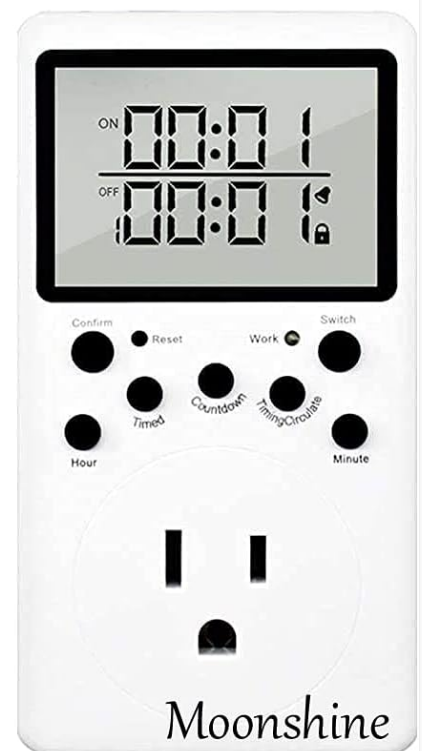

Interval circulation

Eg: Device will repeat the "1min on and 1min off" cycle continuously

A close-up view of the Satin Nickel Hinge Pin Door Stop, illustrating how it fits over a door hinge pin. This view emphasizes the durable die-cast construction and the satin nickel finish.

OPERATION

Once installed and adjusted, the hinge pin door stop operates passively. As the door opens, the arm of the door stop will rotate with the hinge. When the door reaches the set limit, the rubber tip on the end of the arm will make contact with the door frame or wall, preventing further movement and protecting surfaces from impact damage.

MAINTENANCE

The Satin Nickel Hinge Pin Door Stop requires minimal maintenance:

- **Cleaning:** Wipe the door stop periodically with a soft, damp cloth to remove dust and grime. Avoid abrasive cleaners that could damage the finish.
- **Check Tightness:** Occasionally check the adjustment screw to ensure it remains tight and the door stop is securely positioned.
- **Rubber Tip Inspection:** Inspect the rubber tip for wear or damage. If the tip is worn, it may need replacement to ensure effective cushioning.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Door still hits wall/frame	Door stop arm not adjusted correctly.	Loosen adjustment screw, reposition arm to stop door earlier, then retighten.
Door stop is loose or rotates freely	Adjustment screw is not tight enough.	Tighten the adjustment screw firmly. Ensure hinge pin is fully seated.
Rubber tip is damaged or missing	Normal wear and tear or accidental damage.	Replace the rubber tip. Contact manufacturer for replacement parts if needed.

SPECIFICATIONS

Attribute	Detail
Brand	Hardware House
Model Number	914-0385
Mounting Type	Door Mount (Hinge Pin)
Color	Satin Nickel
Finish Type	Satin Nickel
Material	Die-cast (implied by feature bullet)
Item Weight	0.01 ounces
UPC	802062534055

WARRANTY AND SUPPORT

Specific warranty information for the Hardware House Satin Nickel Hinge Pin Door Stop is not provided in the product details. For warranty claims, technical support, or replacement parts, please contact Hardware House directly through

their official website or customer service channels. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B001PCXJMI>

More documents and user manuals: <https://manuals.plus/>