

[Manuals.plus](#) /

› [Severin](#) /

› KG 2394 800W Automatic Electric Grill, Metallic Gray

Severin KG 2394

Severin KG 2394 800W Automatic Electric Grill User Manual

Model: KG 2394

INTRODUCTION

Thank you for choosing the Severin KG 2394 Automatic Electric Grill. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the grill.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.



Figure 1: The Severin KG 2394 Electric Grill in its closed position, showcasing its metallic gray finish and compact design.



Figure 2: Side view of the Severin KG 2394 Electric Grill, highlighting its slim profile for vertical storage.

The Severin KG 2394 is an automatic electric grill designed for versatile indoor grilling. It features non-stick coated grill plates and an automatic temperature regulation system for even cooking.

- **Grill Plates:** Non-stick coated for easy food release and cleaning.
- **Handle:** Heat-insulated for safe operation.
- **Indicator Light:** Illuminates when the grill is heating and ready for use.
- **Drip Tray:** Collects excess fat and liquids (if applicable, based on general grill features).

SETUP

1. **Unpacking:** Carefully remove the grill and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the grill plates with a damp cloth to remove any manufacturing residues. Dry thoroughly.

3. **Placement:** Place the grill on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance. Do not place it directly under cabinets or near flammable materials.
4. **Power Connection:** Plug the power cord into a suitable grounded electrical outlet. The indicator light will illuminate, signaling that the grill is preheating.

Allow the grill to preheat for approximately 5-10 minutes until the indicator light signals it is ready (e.g., turns off or changes color, depending on model specifics). This initial heating helps to burn off any residual manufacturing oils and prepares the non-stick surface.

OPERATING INSTRUCTIONS

The Severin KG 2394 grill features automatic temperature regulation, simplifying the cooking process. Always preheat the grill before placing food on the plates.

Grilling Sandwiches and Paninis



Figure 3: The grill perfectly toasting two large sandwiches, demonstrating its capacity and contact grilling capability.

1. Ensure the grill is preheated.
2. Carefully open the grill using the heat-insulated handle.
3. Place your sandwich or panini onto the lower grill plate. Do not overload the grill.
4. Gently close the top grill plate over the sandwich. The floating hinge allows for even pressure on varying thicknesses.
5. Grill for 3-5 minutes, or until the sandwich is golden brown and heated through. Cooking time may vary based on ingredients and desired crispness.
6. Once cooked, carefully remove the sandwich using a heat-resistant plastic or wooden spatula. Avoid metal utensils to prevent scratching the non-stick coating.

Grilling Meat (e.g., Steaks, Chicken Breasts)



Figure 4: A grilled steak and asparagus wrapped in bacon cooking on the grill plates, illustrating its use for various food types.

1. Ensure the grill is preheated.
2. Lightly brush meat with oil or marinade to prevent sticking and enhance flavor.

3. Place the meat onto the lower grill plate.
4. Close the top grill plate. The automatic temperature control will maintain optimal grilling temperature.
5. Grill for the recommended time based on the type and thickness of the meat, and your desired doneness. For example, a thin chicken breast might take 6-8 minutes, while a steak might take 4-7 minutes per side for medium-rare.
6. Always ensure meat is cooked to a safe internal temperature.
7. Remove cooked meat carefully.

Grilling Vegetables



Figure 5: Assorted vegetables, including zucchini, mushrooms, and bell peppers, being grilled, showcasing the grill's versatility for healthy cooking.

1. Ensure the grill is preheated.
2. Cut vegetables into uniform pieces for even cooking. Lightly toss with oil and seasonings.

3. Place vegetables on the lower grill plate.
4. Close the top grill plate.
5. Grill for 5-10 minutes, or until tender-crisp and grill marks appear. Cooking time depends on the type and thickness of vegetables.
6. Remove grilled vegetables carefully.

Note: The grill plates are not removable for this model, as indicated by user reviews. This impacts cleaning procedures.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Severin KG 2394 Electric Grill.

1. **Always Unplug:** Before cleaning, always unplug the grill from the power outlet and allow it to cool completely.
2. **Cleaning Grill Plates:**
 - Once cooled, wipe the non-stick grill plates with a damp cloth or sponge. For stubborn food residue, dampen a paper towel with a small amount of cooking oil and wipe the plates while they are still slightly warm (but not hot).
 - Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
 - Since the grill plates are not removable, ensure no water enters the electrical components.
3. **Cleaning Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
4. **Drip Tray (if applicable):** If your model includes a removable drip tray, empty and wash it with warm, soapy water. Rinse and dry thoroughly before reinserting.
5. **Storage:** Store the grill in a clean, dry place. The grill can be stored vertically to save space (refer to Figure 2).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the grill is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support.
Food sticks to grill plates.	Insufficient preheating; damaged non-stick coating; food not properly prepared.	Ensure the grill is fully preheated before adding food. Lightly brush food with oil. Avoid using metal utensils that can scratch the coating.
Grill smokes excessively.	Excess fat/oil buildup; food residue on plates.	Clean the grill plates thoroughly after each use. Trim excess fat from meat before grilling. Ensure drip tray (if present) is empty.
Food not cooking evenly.	Grill not fully preheated; uneven food thickness; overloading the grill.	Allow adequate preheating time. Ensure food items are of similar thickness. Do not overcrowd the grill; cook in batches if necessary.

SPECIFICATIONS

- **Model Number:** KG 2394

- **Power:** 800W
- **Product Dimensions:** 10.63 x 8.86 x 3.35 inches
- **Item Weight:** 2.87 pounds
- **ASIN:** B001QB4I8C
- **Date First Available:** October 13, 2017
- **Color:** Metallic Gray

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Severin KG 2394 Electric Grill, please refer to the warranty card included with your purchase or visit the official Severin website. You may also contact Severin customer service directly for assistance.

Severin Official Website: www.severin.com

© 2024 Severin. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B001QB4I8C>

More documents and user manuals: <https://manuals.plus/>