

[Manuals.plus](#) /

› [Melissa & Doug](#) /

› Melissa & Doug Fold and Go Wooden Barn (Model 3700) Instruction Manual

Melissa & Doug 3700

Melissa & Doug Fold and Go Wooden Barn (Model 3700) Instruction Manual

Your guide to setting up and enjoying the Melissa & Doug Fold and Go Wooden Barn with animal play figures.

1. INTRODUCTION

The Melissa & Doug Fold and Go Wooden Barn is a durable, high-quality wooden playset designed for imaginative play. This fully assembled, two-story barn comes with seven realistic plastic farm animals, a wooden ladder, and a folding corral. Its portable design with chunky wooden handles allows for easy transport and convenient storage, making it ideal for on-the-go play. The barn features functional doors and windows, enhancing the play experience for children aged 3 and older.

2. WHAT'S INCLUDED

Your Melissa & Doug Fold and Go Wooden Barn set includes the following components:

- One (1) Wooden Folding Barn
- Seven (7) Animal Play Figures (e.g., horse, goat, pig, cow, sheep, turkey, dog)
- One (1) Wooden Ladder
- One (1) Wooden Folding Fence (corral)



Image: The Melissa & Doug Fold and Go Wooden Barn opened, displaying the interior stalls, ladder, folding fence, and the seven animal figures.

3. SETUP INSTRUCTIONS

The Melissa & Doug Fold and Go Wooden Barn requires no assembly. Follow these steps to prepare for play:

1. **Unfold the Barn:** Gently open the barn by pulling the two halves apart. The barn is hinged and designed to open wide for full access to the interior.
2. **Place the Ladder:** Position the wooden ladder inside the barn to allow animals to access the upper hayloft level.
3. **Set up the Corral:** Unfold the wooden fence pieces to create a corral for the animals outside the barn. The fence is designed to stand independently.
4. **Arrange Animal Figures:** Place the seven animal play figures (horse, goat, pig, cow, sheep, turkey, dog) inside the barn stalls, hayloft, or within the corral as desired.



Image: A child's hands are shown placing a turkey figure on the wooden ladder inside the opened barn, demonstrating interactive play.

4. OPERATING INSTRUCTIONS (IMAGINATIVE PLAY)

The Melissa & Doug Fold and Go Wooden Barn is designed to encourage imaginative and open-ended play. Here are some ways to interact with the playset:

- **Animal Care:** Use the animal figures to simulate daily farm activities such as feeding, watering, and putting animals to bed in their stalls.
- **Exploration:** Utilize the wooden ladder to move animals between the two stories of the barn. The barn doors slide open and close, allowing for entry and exit.
- **Outdoor Play:** The folding corral can be used to create an outdoor enclosure for animals, simulating pastures or holding pens.
- **Portability:** When play is finished, fold the barn closed using the top handles for easy transport and compact storage. Ensure all accessories and animals are stored inside before closing.



Image: A child's hand is shown opening the sliding barn doors, revealing the interior of the playset.

5. MAINTENANCE

To ensure the longevity and safety of your Melissa & Doug Fold and Go Wooden Barn, please follow these maintenance guidelines:

- **Cleaning:** Wipe the wooden surfaces with a damp cloth and mild soap if necessary. Avoid harsh chemical cleaners or abrasive materials, as these can damage the wood and paint.
- **Drying:** Ensure all parts are thoroughly dry before storing to prevent warping or mold growth.
- **Storage:** Store the barn in a dry, cool place away from direct sunlight or extreme temperatures.
- **Inspection:** Periodically check all components for any signs of wear, damage, or loose parts. Discontinue use if any part is broken or poses a safety risk.

6. TROUBLESHOOTING

If you encounter any issues with your Fold and Go Wooden Barn, consider the following:

- **Barn Does Not Close Properly:** Ensure all animal figures and accessories are fully inside the barn and not obstructing the closing mechanism. Check the hinges for any debris.
- **Stiff Sliding Doors:** If the barn doors are stiff, gently clean the tracks with a dry cloth to remove any dust or small particles. Avoid applying lubricants.
- **Missing or Damaged Parts:** In case of missing or damaged components upon arrival, please contact Melissa & Doug customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Melissa & Doug
Model Number	3700
Material Type	Wood
Color	Multicolor (Red barn with gray roof)
Item Dimensions (L x W x H)	10.5 x 7.5 x 13.75 inches
Item Weight	820 Grams
Age Range Description	3+ years (Manufacturer Minimum Age: 36 Months, Maximum Age: 72 Months)
Is Assembly Required	No
Included Components	Wooden folding barn, 7 animal play figures, wooden folding fence

8. PRODUCT VIDEOS

Melissa & Doug Fold and Go Wooden Barn Overview

Your browser does not support the video tag.

Video: An official overview of the Melissa & Doug Fold and Go Wooden Barn, demonstrating its features and play potential.

9. WARRANTY & SUPPORT

Melissa & Doug products are designed for durability and quality. For specific warranty information or customer support, please refer to the official Melissa & Doug website or contact their customer service directly. The manufacturer warranty description states "From Melissa And Doug".

For further assistance, visit the [Melissa & Doug official website](#).

© 2023 Melissa & Doug. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B001QBTAOY>

More documents and user manuals: <https://manuals.plus/>