

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Exquisit](#) /

› [Exquisit GSP7BSOE Dishwasher User Manual](#)

Exquisit GSP7BSOE

Exquisit GSP7BSOE Dishwasher User Manual

Model: GSP7BSOE

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions thoroughly before operating the appliance. Retain this manual for future reference.

- Ensure the appliance is properly grounded before use.
- Do not operate the dishwasher if the power cord is damaged. Contact qualified service personnel for repairs.
- Keep children and pets away from the appliance during operation and when the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid touching the heating element during or immediately after a wash cycle.
- Load sharp items, such as knives, with the handles up to prevent injury.

PRODUCT OVERVIEW

The Exquisit GSP7BSOE is a compact countertop dishwasher designed for efficient cleaning of daily tableware and glassware. It features a durable stainless steel interior and is ideal for smaller living spaces.



Figure 1: Front view of the Exquisit GSP7BSOE compact dishwasher, illustrating its design and control panel.

SETUP AND INSTALLATION

- 1. Unpacking:** Carefully remove all packaging materials. Inspect the dishwasher for any signs of damage incurred during shipping.
- 2. Positioning:** Place the dishwasher on a stable, level countertop. Ensure it is located near a water supply, a suitable drain, and a grounded electrical outlet. Allow adequate space around the unit for ventilation.
- 3. Water Connection:** Connect the water inlet hose to a cold water tap. Hand-tighten the connection, then use a wrench to secure it firmly, ensuring no leaks.
- 4. Drain Connection:** Attach the drain hose securely to a dedicated drain pipe or position it over a sink. Verify that the hose is not kinked or obstructed to allow for proper water drainage.
- 5. Electrical Connection:** Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

1. Loading the Dishwasher

Arrange dishes to ensure that water can reach all surfaces and that spray arms are not obstructed.

- Place larger, heavily soiled items in the lower basket.
- Cups, glasses, and smaller items should be placed in the upper basket.
- Utilize the provided cutlery basket for forks, knives, and spoons.

2. Adding Detergent and Rinse Aid

Open the detergent dispenser and add the appropriate amount of dishwasher detergent according to the soil level and water hardness. Close the dispenser lid securely. Fill the rinse aid dispenser to the indicated level as needed.

3. Selecting a Wash Program

The Exquisit GSP7BSOE offers the following wash programs:

- **Ecoprogram:** Suitable for normally soiled dishes, designed for optimal energy and water efficiency.
- **Normal Program:** For daily, normally soiled dishes requiring a standard wash cycle.

Select the desired program using the control panel buttons.

4. Starting the Wash Cycle

Ensure the dishwasher door is closed firmly until it latches. Press the Start button to initiate the selected wash cycle.

MAINTENANCE

1. Cleaning the Filters

Regularly clean the filter system located at the base of the dishwasher tub to ensure optimal performance.

1. Turn off and unplug the dishwasher from the power supply.
2. Remove the coarse filter, fine filter, and main filter components.
3. Rinse all filter parts under running water to remove any trapped food particles or debris.
4. Reassemble the filters correctly and place them back into the dishwasher.

2. Cleaning the Spray Arms

Periodically check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any clogged holes using a thin wire or toothpick.

3. Exterior and Interior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Clean the interior of the dishwasher regularly with a specialized dishwasher cleaner or a solution of vinegar and water to prevent odors and limescale buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not securely plugged in; Door not closed properly; Household fuse blown or circuit breaker tripped.	Verify power connection; Ensure door is fully latched; Check and reset household fuse/circuit breaker.
Dishes are not clean	Improper loading of dishes; Insufficient detergent used; Spray arms clogged; Filters are dirty.	Reload dishes to allow water circulation; Add correct amount of detergent; Clean spray arm nozzles; Clean the filter system.
Water not draining	Drain hose is kinked or blocked; Filters are clogged; Drain pump malfunction.	Inspect and clear the drain hose; Clean the filters; If problem persists, contact customer service.
Excessive noise during operation	Dishes interfering with spray arms; Foreign object in the pump area; Dishwasher not level.	Rearrange dishes to clear spray arms; Inspect and remove any foreign objects; Ensure the dishwasher is installed on a level surface.

SPECIFICATIONS

Model: GSP7BSOE

Brand: Exquisit

Installation Type: Countertop

Capacity: 4 Place Settings

Material: Stainless Steel (interior)

Noise Level: 63 Decibels

Special Features: Compact design

Wash Programs: Ecoprogram, Normal Program

Included Components: Cutlery basket, Table basket

WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the warranty card provided with your Exquisit GSP7BSOE dishwasher or visit the official Exquisit website. It is recommended to keep your purchase receipt as proof of purchase for warranty claims.

Note: Specific warranty terms and conditions may vary by region and retailer.