

Milwaukee 43-34-0795

Milwaukee 43-34-0795 Flange Outer Blade Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Milwaukee 43-34-0795 Flange Outer Blade. Please read this manual thoroughly before installation and operation to ensure proper function and to prevent injury or damage. Keep this manual for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when working with power tools and accessories. Failure to follow these instructions may result in serious injury.

- **Read All Instructions:** Familiarize yourself with the power tool's manual and this accessory manual before use.
- **Disconnect Power:** Always disconnect the power tool from its power source before installing, adjusting, or removing the flange outer blade.
- **Wear Personal Protective Equipment (PPE):** Always wear safety glasses, hearing protection, and gloves when operating power tools.
- **Inspect Components:** Before each use, inspect the flange outer blade and the power tool for any damage, wear, or defects. Do not use if damaged.
- **Use Correct Parts:** Ensure that this flange outer blade is compatible with your specific Milwaukee power saw model. Refer to the specifications section.
- **Secure Installation:** Ensure the flange outer blade is securely installed according to the instructions to prevent loosening during operation.

3. PRODUCT OVERVIEW

The Milwaukee 43-34-0795 Flange Outer Blade is a genuine replacement part designed for specific Milwaukee power saws. This component plays a crucial role in securing the cutting blade to the saw's arbor, ensuring stable and safe operation.



Figure 1: Milwaukee 43-34-0795 Flange Outer Blade. This image displays the silver-colored metal component, which is essential for securing a cutting blade on compatible Milwaukee power saws.

4. SETUP AND INSTALLATION

4.1 Required Tools

- Appropriate wrench or tool for removing/tightening the arbor nut (typically supplied with your power saw).
- Clean cloth.

4.2 Installation Steps

Follow these steps carefully to install the flange outer blade:

1. **Ensure Power is Disconnected:** Verify that the power tool is unplugged or its battery pack is removed.
2. **Access the Arbor:** Depending on your specific power saw model, you may need to open a blade guard or cover to access the arbor and existing blade assembly.
3. **Remove Old Flange (if applicable):** If replacing an existing flange, use the appropriate wrench to loosen and remove the arbor nut. Carefully remove the old outer flange and the cutting blade.
4. **Clean Components:** Clean the arbor shaft and any other components of debris or sawdust using a clean cloth.
5. **Position New Flange:** Place the new Milwaukee 43-34-0795 Flange Outer Blade onto the arbor shaft, ensuring it sits flush against the inner flange (if present) or the saw's housing.
6. **Install Cutting Blade:** Place the cutting blade onto the arbor, ensuring its rotation direction matches the saw's indicated direction. The blade should sit against the outer flange.
7. **Secure with Arbor Nut:** Reinstall the arbor nut and tighten it securely with the wrench. Do not overtighten, but ensure it is firm enough to prevent blade slippage.
8. **Verify Installation:** Manually rotate the blade to ensure it spins freely and is properly seated. Close any guards or covers.

5. OPERATING INSTRUCTIONS

Once the Milwaukee 43-34-0795 Flange Outer Blade is correctly installed and the cutting blade is secured, the power tool is ready for operation. The flange's primary function is to maintain the blade's position and stability during cutting. Always follow the operating instructions provided with your specific Milwaukee power saw for safe and effective use.

- Ensure the blade is sharp and appropriate for the material being cut.
- Always maintain a firm grip on the power tool.
- Keep hands clear of the cutting path.
- Allow the saw to reach full speed before beginning a cut.

6. MAINTENANCE

Proper maintenance extends the life of your flange outer blade and ensures safe operation.

- **Cleaning:** After each use, disconnect the power tool and clean any sawdust or debris from the flange and arbor area using a brush or compressed air.
- **Inspection:** Regularly inspect the flange for signs of wear, cracks, bending, or corrosion. Replace the flange immediately if any damage is observed.
- **Storage:** Store the flange in a clean, dry place when not installed on the power tool.

7. TROUBLESHOOTING

If you encounter issues with your power saw related to the blade's stability or attachment, consider the following:

- **Blade Wobble:** Ensure the flange outer blade and arbor nut are correctly and securely tightened. Check for any debris preventing the blade or flange from seating properly.
- **Difficulty Installing Blade:** Verify that the flange is correctly oriented and that the blade's arbor hole matches the saw's arbor size.
- **Unusual Noise:** Disconnect power and inspect the blade, flanges, and arbor for any loose components or damage.

If problems persist, consult the power tool's instruction manual or contact Milwaukee customer support.

8. SPECIFICATIONS

Brand	Milwaukee
Model Number	43-34-0795
Part Number	43-34-0795
Compatible Devices	Milwaukee power saws
Material	Metal (Silver-colored)
UPC	045433407958

9. WARRANTY AND SUPPORT

For information regarding the warranty of your Milwaukee 43-34-0795 Flange Outer Blade, please refer to the warranty documentation provided with your original Milwaukee power tool or visit the official Milwaukee website. For technical support or assistance, please contact Milwaukee customer service directly through their official channels.

Milwaukee Official Website: www.milwaukeetool.com