

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Einhell](#) /

› [Einhell 4500067 Folding Sawhorse Instruction Manual](#)

Einhell 4500067

Einhell 4500067 Folding Sawhorse Instruction Manual

Model: 4500067 | Brand: Einhell

[Contents](#) [Introduction](#) [Safety Instructions](#) [Package](#)
[Assembly](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Einhell 4500067 Folding Sawhorse. This sawhorse is designed to provide a stable and secure platform for cutting logs and timber, enhancing safety and efficiency in your woodworking tasks. Its robust metal construction and foldable design make it a practical tool for both professional and home use. This manual provides essential information for safe assembly, operation, and maintenance of your sawhorse.



Figure 1: Einhell 4500067 Folding Sawhorse in use with a log.

2. SAFETY INSTRUCTIONS

Always prioritize safety when using the sawhorse. Failure to follow these instructions may result in serious injury or property damage.

- **Read the Manual:** Before assembly or operation, read and understand all instructions in this manual.
- **Personal Protective Equipment (PPE):** Always wear appropriate safety gear, including safety glasses, gloves, and hearing protection, especially when using power tools like chainsaws.
- **Stable Surface:** Ensure the sawhorse is placed on a firm, level, and non-slip surface before loading any material.
- **Load Capacity:** Do not exceed the maximum load capacity of 150 kg (330 lbs). Overloading can cause the sawhorse to collapse.
- **Secure the Workpiece:** Ensure logs or timber are securely seated in the sawhorse's teeth before cutting. The teeth are designed to prevent movement.

- **Clear Work Area:** Keep the work area clear of debris, other tools, and bystanders, especially children and pets.
- **Proper Cutting Technique:** When using a chainsaw or other cutting tools, follow the tool manufacturer's safety guidelines. Maintain a firm grip and proper stance.
- **Inspect Before Use:** Before each use, inspect the sawhorse for any signs of damage, loose fasteners, or wear. Do not use if damaged.
- **Storage:** When not in use, fold the sawhorse and store it in a dry, secure location away from children.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any parts are missing or damaged, contact your retailer immediately.

- Einhell 4500067 Folding Sawhorse frame
- Assembly hardware (bolts, nuts, washers - quantity may vary)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

The Einhell 4500067 Sawhorse is designed for quick setup. While some components may come pre-assembled, initial setup involves unfolding and securing the frame. It is recommended to have two people for initial assembly to ensure stability and ease of handling.

1. **Unpack Components:** Remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present according to the package contents list.
2. **Unfold the Frame:** Carefully unfold the main frame of the sawhorse. The legs are designed to pivot outwards.
3. **Secure Cross Braces:** Locate the cross braces that connect the legs. Ensure they are properly aligned and secured. Some models may require inserting bolts and tightening nuts to fix these braces in place. Refer to the diagrams for correct orientation.
4. **Check Stability:** Once unfolded and secured, gently shake the sawhorse to ensure it is stable and all connections are tight. Adjust any loose fasteners as necessary.
5. **Final Inspection:** Before first use, double-check all bolts and nuts are securely tightened.



Figure 2: The sawhorse in its folded position.



Figure 3: The sawhorse fully unfolded and ready for use.

Your browser does not support the video tag.

Video 1: Demonstration of the foldable sawhorse setup and use. This video shows the sawhorse being set up and used to cut a log with a chainsaw, highlighting its stability and ease of use.

5. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your Einhell Sawhorse:

- 1. Position the Sawhorse:** Place the sawhorse on a stable, level surface. Ensure there is ample space around it for safe operation and movement.
- 2. Load the Workpiece:** Carefully place the log or timber onto the sawhorse. The serrated teeth on the support arms are designed to grip the material firmly. Ensure the log is centered and balanced to prevent tipping. The sawhorse can accommodate logs up to 40 cm in diameter and has a maximum load capacity of 150 kg.

3. **Adjust Working Height (if applicable):** The sawhorse offers adjustable working heights of 60, 64, and 68 cm. Adjust the height to a comfortable and safe level for your task.
4. **Begin Cutting:** Using your chainsaw or other cutting tool, proceed with cutting the log. Always follow the safety instructions of your cutting tool. The sawhorse's design helps to keep the log stable during the cutting process.
5. **Remove Cut Pieces:** Once a section is cut, carefully remove it from the sawhorse. Be mindful of falling pieces and maintain a clear work area.



Figure 4: Sawhorse supporting a log, indicating maximum diameter of 300mm and 150kg capacity.

Your browser does not support the video tag.

Video 2: Sawhorse Usage Scenarios Demonstration. This video illustrates various practical applications of the sawhorse for cutting wood, emphasizing its versatility and stability.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your sawhorse.

- **Cleaning:** After each use, clean the sawhorse to remove sawdust, wood chips, and other debris. A stiff brush or compressed air can be used.
- **Inspection:** Periodically check all bolts, nuts, and joints for tightness. Tighten any loose fasteners. Inspect the metal frame for any signs of bending, cracks, or corrosion.
- **Lubrication:** Lightly lubricate pivot points and moving parts with a suitable lubricant to ensure smooth folding and unfolding.
- **Storage:** Store the sawhorse in a dry environment to prevent rust and corrosion. Its foldable design allows for compact storage.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your sawhorse.

Problem	Possible Cause	Solution
Sawhorse is unstable.	Loose fasteners; uneven ground; overloaded.	Ensure all bolts and nuts are tight. Move to a level surface. Do not exceed maximum load capacity.
Difficulty folding/unfolding.	Dirt/debris in joints; lack of lubrication; bent components.	Clean joints and pivot points. Apply lubricant. Inspect for damage and replace parts if necessary.
Log slips or moves during cutting.	Log not properly seated; sawhorse unstable.	Ensure log is firmly seated in the serrated teeth. Verify sawhorse stability as per above.
Missing parts upon delivery.	Packaging error or damage during transit.	Contact your retailer or Einhell customer support immediately for replacement parts.

8. SPECIFICATIONS

Key technical details for the Einhell 4500067 Folding Sawhorse:

Feature	Detail
Model Number	4500067
Brand	Einhell
Material	Metal (Iron)
Color	Silver
Working Height	60, 64, 68 cm (adjustable)
Length	80 cm
Max. Log Diameter	40 cm

Feature	Detail
Max. Load Capacity	150 kg (330 lbs)
Product Dimensions (LxWxH)	102 x 9.8 x 5.7 cm (folded)
Item Weight	7 kg (15.4 lbs)
Special Feature	Stable, Foldable

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the official Einhell website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can find more information and contact details on the [Einhell Store on Amazon](#).

© 2023 Einhell. All rights reserved.