

Moser 4015110006565

MOSER 1871 CHROMSTYLE PRO Professional Hair Clipper

INSTRUCTION MANUAL

1. Safety Information

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- This appliance is designed for professional hair cutting.
- Ensure the power supply matches the appliance's requirements (100-240V).
- Always unplug the clipper before cleaning or maintenance.
- Do not immerse the clipper in water or other liquids.
- Keep out of reach of children.
- Avoid using the clipper with a damaged cord or plug.
- The unit is supplied with an Asian plug. An additional EU to US plug converter is included for use in regions with US outlets.

2. Product Overview and What's in the Box

The MOSER 1871 CHROMSTYLE PRO is a professional cord/cordless hair clipper featuring a high-grade steel full metal blade set and Li-Ion battery technology.





Image: The MOSER 1871 CHROMSTYLE PRO Professional Hair Clipper, showcasing its sleek black and silver design with indicator lights.

Package Contents:



Image: The MOSER 1871 CHROMSTYLE PRO clipper alongside its accessories, including the charging stand, power adapter, four attachment combs, cleaning brush, and oil bottle.

- MOSER 1871 CHROMSTYLE PRO Hair Clipper
- Charging Stand
- Energy-efficient Plug-in Transformer (100-240V)
- 4 Slide-on Attachment Combs (3, 6, 9, 12 mm)
- Cleaning Brush
- Oil Bottle
- Additional EU to US Plug Converter

3. Setup

3.1 Initial Charging

Before first use, fully charge the clipper. Connect the plug-in transformer to the charging stand and then to a suitable power outlet (100-240V). Place the clipper in the charging stand. The LED indicator lights will show the charging status. A full charge takes approximately 60 minutes.

3.2 Attaching Combs

Select the desired cutting length comb (3, 6, 9, or 12 mm). Align the comb with the clipper blade and slide it on until it clicks securely into place.

3.3 Blade Adjustment

The clipper features an integrated cutting-length adjustment on the blade set, ranging from 0.7 mm to 3 mm. This can be adjusted without attachment combs for precise cutting lengths.

4. Operating Instructions

4.1 Powering On/Off

To turn the clipper on, slide the power switch to the 'I' position. To turn it off, slide the switch to the 'O' position.

4.2 Corded and Cordless Operation

The clipper can be used both corded (while plugged into the charger) or cordless. The Li-Ion battery provides up to 90 minutes of operating time on a full charge.

4.3 Cutting Hair

Ensure hair is clean and dry. Use the appropriate attachment comb for the desired length. Guide the clipper smoothly through the hair against the direction of hair growth. The chip-controlled motor ensures constant cutting power regardless of battery charge level or hair type.

5. Maintenance

5.1 Cleaning the Blade Set

After each use, turn off and unplug the clipper. The blade set is easily removable for cleaning. Press the release button (if applicable) or gently push the blade set forward to detach it. Use the provided cleaning brush to remove hair clippings from the blades and the clipper body. Do not rinse the clipper under water.

5.2 Oiling the Blades

Regular oiling of the blades is crucial for optimal performance and longevity. After cleaning, apply a few drops of the included oil to the teeth and friction surfaces of the blade set. Turn the clipper on for a few seconds to distribute the oil evenly. Wipe off any excess oil.

5.3 Storage

Store the clipper in a dry, cool place, away from direct sunlight and moisture. Ensure the clipper is clean and oiled before storing for extended periods.

6. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clipper does not turn on or charge.	Not properly connected to power; battery fully discharged; faulty charger/cable.	Ensure the transformer is securely plugged into both the charging stand and a working power outlet. Verify the clipper is correctly seated in the charging stand. Allow sufficient time for charging. If issues persist, contact customer support.
Clipper pulls hair or cuts poorly.	Blades are dull or dirty; insufficient oiling; hair is not clean/dry.	Clean the blade set thoroughly and oil it as per maintenance instructions. Ensure hair is clean and dry before cutting. If blades are dull, they may need replacement.
Red LED blinking or alarm sounding.	Indicates a charging error or low battery.	Ensure the clipper is correctly placed in the charging stand and the power supply is stable. If the battery is extremely low, it may take a few minutes for the charging indicator to stabilize. If the issue persists after proper charging, contact customer support.
Short battery operating time.	Battery not fully charged; battery degradation over time.	Ensure the clipper is fully charged before use (60 minutes quick charge). Li-Ion batteries have a finite lifespan; if significant degradation occurs, battery replacement may be necessary (contact manufacturer for service).

7. Specifications

Feature	Description
Model Number	1871-0071 (or 4015110006565)
Blade Set	Interchangeable stainless steel blade set MAGIC BLADE
Top Blade Width	46 mm
Cutting Length	0.7 - 3 mm (adjustable)
Operation Type	Corded/Rechargeable
Drive	DC motor with sound proofing, approx. 5500 rpm
Operating Voltage	100-240V, 50-60 Hz via plug-in transformer
Battery Type	Li-Ion (1 A battery required)
Operation Time (Battery)	Up to 90 minutes
Charging Time	60 minutes quick charge
Information System	Optical (LED) and Acoustic (signal-tones)
Dimensions	178 x 46 x 50 mm (7.01 x 1.81 x 1.97 inches)
Weight	290 g (10.58 ounces)
Manufacturer	WAHL GMBH

8. Warranty and Support

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or to inquire about replacement parts, please contact the manufacturer, WAHL GMBH, or your local authorized service center. Keep your proof of purchase for warranty claims.

© 2024 Moser. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question