

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TIMEX](#) /
- › [TIMEX Expedition Chronograph T49747 Men's Watch Instruction Manual](#)

## TIMEX T49747

# TIMEX Expedition Chronograph T49747 Men's Watch Instruction Manual

Model: T49747

[Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your TIMEX Expedition Chronograph T49747 watch. Please read this guide thoroughly to ensure proper use and care of your timepiece.



Image: The TIMEX Expedition Chronograph T49747 watch, featuring a white dial and a brown leather strap.

## SETUP

---

### 1. Setting the Time

1. Pull the crown out to the **second click** position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back in to the normal position to start the watch.

### 2. Setting the Date

1. Pull the crown out to the **first click** position.
2. Turn the crown clockwise or counter-clockwise to set the date.
3. Push the crown back in to the normal position.

### 3. Chronograph Hand Reset

If the chronograph hands do not reset to the zero position, follow these steps:

1. Pull the crown out to the **second click** position.
2. Press the top pusher (A) repeatedly to advance the chronograph seconds hand.

3. Press the bottom pusher (B) repeatedly to advance the chronograph minute hand.
4. Once all chronograph hands are aligned to the 12 o'clock (zero) position, push the crown back in to the normal position.

## OPERATING INSTRUCTIONS

---

### 1. Using the Chronograph

- To **start** the chronograph, press the top pusher (A).
- To **stop** the chronograph, press the top pusher (A) again.
- To **reset** the chronograph to zero, press the bottom pusher (B) while the chronograph is stopped.

### 2. Indiglo Night-Light

To activate the Indiglo night-light, press and hold the crown (C) for a few seconds. The entire dial will illuminate for easy viewing in low-light conditions.

### 3. Alarm Function

This watch features an alarm function. Refer to the detailed instructions provided in the full product manual for setting and activating the alarm. Typically, the alarm is set by pulling the crown to a specific position and rotating it to align the alarm hand with the desired time.

## MAINTENANCE

---

### 1. Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the watch stops or the Indiglo light dims significantly, the battery may need replacement. It is recommended to have the battery replaced by an authorized TIMEX service center to ensure proper sealing and water resistance.

### 2. Cleaning

Clean your watch regularly with a soft, dry cloth. For water-resistant models, a slightly damp cloth can be used, followed by drying. Avoid using chemical cleaners or abrasive materials.

### 3. Water Resistance

This watch has a water resistance depth of **100 Metres**. This means it is suitable for swimming and snorkeling, but not for high-impact water sports or diving. Ensure the crown is fully pushed in before any contact with water. Do not operate the pushers or crown while the watch is wet.

## TROUBLESHOOTING

---

### 1. Watch Not Running

- Ensure the crown is fully pushed into the normal operating position.
- If the watch still does not run, the battery may need to be replaced.

### 2. Chronograph Hands Not Resetting to Zero

Refer to the "Chronograph Hand Reset" section under Setup for detailed instructions on how to recalibrate the chronograph hands.

### 3. Indiglo Not Working

- Ensure the battery is not low. A dim or non-functional Indiglo is often an indicator of a low battery.
- Press and hold the crown firmly.

## SPECIFICATIONS

---

Model Number	T49747
Brand	TIMEX
Display Type	Chronograph
Movement Type	Quartz
Case Diameter	43 Millimetres
Case Thickness	18 Millimetres
Band Material	Leather
Band Colour	Brown
Dial Colour	White
Crystal Material	Mineral
Water Resistance Depth	100 Metres
Item Weight	89 Grams

## WARRANTY AND SUPPORT

---

### Warranty Information

This product comes with a **1 Year manufacturer warranty** from the date of purchase. To claim your warranty, you must produce either the original bill copy/invoice or the warranty card at any authorized Timex service center.

### Customer Support

For any service-related inquiries or feedback, please contact Timex India customer support:

- **Toll-free number:** 1800 419 2727 (Monday to Sunday, 10:00 am to 7:00 pm, except government holidays)
- **Email:** [custservice@timexindia.com](mailto:custservice@timexindia.com), [feedback@timexindia.com](mailto:feedback@timexindia.com)

**Timex Repair & Service Centres**

<p><b>Australia</b> Design Accessories PO Box 2576 Town Point NSW 2026 Australia Tel: 1800060399 Fax: 61 (0)2 96463066</p> <p><b>China</b> Timex (Shanghai) Trading Co. Ltd. Room 2501 2504, 2506, Building 27 Pa. East International Plaza 312 Xun. Yu Road Shanghai 200051 China Tel: 86 21 6233 1873 Fax: 86 21 6239 1871</p> <p><b>Guam</b> Timex &amp; Sports Inc. Service Center P.O. Box 10800 Guam Timexes Lubat Mail Tarrunung Guam 96913 Tel: 1 671 647 2672 Fax: 1 671 647 2006</p> <p><b>Hong Kong</b> Timex Marketing Co. Ltd. B. 14/F. High Street Ind. Bldg. 144 Hong Kong Tel: 852 251 0809 Fax: 852 251 4088</p> <p><b>Indonesia</b> Email: <a href="mailto:service@timex.com">service@timex.com</a> Tel: 62 21 2647707 &amp; 62 21 2648464</p> <p><b>Japan</b> CRSH Japan, A.K.A. Watch Service Center 3-4-19 Min. Misaki-ku Tokyo 136-8503 Japan Tel: 81 3 533 5443 4517 Fax: 81 3 533 5441 4027</p> <p><b>Korea</b> Watch Firm Marketing Service Specialty Corporation 163 25F 165 70, Shinbundang-dong, Dongjak-gu, Seoul, Korea 156-718 Korea Tel: 82 2 2014 2208 Fax: 82 2 2024 1519</p> <p><b>Malaysia</b> OMSI Marketing Services Sdn. Bhd. OMSI Service Centre No. 21, Jalan Universiti, PO Box 47 42050 Petaling Jaya Selangor Malaysia Tel: 603 7566 6308 Fax: 603 7566 4778</p>	<p><b>New Zealand</b> G.M.H. McKay &amp; Sons/High Ltd. Part 8 Service Department 20 Phoenix Street Lower Hut 5072 Hastings New Zealand Tel: 64 614 935 5798 Fax: 61 614 936 9638</p> <p><b>Philippines</b> Nipponwatch International Corporation Timex Shop Bldg. 2nd Floor 222 Building A, 2nd Level Ortigas Center Alabang Jala Jaring Center 1055 Alabang Road, Muntinlupa City Philippines Tel: 63 2 894 9031 Fax: 63 2 894 2110</p> <p><b>Singapore</b> Crystal Time (P) Ltd. 10 Tanjong Pagar Road Crystal Time Building Singapore 047733 Tel: 65 4747 8888 Fax: 65 4746 1579</p> <p><b>Taiwan</b> Pines Electronics Co. (E. B. B.) No. 101, Cheng-Hong Road, San-Sung Town, Taiwan 111 Tel: 886 2 2708 7100 Fax: 886 2 2603 7517</p> <p><b>Thailand</b> K.O. Marketing (Thailand) Ltd. Timex Service Center 14, P.O. Floor 140 Chulalongkorn Road, Pathumwan 101, Samsorng Thailand 10300 Tel: 66 2 251 0521 + 6 Fax: 66 2 251 0526</p> <p><b>United Kingdom</b> Timex Group (UK) PO Box 2222, Middlesbrough, Cumbria, CA6 2ZK, United Kingdom Tel: 394607 205 960 Fax: 394607 205 481 4816</p> <p><b>United States of America</b> Timex 1350 West Ave North Lake Park, Florida U.S.A. Tel: 1 800 4 48 8038 Fax: 1 827 570 5747</p> <p><b>Vietnam</b> Timex (Vietnam) Co. Ltd. No. 4, Phanhoi Street Hanoi Vietnam Tel: 84 4 821 0571 Fax: 84 4 821 0517</p> <p><b>China 1</b> Timex (China) Co. Ltd. No. 4, Phanhoi Street Hanoi Vietnam Tel: 84 4 821 0571 Fax: 84 4 821 0517</p>	
--	---	--

Image: A leaflet displaying Timex repair and service center contact information for various regions.