

Hasbro 7789

Hasbro Gaming Bop It Instruction Manual

Model: 7789

Brand: Hasbro

1. INTRODUCTION

Welcome to the Hasbro Gaming Bop It instruction manual. This guide provides essential information for setting up, operating, and maintaining your Bop It game unit. The Bop It game challenges players to react quickly to spoken commands by performing specific actions on the device. Follow these instructions to ensure proper use and enjoyment of your game.

2. PRODUCT COMPONENTS

The Bop It unit is designed with distinct interactive components:

- **Bop Button:** A large, central button located on the main body of the unit.
- **Pull Handle:** A blue knob located at one end of the unit, designed to be pulled.
- **Twist Knob:** A yellow component located at the opposite end, designed to be twisted.
- **Shout Microphone:** A green lever or sensor, which activates when a sound is directed towards it.



Image 2.1: The Hasbro Gaming Bop It game unit, showcasing its main interactive components within its retail packaging.

3. GETTING STARTED (SETUP)

3.1 Battery Installation

The Bop It game requires 3 AAA batteries, which are included with the unit. A Phillips screwdriver is necessary for battery replacement.

1. Locate the battery compartment on the back of the Bop It unit.
2. Using a Phillips screwdriver, unscrew the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

3.2 Powering On

To activate the game unit, pull the blue 'Pull It' handle. The unit will announce its readiness to play.

4. HOW TO PLAY (OPERATING)

The objective of Bop It is to follow the unit's spoken commands as quickly and accurately as possible before a buzzer sounds.

4.1 Game Modes

The Bop It game offers multiple play modes:

- **Solo Mode:** Play individually to achieve the highest score. The game progressively increases in speed and complexity.
- **Pass It Mode:** Designed for multiple players. Perform the action and quickly pass the unit to the next player.
- **Party Mode:** Similar to Pass It, but may incorporate additional body-part commands (e.g., use your knees, elbows, or hips).

To switch between modes, press the white button with three grey dots, typically located near the Bop button.

4.2 Performing Actions

When the unit calls out a command, perform the corresponding action:

- **"Bop It!":** Press the large central Bop button.
- **"Pull It!":** Pull the blue handle.
- **"Twist It!":** Twist the yellow knob.
- **"Shout It!":** Make a sound towards the green microphone lever. The 'Shout It' feature can be toggled on or off.

4.3 Skill Levels

As you improve your reaction time and accuracy, the game unlocks higher skill levels: Novice, Expert, and Master. Each level introduces faster commands and more complex sequences.

4.4 Volume Control

To adjust the volume, twist the yellow 'Twist It' knob while the game is not actively giving commands.

4.5 Automatic Shut-off

The Bop It unit features an automatic shut-off function to conserve battery life. If left untouched for a period, the unit will announce, "I'm going to sleep," and power down. To reactivate, pull the blue 'Pull It' handle.

5. CARE AND MAINTENANCE

5.1 Battery Replacement

When the game unit's performance diminishes or it fails to power on, replace the batteries following the instructions in Section 3.1. Note that changing batteries will reset any high scores.

5.2 Cleaning

To clean the Bop It unit, wipe it with a dry, soft cloth. Do not immerse the unit in water or use abrasive cleaners.

6. TROUBLESHOOTING

- **No sound or unit does not power on:** Ensure batteries are correctly installed and fully charged. Replace batteries if necessary.
- **Game not responding to actions:** Verify that actions are performed correctly and within the allotted time. Check battery level.

- **High scores reset:** This is a normal occurrence when batteries are replaced. High scores are not saved permanently.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	7789
Product Dimensions	2.75 x 10.5 x 10.5 inches
Item Weight	3.2 ounces
Recommended Age	8 - 18 years
Batteries Required	3 AAA batteries (included)
Manufacturer	Hasbro
Release Date	June 7, 2009

8. WARRANTY INFORMATION

Specific warranty details for the Hasbro Gaming Bop It (Model 7789) are not provided in this manual. For information regarding product warranty, please refer to the documentation included with your purchase or contact Hasbro customer support directly.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Hasbro Gaming Bop It, please visit the official Hasbro website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.