

Kärcher FP 303

Kärcher FP303 Waxed Wood Polishing Pads Instruction Manual

This manual provides essential information for the proper use and maintenance of your Kärcher FP303 Waxed Wood Polishing Pads.

1. PRODUCT OVERVIEW

The Kärcher FP303 Waxed Wood Polishing Pads are designed as an accessory for the Kärcher FP 303 vacuum floor polisher. These high-quality microfiber pads are specifically formulated for polishing waxed hard surfaces and floors with an oil-wax finish, ensuring optimal results.

Key Features:

- Set of 3 polishing pads.
- Made from high-quality microfibers.
- Designed for polishing waxed hard surfaces and floors with an oil-wax finish.
- Easy attachment to polisher discs.

2. COMPATIBILITY

These polishing pads are compatible with the Kärcher FP 303 vacuum floor polisher. They are ideal for use on a variety of hard floor surfaces, including:

- Waxed wood flooring
- Parquet
- Stone
- Linoleum
- Cork
- PVC
- Laminate floors

3. SETUP

Before operating your Kärcher FP 303 vacuum floor polisher with these pads, ensure they are correctly attached.

1. Ensure the FP 303 polisher is unplugged and turned off.
2. Locate the polishing discs on the underside of the polisher.
3. Align each Kärcher FP303 polishing pad with a disc. The pads are designed for simple attachment, typically adhering via a hook-and-loop system or similar mechanism.
4. Press firmly to secure each pad to its respective disc, ensuring it is centered and flat.
5. Verify that all three pads are securely attached before plugging in and operating the polisher.

KÄRCHER

ORIGINAL ACCESSORY



Image: Three Kärcher FP303 Waxed Wood Polishing Pads. These pads are designed to be easily attached to the polishing discs of the Kärcher FP 303 vacuum floor polisher.

4. OPERATING INSTRUCTIONS

Once the pads are securely attached to your Kärcher FP 303 polisher, you can begin the polishing process. Always refer to your FP 303 polisher's main instruction manual for specific operating procedures.

- Ensure the floor surface is clean and free of debris before polishing.
- Apply the appropriate Kärcher floor care product for waxed wood floors as directed by the product's instructions.
- Turn on the polisher and guide it evenly across the floor surface, allowing the pads to work.

- Overlap passes slightly to ensure complete coverage.
- After polishing, allow the floor to dry completely according to the floor care product's instructions.

5. MAINTENANCE

Proper maintenance of your polishing pads will extend their lifespan and ensure consistent polishing results.

- **Cleaning:** After each use, remove the pads from the polisher. The microfiber pads can be washed gently by hand or machine washed on a delicate cycle with mild detergent. Avoid using bleach or fabric softeners, as these can damage the microfiber structure.
- **Drying:** Air dry the pads completely before storing or reusing them. Do not tumble dry, as high heat can degrade the microfiber.
- **Storage:** Store clean, dry pads in a clean, dry place away from direct sunlight.
- **Replacement:** Replace pads when they show signs of wear, such as reduced polishing effectiveness, matting, or damage to the microfiber.

6. TROUBLESHOOTING

If you encounter issues during the polishing process, consider the following common solutions:

- **Poor Polishing Results:**
 - Ensure the pads are clean and free of embedded dirt or wax residue.
 - Verify that the pads are securely and evenly attached to the polisher discs.
 - Check if the correct floor care product for waxed wood is being used and applied according to its instructions.
 - Pads may be worn out and require replacement.
- **Pads Detaching During Use:**
 - Ensure pads were firmly pressed onto the discs during setup.
 - Inspect the hook-and-loop (or similar) attachment system on both the pads and the polisher discs for wear or damage.

7. SPECIFICATIONS

| Feature | Detail |
|------------------------|---|
| Brand | Karcher |
| Model Name | FP 303 (Pads for) |
| Material | Microfiber (Wood) |
| Recommended Uses | Polishing |
| Surface Recommendation | Ceramic, Stone, Wood, Linoleum, Cork, PVC, Laminate |
| Color | White |
| Item Package Quantity | 3 pads |
| Item Weight | 0.04 Kilograms (total for 3 pads) |
| ASIN | B001THMR7M |

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or to purchase replacement parts, please contact Kärcher customer service directly or visit the official Kärcher website. Keep your purchase receipt as proof of purchase.

You can find more information and contact details on the Kärcher Store on Amazon.