

Singer 2273

Singer Tradition 2273 Sewing Machine User Manual

Model: 2273 | Brand: Singer

1. INTRODUCTION

Welcome to the user manual for your Singer Tradition 2273 Sewing Machine. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your machine to ensure optimal performance and longevity. Please read this manual thoroughly before using your sewing machine for the first time and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using this sewing machine.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always unplug the sewing machine from the electrical outlet immediately after using and before cleaning, removing covers, lubricating, or making any other user servicing adjustments.
- Never operate the machine if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Do not use outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. GETTING STARTED: INITIAL SETUP

3.1 Unpacking

Carefully remove the sewing machine from its packaging. Ensure all accessories are present. Retain the packaging for storage or transport.

3.2 Power Connection

Place the machine on a stable, flat surface. Connect the power cord to the machine and then to a suitable

electrical outlet. Ensure the power switch is in the 'OFF' position before connecting.

3.3 Threading the Machine

Proper threading is crucial for smooth operation. Follow the numbered guides on the machine for correct upper thread path and bobbin winding/embedment.



Figure 3.1: Front view of the Singer Tradition 2273 Sewing Machine, illustrating its compact design and control dials.



Figure 3.2: The Singer Tradition 2273 Sewing Machine positioned on a workspace, ready for use, with various sewing threads and tools nearby.

4. OPERATING YOUR SEWING MACHINE

4.1 Basic Stitch Selection

The Singer Tradition 2273 offers 34 adjustable stitch patterns. Use the stitch selector dial to choose your desired stitch. Refer to the stitch pattern chart for visual guidance.

50 (3 dials 23 stitch patterns)

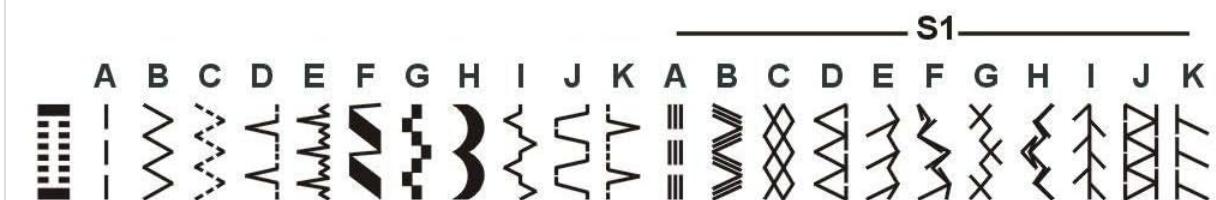


Figure 4.1: A detailed diagram showcasing the 34 available stitch patterns, including utility and decorative options, for the Singer Tradition 2273.

4.2 Adjusting Stitch Length and Width

The machine features separate dials for adjusting stitch length and width, allowing for precise control over your sewing projects. Rotate the respective dials to achieve the desired stitch dimensions.

4.3 Automatic Needle Threader

To simplify threading, utilize the integrated automatic needle threader. Follow the instructions provided on the machine or in the quick start guide for proper use.

4.4 One-Step Buttonhole

The Singer Tradition 2273 includes a convenient one-step buttonhole function. Attach the buttonhole foot and follow the machine's markings to create perfectly sized buttonholes with ease.

4.5 Reverse Stitching

To secure your stitches at the beginning and end of a seam, press and hold the reverse lever. This function allows the machine to sew backward, reinforcing the seam.

5. CARE AND MAINTENANCE

Regular maintenance ensures your sewing machine remains in excellent working condition.

5.1 Cleaning

Periodically clean lint and dust from the bobbin area and feed dogs using the brush provided or a small, soft brush. Always unplug the machine before cleaning.

5.2 Oiling

Refer to your machine's specific oiling points in the detailed manual. Apply a small drop of sewing machine oil to designated areas as recommended to keep moving parts lubricated.

5.3 Needle Replacement

Replace the needle regularly, especially if it becomes bent, dull, or if you notice skipped stitches. Ensure the flat side of the needle faces the back of the machine when inserting.

6. TROUBLESHOOTING COMMON ISSUES

This section addresses common problems you might encounter and their solutions.

- Skipped Stitches:** Check if the needle is bent or dull, ensure it's inserted correctly, and verify that the correct needle type is used for your fabric.
- Thread Breaking:** Re-thread the machine completely, check for proper tension, ensure the needle is not damaged, and use quality thread.
- Machine Jamming:** Remove any tangled threads from the bobbin case and feed dog area. Ensure the bobbin is wound and inserted correctly.
- Uneven Stitches:** Adjust tension settings, ensure consistent fabric feeding, and check for proper needle and thread combination.

7. PRODUCT SPECIFICATIONS


Feature	Specification
Brand	Singer
Model Number	2273
Color	White
Product Dimensions (L x W x H)	37.4 x 16.5 x 36 cm
Item Weight	7 Kilograms

Material	Plastic
Power Source	Corded Electric
Number of Stitches	34 Adjustable Stitches
Automatic Needle Threader	Yes
Buttonhole Type	One-Step Automatic
LED Lighting	Yes
UPC	787162859638, 374318824000

8. WARRANTY AND CUSTOMER SUPPORT

The Singer Tradition 2273 Sewing Machine comes with a manufacturer's warranty. Spare parts availability is typically supported for up to 7 years from the date of purchase. For detailed warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official Singer website. Keep your proof of purchase for warranty claims.

Related Documents - 2273

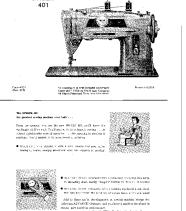	<p>Singer Tradition 2250 Sewing Machine User Manual</p> <p>This user manual provides comprehensive instructions for operating and maintaining the Singer Tradition 2250 sewing machine. It covers safety precautions, machine parts, accessories, threading, stitch selection, various sewing techniques, maintenance, and troubleshooting.</p>
	<p>Singer Sewing Machine Parts Catalog: Models 404-1, 404-4, 404-5</p> <p>Official parts catalog and ordering guide from The Singer Manufacturing Company for Singer sewing machine models 404-1, 404-4, and 404-5. Features detailed part listings, numbers, and instructions for maintenance and repair.</p>
	<p>Singer 401 Sewing Machine Instruction Manual</p> <p>Comprehensive guide to operating and maintaining the Singer 401 sewing machine, covering features, threading, bobbin winding, and stitch selection.</p>

SINGER
500A

[Singer 500A Sewing Machine Parts List and Diagrams](#)

Explore the official parts list and detailed diagrams for the Singer 500A sewing machine, including electrical components for related models. Find part numbers for maintenance and repair.

SINGER



6199/6180/6160

KULLANIM KİLAVUZU

[Singer 6199/6180/6160 Dikiş Makinesi Kullanım Kılavuzu](#)

Singer 6199, 6180 ve 6160 ev tipi dikiş makineleri için kapsamlı kullanım kılavuzu. Bu belge, makinenin güvenli kurulumu, tüm dikiş fonksiyonlarının kullanımı, düzenli bakım ve sorun giderme adımları hakkında detaylı bilgiler sunar.

SINGER Tradition



Liste de pièces
Lista de Piezas
Parts List

[Singer Tradition 2250, 2259, 2263 Parts List](#)

This document provides a comprehensive parts list for the Singer Tradition sewing machine models 2250, 2259, and 2263, including detailed diagrams and part numbers for each component.