

[manuals.plus](#) /

› [SIEMENS](#) /

› [Siemens HF15M562 Microwave Oven User Manual](#)

## **SIEMENS HF15M562**

### **Siemens HF15M562 Microwave Oven User Manual**


Model: HF15M562

#### **1. INTRODUCTION**

---

Thank you for choosing the Siemens HF15M562 Microwave Oven. This appliance is designed for convenient and efficient cooking, reheating, and defrosting. Please read this manual carefully to ensure safe and optimal use of your new microwave oven. Keep these instructions handy for future reference.

# Mikrowellengeräte im Oberschrank

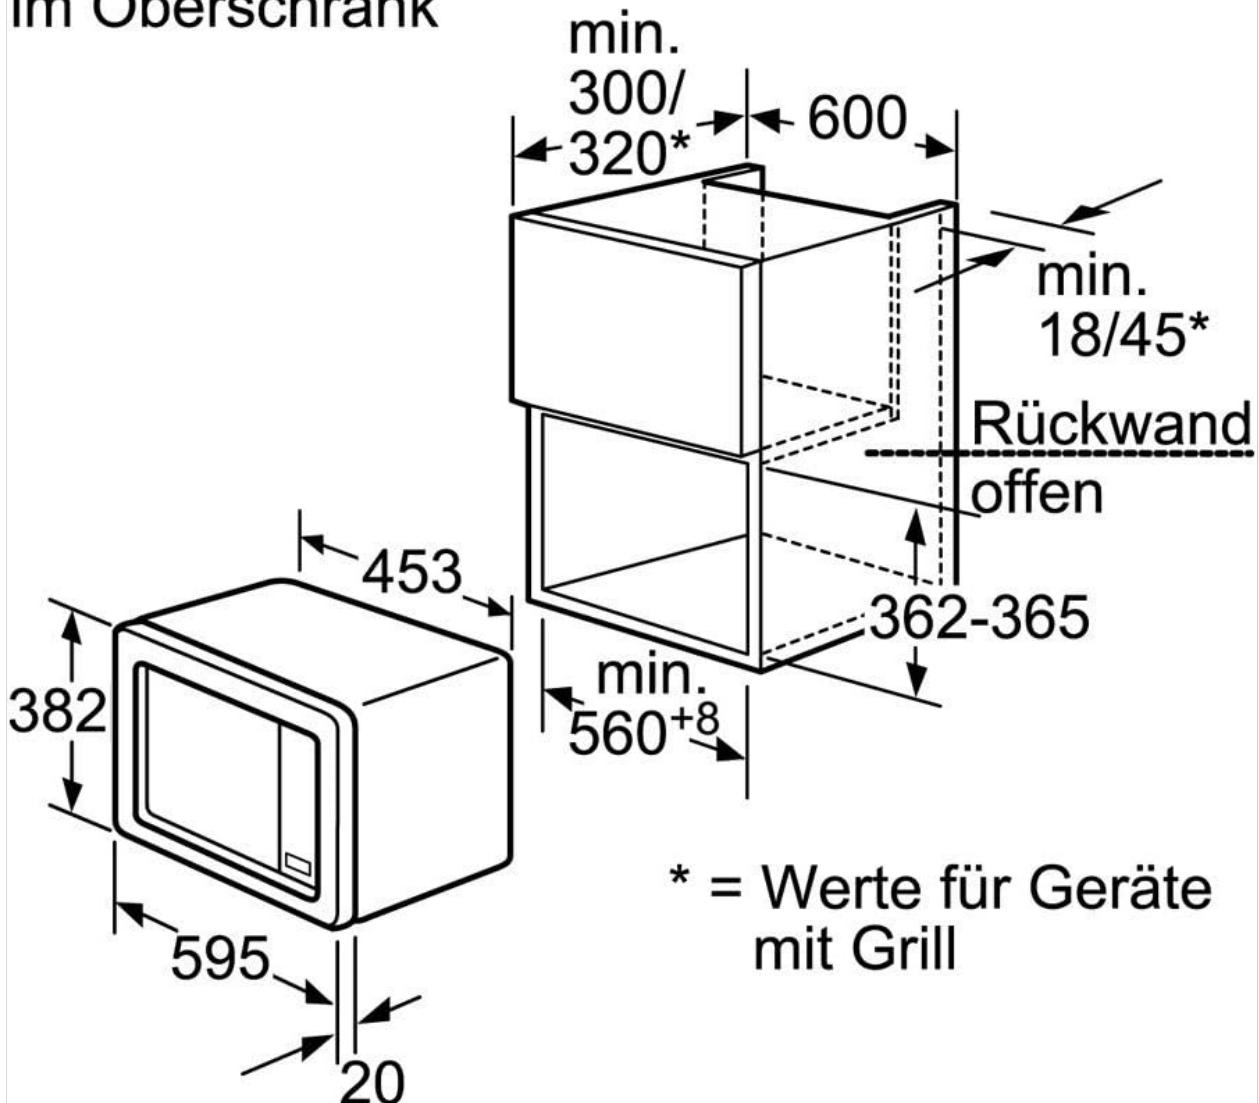

Front view of the Siemens HF15M562 Microwave Oven. This electronic microwave features a sleek design suitable for built-in installation.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not operate the microwave oven when empty.
- Use only microwave-safe cookware. Metal containers or dishes with metallic trim are not suitable.
- Do not heat sealed containers, such as baby food jars or bottles, as they may explode.
- Supervise children closely when the microwave oven is in use.
- Never attempt to tamper with or repair the microwave oven yourself. Contact qualified service personnel.
- Ensure the power cord is not damaged and is properly grounded.
- Do not use the microwave oven for purposes other than heating food.

## 3. SETUP AND INSTALLATION

The Siemens HF15M562 is designed for built-in installation in an overhead cabinet. Proper installation is crucial for safe and efficient operation.

### 3.1 Unpacking

- Carefully remove the microwave oven from its packaging.
- Check for any damage during transit. If damaged, do not install or operate the appliance.
- Remove all packing materials, including any protective films or tapes from the interior and exterior.

### 3.2 Installation Requirements

Ensure the installation area meets the following criteria:

- The cabinet must be sturdy enough to support the weight of the microwave oven (approximately 16.8 kg).
- Adequate ventilation must be provided. The rear wall of the cabinet should be open for proper airflow.
- The electrical outlet must be easily accessible and properly grounded, supplying 230 Volts.

### 3.3 Installation Diagram



This diagram illustrates the required dimensions for installing the Siemens HF15M562 microwave oven into an overhead cabinet. It shows minimum clearances and specific measurements in millimeters for width, height, and depth of the appliance and the cabinet opening. Key dimensions include a minimum cabinet width of 600mm, appliance width of 595mm, height of 382mm, and depth of 453mm. The diagram also indicates minimum clearances for the rear wall (Rückwand) and an open back for ventilation. Values marked with an asterisk (\*) are for models with a grill function.

### 3.4 First Use

- Before first use, wipe the interior and exterior surfaces with a damp cloth.
- Place the turntable and turntable support ring correctly inside the oven.

- Plug the appliance into a grounded electrical outlet.
- Set the current time on the electronic clock as per the display instructions.

## 4. OPERATING INSTRUCTIONS

---

Your Siemens HF15M562 microwave oven features electronic controls for precise cooking.

### 4.1 Basic Microwave Operation

1. Place food in a microwave-safe dish on the turntable.
2. Close the oven door securely.
3. Select the desired microwave power level (there are 5 available power levels).
4. Set the cooking time using the electronic controls.
5. Press the Start button to begin cooking.

### 4.2 autoCook Programs

The autoCook function offers 7 pre-programmed recipes for various dishes. Refer to the appliance's display and control panel for specific autoCook program selection and usage.

### 4.3 Cooking Memory

The microwave oven includes a cooking memory feature for 1 recipe. This allows you to save frequently used settings for quick access. Consult the control panel instructions for programming and recalling a stored recipe.

### 4.4 Programmable Electronic Clock

The electronic clock can be programmed to stop cooking at a specific time, offering convenience for timed cooking processes.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your microwave oven and ensure hygienic operation.

- Always unplug the microwave oven before cleaning.
- **Interior:** The interior is made of stainless steel. Clean with a damp cloth and mild detergent. For stubborn food splatters, place a bowl of water with lemon juice inside and heat for a few minutes to loosen residue, then wipe clean.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Turntable:** The 24.5 cm diameter glass turntable and its support ring can be removed and washed in warm, soapy water or in a dishwasher.
- Ensure all parts are dry before reassembling and using the microwave oven.

## 6. TROUBLESHOOTING

---

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Microwave does not start	Door not closed properly; Power cord unplugged; Blown fuse/tripped circuit breaker	Ensure door is firmly closed; Check power connection; Reset circuit breaker or replace fuse
Food not heating	Incorrect power level or cooking time set; Microwave-safe dish not used	Adjust power level and cooking time; Use appropriate microwave-safe cookware
Turntable not rotating	Turntable not correctly placed; Debris under turntable ring	Re-position turntable and ring; Clean area under turntable
Display not working	Power interruption	Check power supply; Reset the clock

If the problem persists after attempting these solutions, please contact Siemens customer service.

## 7. SPECIFICATIONS

---

Key technical specifications for the Siemens HF15M562 Microwave Oven:

- **Brand:** SIEMENS
- **Model Number:** HF15M562
- **Color:** White
- **Installation Type:** Built-in
- **Capacity:** 17 Liters
- **Microwave Output Power:** 800 Watts
- **Voltage:** 230 Volts
- **Material (Interior):** Stainless Steel
- **Product Dimensions (H x W x D):** Approximately 382 x 595 x 453 mm (refer to installation diagram for exact built-in dimensions)
- **Product Weight:** Approximately 16.8 kg
- **Turntable Diameter:** 24.5 cm
- **Power Levels:** 5
- **autoCook Programs:** 7 recipes
- **Cooking Memory:** 1 recipe
- **Electronic Clock:** Programmable with cooking stop function

## 8. WARRANTY AND SUPPORT

---

For warranty information, technical support, or service requests, please refer to the warranty card included with your product or visit the official Siemens website. Keep your purchase receipt as proof of purchase.

**Online Support:** [www.siemens-home.bsh-group.com](http://www.siemens-home.bsh-group.com)

