

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips](#) /
- › [Philips GoGear Vibe 4 GB MP3 Video Player User Manual](#)

Philips SA1VBE04K/17

Philips GoGear Vibe User Manual

Model: SA1VBE04K/17

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Philips GoGear Vibe 4 GB MP3 Video Player. Please read this manual thoroughly before using your device to ensure optimal performance and longevity.

The Philips GoGear Vibe Portable AV Player offers a compact design with a 1.5-inch full-color display, enabling easy navigation, album art display, and efficient file organization.

PRODUCT OVERVIEW



Figure 1: Philips GoGear Vibe MP3 Video Player. The device features a color screen for media playback and navigation, along with physical control buttons. Black earbuds are shown alongside the player.

The Philips GoGear Vibe is designed for portable audio and video entertainment. Key features include:

- 1.5-inch full-color display for clear navigation and album art.
- 4 GB internal memory for storing music and videos.
- Support for MP3, WMA, and DRM music playback.
- Integrated FM radio with RDS and 20 preset stations.
- Up to 25 hours of music playback or 4 hours of video playback on a single charge.
- Easy transfer of video content from the internet.

Package Contents:

Ensure all items are present in the package:

- Philips GoGear Vibe MP3 Video Player
- USB Cable
- User Manual (this document)

Initial Charging:

Before first use, fully charge your GoGear Vibe. Connect the device to a computer's USB port using the supplied USB cable. The battery indicator on the screen will show charging progress. A full charge typically takes approximately 3-4 hours.

Connecting to a Computer:

To transfer media files, connect your GoGear Vibe to your computer using the USB cable. The device will appear as a removable disk drive. You can then drag and drop music, video, and photo files directly to the player's storage.

For optimal performance and access to all features, it is recommended to install the Philips Songbird software (if provided with your device or available for download from the official Philips support website). This software facilitates media management and firmware updates.

OPERATING INSTRUCTIONS

Power On/Off:

To power on the device, press and hold the power button (usually located on the side or top) until the screen illuminates. To power off, press and hold the power button again until the device shuts down.

Navigation:

Use the directional pad or touch controls (if applicable) to navigate through menus. The central button typically acts as a selection or confirmation button. The 'back' or 'return' button allows you to go back to the previous menu.

Music Playback:

1. From the main menu, select "Music".
2. Browse by Artist, Album, Song, or Playlist.
3. Select a track to begin playback.
4. Use the volume controls (side buttons) to adjust audio levels.
5. Press the play/pause button to pause or resume playback.
6. Use the skip buttons to move to the next or previous track.

Video Playback:

The GoGear Vibe supports video playback on its 1.5-inch color display. Ensure videos are in a compatible format for smooth playback. You can easily download videos from the internet and transfer them to your device.

1. From the main menu, select "Video".

2. Select a video file to begin playback.
3. Use the controls to play, pause, fast forward, or rewind.

FM Radio:

To use the FM radio, ensure your headphones are connected as they act as the antenna.

1. From the main menu, select "FM Radio".
2. Use the scan function to find available stations.
3. Save your favorite stations to one of the 20 available presets.

MAINTENANCE

Cleaning:

Wipe the device with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or solvents, as these may damage the surface.

Storage:

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to maintain battery health.

Battery Care:

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect the device to a power source using the USB cable. If unresponsive, try performing a soft reset (refer to the device's specific reset procedure, often a small pinhole button).
Cannot transfer files to the device.	Verify the USB cable is securely connected to both the device and the computer. Ensure the device is recognized by your computer (check 'My Computer' or 'This PC'). Try a different USB port or cable. Restart both the device and the computer.

Problem	Solution
No sound during playback.	Check the volume level on the device. Ensure headphones are properly plugged in. Test with different headphones. Verify the audio file is not corrupted.
FM radio not working.	Ensure headphones are connected, as they serve as the antenna. Move to an area with better signal reception.

SPECIFICATIONS

Model Name: GoGear Vibe

Model Number: SA1VBE04K/17

Memory Storage Capacity: 4 GB

Screen Size: 1.5 Inches

Display Technology: LCD

Color: Black

Connectivity Technology: Aux

Special Features: Video Playback, Equalizer, FM Radio

Product Dimensions: 1.2 x 4.7 x 6.9 inches

Item Weight: 0.8 ounces

Manufacturer: Philips Consumer Electronics

Compatible Devices: Laptop

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Philips support website. You can also find additional resources and FAQs on the [Philips Brand Store on Amazon](#).

Please retain your proof of purchase for warranty claims.