

TomTom 1EM0.052.01

TomTom XL 340 4.3-Inch Portable GPS Navigator User Manual

Model: 1EM0.052.01

INTRODUCTION

This manual provides comprehensive instructions for the TomTom XL 340 4.3-Inch Portable GPS Navigator. The TomTom XL 340 is designed to offer complete navigation with a widescreen display, guiding you to your destination with ease. It includes preloaded maps for the United States, Canada, and Mexico, along with millions of points of interest.

Key features include:

- **4.3-inch WQVGA Touchscreen:** For clear map viewing and easy interaction.
- **Spoken Turn-by-Turn Instructions:** Clear audio guidance for navigation.
- **IQ Routes Technology:** Calculates the fastest routes based on actual average speeds.
- **Advanced Lane Guidance:** Provides photorealistic images for complex multi-lane exits.
- **TomTom Map Share Technology:** Allows users to modify maps and benefit from community updates.
- **"Help Me!" Emergency Menu:** Quick access to local emergency services.



Image: The TomTom XL 340 GPS Navigator showing a detailed map with navigation information.

WHAT'S IN THE BOX

Upon opening your TomTom XL 340 package, please verify that all components are present:

- TomTom XL 340 Device
- Fold & Go EasyPort Mount
- Adhesive Mounting Disk
- USB Cable
- Cigarette Lighter Adaptor
- Documentation Pack
- Batteries (included)



Image: The retail packaging for the TomTom XL 340, indicating the product inside.

SETUP

The TomTom XL 340 is designed for quick setup, allowing you to begin navigation shortly after unboxing.

1. **Charge the Device:** Before first use, connect the TomTom XL 340 to your vehicle's cigarette lighter socket using the provided adaptor and USB cable, or to a computer via the USB cable. Ensure the device is fully charged for optimal performance.
2. **Mounting the Device:**
 - Attach the Fold & Go EasyPort Mount to the back of the TomTom device.
 - Choose a suitable location on your windshield or dashboard that does not obstruct your view of the road. Use the adhesive mounting disk for dashboard placement if desired.
 - Securely attach the mount to the chosen surface. Ensure the device is stable and easily visible without requiring excessive eye movement from the road.



Image: Rear view of the TomTom XL 340 showing the Fold & Go EasyPort mount mechanism.

3. **Power On:** Press and hold the power button until the TomTom logo appears.
4. **Initial Configuration:** Follow the on-screen prompts to select your language, region, and other initial settings. The device is designed to work right out of the box ("Plug & Go").

OPERATING INSTRUCTIONS

Basic Navigation

To plan a route, tap the screen to access the main menu. Select "Navigate to..." and choose your destination input method (e.g., Address, Point of Interest, Recent Destination).

- **Entering an Address:** Input the city, street, and house number. The device will suggest options as you type.

- **Points of Interest (POIs):** Search for gas stations, restaurants, hotels, and more. You can search near your current location, near your destination, or in a specific city.
- **Spoken Instructions:** The device provides clear, spoken turn-by-turn directions. Pay attention to these instructions in conjunction with the visual map display.

Advanced Navigation Features

- **IQ Routes Technology:** This feature uses historical travel speed data to calculate the most efficient route, considering actual traffic patterns rather than just posted speed limits. This helps in finding faster routes, especially during peak hours.
- **Advanced Lane Guidance:** When approaching complex junctions or multi-lane exits, the device will display a photorealistic image of the road ahead, highlighting the correct lane to be in. This enhances confidence and reduces the chance of missing turns.



Image: The TomTom XL 340 mounted, displaying navigation information on its screen.

TomTom Map Share

TomTom Map Share technology allows you to make corrections to your map directly on the device. You can modify street names, street direction, POIs, road speeds, and turn restrictions. These changes can be shared with the TomTom community and you can also benefit from verified changes made by other users, ensuring your maps are always up-to-date.

"Help Me!" Emergency Menu

For added safety, the "Help Me!" menu provides quick access to local emergency providers. In an emergency, you can easily find and navigate to the nearest police station, fire station, hospital, or other essential services.

MAINTENANCE

Map Updates

Keeping your maps updated is crucial for accurate navigation. TomTom offers a "30-Day Latest Map Guarantee," ensuring your device has the most current maps upon purchase. Regular map updates are available through TomTom HOME software.

- **TomTom HOME:** This desktop application allows you to manage your device, download map updates, and access other services. Connect your TomTom XL 340 to your computer using the USB cable and launch TomTom HOME to check for available updates.
- **Map Share Updates:** As mentioned, Map Share allows for user-generated corrections. Regularly synchronize your device with TomTom HOME to receive verified Map Share updates from the community.

Device Care

- Keep the screen clean using a soft, lint-free cloth. Avoid abrasive cleaners.
- Store the device in a cool, dry place when not in use.
- Avoid exposing the device to extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your TomTom XL 340, consider the following common solutions:

- **Device Not Powering On:**
 - Ensure the device is fully charged. Connect it to a power source using the provided car charger or USB cable.
 - Perform a soft reset by pressing and holding the power button for at least 15-20 seconds until you hear a drum roll sound or the device restarts.
- **No GPS Signal / Slow Satellite Fix:**
 - Ensure the device has a clear view of the sky. Obstructions like tall buildings, tunnels, or dense foliage can interfere with GPS reception.
 - Move the device to a different location in your vehicle, away from other electronic devices that might cause interference.
 - Ensure your QuickGPSfix data is up-to-date via TomTom HOME. This data helps the device find satellites faster.
- **Inaccurate Directions / Outdated Maps:**
 - Connect your device to TomTom HOME and check for the latest map updates.
 - Verify that the correct region's map is selected for your current location.
 - Utilize TomTom Map Share to correct any inaccuracies you encounter and download verified corrections from other users.
- **Touchscreen Unresponsive:**
 - Ensure the screen is clean and free of debris.
 - Perform a soft reset of the device.
 - If the issue persists, contact TomTom support.

SPECIFICATIONS

Feature	Detail
Model Number	1EM0.052.01
Screen Size	4.3 Inches
Resolution	480 x 272 pixels
Product Dimensions	4.7 x 0.8 x 3.2 inches
Item Weight	6.5 ounces
Connectivity Technology	USB
Map Type	North America (United States, Canada, Mexico)
Special Feature	Touchscreen
Vehicle Service Type	Car
Memory Storage Capacity	1 GB
Mounting Type	Wrist Mount (referring to the EasyPort mount's compact design)

WARRANTY AND SUPPORT


For detailed warranty information, please refer to the documentation pack included with your TomTom XL 340 or visit the official TomTom website. TomTom is committed to providing reliable navigation solutions and customer support.




For further assistance, including software updates, troubleshooting guides, and frequently asked questions, please visit the TomTom support website or use the TomTom HOME application.

Note: Specific warranty terms may vary by region and purchase date.

© TomTom. All rights reserved.

Related Documents

<p>TomTom Rider Lietošanas pamācība</p> <p></p>	<p>TomTom Rider Lietošanas pamācība</p> <p>Detalizēta lietošanas pamācība TomTom Rider GPS navigācijas ierīcei, kas aptver uzstādīšanu, galvenās funkcijas, iestatījumus, pakalpojumus un problēmu novēršanu.</p>
--	---

<div data-bbox="213 197 288 232" data-label="Text"><p>TomTom GPS User Manual</p></div> <div data-bbox="280 232 288 239" data-label="Text"><p>12</p></div> <div data-bbox="201 329 288 347" data-label="Image"></div>	<div data-bbox="341 156 820 185" data-label="Section-Header"><p>TomTom GPS Sports Watch User Manual</p></div> <div data-bbox="341 197 1441 306" data-label="Text"><p>Comprehensive user manual for TomTom GPS Sports Watches, including models like Runner 3, Spark 3, and Adventurer. Learn about setup, activities, tracking, music, settings, and troubleshooting for optimal fitness tracking.</p></div>
<div data-bbox="151 519 293 557" data-label="Text"><p>TOMTOM GO NAVIGATOR 2nd GENERATION USER MANUAL</p></div> <div data-bbox="201 640 288 658" data-label="Image"></div>	<div data-bbox="341 492 944 521" data-label="Section-Header"><p>TomTom GO Navigator 2nd Generation User Manual</p></div> <div data-bbox="341 533 1441 600" data-label="Text"><p>User manual for the TomTom GO Navigator 2nd Generation, covering device setup, smartphone connectivity, map and software updates, routing, sound settings, and safety information.</p></div>
<div data-bbox="118 730 309 860" data-label="Image"></div>	<div data-bbox="341 725 1216 754" data-label="Section-Header"><p>TomTom GO Classic GPS Navigation System - Installation and Safety Guide</p></div> <div data-bbox="341 766 1406 875" data-label="Text"><p>Comprehensive guide for installing and safely using the TomTom GO Classic GPS navigation system. Includes setup instructions, safety warnings, battery information, and technical specifications.</p></div>