

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Pentax](#) /
- › [Pentax K2000 Digital SLR Camera User Manual](#)

Pentax K2000

Pentax K2000 Digital SLR Camera User Manual

Model: K2000

1. PRODUCT OVERVIEW

The Pentax K2000 is a digital single-lens reflex (SLR) camera designed for users seeking high-quality photography with straightforward operation. It features a 10.2-megapixel CCD sensor and a compact design. The camera incorporates Pentax-developed Shake Reduction technology, compatible with a wide range of Pentax lenses, to help achieve sharp images. Its Auto Picture Mode simplifies settings by automatically selecting appropriate modes like Portrait, Landscape, Macro, Action, and Night Portrait.



Figure 1.1: Front view of the Pentax K2000 Digital SLR camera body. This image shows the camera's compact form factor and lens mount area.

Key Features:

- 10.2-megapixel resolution for detailed images.
- 2.7-inch wide-view LCD panel for clear image review and menu navigation.
- Integrated Shake Reduction Technology for improved image sharpness.
- Dedicated, reprogrammable Help button for on-screen information.
- Supports SD/SDHC memory cards for image storage.
- Automatic Picture Mode for simplified shooting.

2. INITIAL SETUP

Before using your Pentax K2000 camera, follow these steps to prepare it for operation.

2.1. Inserting Batteries

The Pentax K2000 uses Lithium Ion batteries. Ensure you use fresh or fully charged batteries for optimal performance. Batteries are not included with the camera body.

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert the batteries according to the polarity indicators (+/-) inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

2.2. Inserting a Memory Card

The camera supports SD and SDHC memory cards. A memory card is required to store images.

1. Locate the memory card slot, typically on the side or bottom of the camera.
2. Open the memory card slot cover.
3. Insert the SD/SDHC card with the label facing the correct direction (refer to the diagram near the slot if available) until it clicks into place.
4. Close the memory card slot cover securely.

Note: Always format a new memory card in the camera before first use to ensure proper operation. Refer to the "Formatting Memory Cards" section in the camera's on-screen menu or a more detailed manual for instructions.

2.3. Attaching a Lens (If applicable)

The Pentax K2000 uses a Pentax KAF mount. Ensure the camera is off before attaching or detaching a lens.

1. Remove the body cap from the camera and the rear cap from the lens.
2. Align the red or white index mark on the lens barrel with the corresponding mark on the camera's lens mount.
3. Insert the lens into the camera mount and turn it clockwise until it locks into place with a click.

3. OPERATING THE CAMERA

This section covers basic camera operations for capturing and reviewing images.

3.1. Powering On/Off

Locate the power switch, usually around the shutter button. Turn it to the "ON" position to power on the camera and to "OFF" to power it down.

3.2. Selecting a Shooting Mode

The mode dial on the top of the camera allows you to select various shooting modes. For beginners, the Auto Picture Mode is recommended.

- **Auto Picture Mode:** The camera automatically selects the best scene mode (e.g., Portrait, Landscape, Macro, Action, Night Portrait).
- **Program (P):** The camera sets aperture and shutter speed, but you can adjust other settings.
- **Shutter Priority (Tv):** You set the shutter speed, and the camera selects the aperture.
- **Aperture Priority (Av):** You set the aperture, and the camera selects the shutter speed.
- **Manual (M):** You control both aperture and shutter speed.
- **Scene Modes:** Specific modes for various situations like Landscape, Portrait, etc.

3.3. Focusing and Taking a Picture

1. Look through the viewfinder or use the LCD screen to compose your shot.
2. Press the shutter button halfway down to activate autofocus. The camera will beep and/or display a focus confirmation indicator when focus is achieved.
3. Press the shutter button fully down to take the picture.

The camera features Contrast Detection autofocus technology and Automatic AF (AF-A) focus mode.

3.4. Reviewing Images

Press the Playback button (usually marked with a triangle icon) to view your captured images on the 2.7-inch LCD screen. Use the directional pad to navigate through images.

4. MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your Pentax K2000 camera.

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water. Avoid using solvents or abrasive cleaners.
- **Cleaning the Lens:** Use a lens brush or blower to remove dust. For smudges, use a specialized lens cleaning solution and a microfiber lens cloth. Never touch the lens surface with your fingers.
- **Cleaning the Sensor:** Sensor cleaning should be performed with extreme caution or by a professional. Refer to a detailed service manual or contact Pentax support for guidance.
- **Storage:** When not in use, store the camera in a dry, cool place, away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Water Resistance:** The Pentax K2000 is **not water resistant**. Avoid exposing the camera to rain, splashes, or high humidity.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your camera.

5.1. Camera Does Not Power On

- Ensure batteries are inserted correctly with the correct polarity.
- Check if the batteries are fully charged or replace them with new ones.

- Verify the power switch is in the "ON" position.

5.2. Cannot Take Pictures

- Check if a memory card is inserted and has sufficient free space.
- Ensure the lens is properly attached and the lens cap is removed.
- If the camera displays an error message, consult the camera's on-screen help or a more detailed manual for specific error codes.
- Verify the camera is in a valid shooting mode.

5.3. Images Are Blurry

- Ensure the camera has achieved focus before fully pressing the shutter button.
- Check the lens for smudges or dirt and clean if necessary.
- In low light conditions, use a tripod or increase ISO sensitivity to avoid camera shake. The Shake Reduction Technology helps, but has limits.
- Verify that the correct shooting mode and settings are selected for the scene.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Pentax K-m (K2000)
Brand	Pentax
Photo Sensor Resolution	10.2 MP
Photo Sensor Technology	CCD
Image Stabilization	Digital (Shake Reduction Technology)
Lens Mount	Pentax KAF
Supported File Formats	JPEG, RAW
Display Type	LCD
Screen Size	2.7 Inches
Flash Memory Type	SD, SDHC (Max 32 GB)
Battery Type	Lithium Ion (Batteries not included)
Connectivity Technology	USB
Autofocus	Yes (Contrast Detection, Automatic AF)
Exposure Control Type	Automatic
White Balance Settings	Auto
Shooting Modes	Landscape, Portrait, Macro, Action, Night Portrait (via Auto Picture Mode)

Feature	Specification
Water Resistance Level	Not Water Resistant

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Pentax website. Warranty terms and conditions may vary by region.

For technical support, service, or inquiries about replacement parts, please contact Pentax customer service. Contact information can typically be found on the official Pentax website or in the product packaging.